

Owner's Manual WWW.carobook.com

2022 e-tron



Foreword

Thank you for choosing an Audi - we value your trust in us.

Your new Audi will allow you to experience the best in groundbreaking technology and premium quality equipment that a vehicle has to offer. Audi recommends that you read your Owner's Manual thoroughly so that you quickly become acquainted with your Audi and make use of all of its features.

In addition to explaining how the different features work, there are many useful tips and information concerning your safety, how to care for your vehicle, and how to maintain your vehicle's value. Audi also gives you useful tips and information on how to drive your vehicle more efficiently and in an environmentally-friendly manner.

Audi hopes you enjoy driving your vehicle and wishes you safe and pleasant motoring.



WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including phthalates and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Table of contents

About this Owner's Manual	5	Vision	54 56
Summary	6	Digital compass	59
Quick access	6		
Cockpit	6	Sitting correctly and safely	61
Indicator lights overview	7	Correct passenger seating position	61
		Front seats	61
Display and operation	12	Steering wheel	64
Instrument cluster	12	Head restraints	65
Instrument cluster overview	12	Safety belts	66
Operating	12	Memory function	69
Adjusting the display	13	Airbag system	70
Power meter	14	Child safety seats	74
Odometer	14		
Outside temperature display	14	Storage and convenience	80
Vehicle functions	14	Power sources	80
		Cup holders	80
Touch displays	16	Storage and compartments	81
General touch display operation	16	Luggage compartment	81
Multi Media Interface	18	Roof rack	85
Head-up display	25	Warm and cold	86
Description	25	Climate control system	86
- 3 Complete Charles de la complete		Steering wheel heating	90
Voice recognition system . W.W.W.	C26	O Auxiliary climate control	90
General information	26	Fluids in the A/C system	91
Description	26		
External voice operation	27	Driving	93
		Starting the vehicle	93
Global functions	29	When driving	94
Additional function buttons	29	Drive system	97
		Brakes	100
Starting and driving	30	Electromechanical parking brake	101
Personalization	30	Special driving situations	103
Users	30		
		Driving dynamic	106
Opening and closing	33	Audi drive select	106
Central locking	33	Suspension	107
Keys	37	Steering	108
Luggage compartment lid	40	All wheel drive (quattro)	109
Child safety lock	44	Electronic Stabilization Control	109
Power windows	44		
Panoramic glass roof	46		
Garage door opener	46		
Lights and Vision	50		
Exterior lighting	50		
Interior lighting	53		

High-voltage system	112	Messages	191
General information	112	Troubleshooting	192
Charging the high-voltage battery	113		
Charging equipment	122	Audi connect	193
		General information	193
Trailer towing	131	Audi connect Infotainment	194
Driving with a trailer	131	Using a Wi-Fi hotspot	194
Trailer hitch	133	Audi connect Infotainment services	194
		Functions on demand	195
Assist systems	135	Audi connect vehicle control services	196
Assist systems	135	Settings	196
General information	135	Troubleshooting	197
Surrounding area detection	136		
Switching assist systems on and off	139	Emergency call Overview	198 198
Driving information	140	Emergency call	198
Speed warning system	140	Online roadside assistance	199
Camera-based traffic sign recognition	140		
Traffic light information	142	Navigation	201
Lap timer	143	Opening navigation	201
Night vision assist	144	myAudi navigation	201
Integrated Toll Module	146	Entering a destination	202
milegiarea ignate i i i i i i i i i i i i i i i i i i i		Stopping route guidance	205
Driver assistance	148	Мар	206
Cruise control system			207
Efficiency assist	149	Alternative routes	208
Adaptive cruise assist	151	Additional functions	208
Distance warning	161	Satellite map	209
Lane departure warning	162	Electric range	210
Audi pre sense	164	Map update	210
Side assist	168	Traffic incidents	211
Exit warning	169	Settings	212
Intersection assistant	170	Security	212
Emergency assist	171	Radio	214
Linergency assist	12.1	General information	214
Parking and maneuvering	173	Radio functions	215
Introduction	173	Online radio	218
Parking aid plus	173	Options and settings	219
	175		220
Rearview camera and peripheral cameras. Rear cross-traffic assist	180	Troubleshooting	220
Real Cross-traffic assist	160	Madia	221
Infotolous out avetous	100	Media	
Infotainment system	182	General information	221
Telephone	182	Bluetooth audio player	221
Introduction	182	Online media	222
Setup	182	Amazon Alexa	222
Using the Audi phone box	184	Multimedia connections	222
Using the telephone	186	Playing media	224
Settings	190	Options and settings	227

Table of contents

Supported media and file formats	228	Customer information	290
Troubleshooting	229	Data privacy	290
		Privacy notice	290
Audi smartphone interface	230	Image recording	290
Setup	230	Data memories	290
Troubleshooting	231	Transmitted information	291
Additional settings	233	Accessories and technical	
System settings	233	changes	294
Software update	234	Warranty	294
Connected devices	235	Audi Literature Shop	294
Legal information	236	Driving in other countries	294
		Maintenance, repairs, and technical	
Maintenance and Care	238	modifications	294
Checking and Filling	238	Accessories and parts	296
Front compartment	238	Reporting Safety Defects	296
Cooling system	240		
Brake fluid	242	Technical data	298
Electrical system	242	Identification data	298
Battery	243	Vehicle data	298
Windshield washer system	245		
Service interval display	246	Other information	300
		Online Car Care	300
Wheels	247	Brands and licenses	300
Wheels and Tires	247	Declaration of compliance for	
Tire pressure monitoring system	265	telecommunications equipment and	
Tire pressure monitoring system	266	electronic systems	300
Care and cleaning	270	Index	302
General information	270		
Car washes	270		
Cleaning and care information	271		
Taking your vehicle out of service	275		
Do It Yourself	276		
Emergency assistance	276		
General information	276		
Equipment	276		
Tire mobility kit	276		
Replacing wheels	278		
Collapsible spare tire	282		
Jump starting	283		
Towing	283		
Fuses and bulbs	286		
Fuses	286		
Bulbs	289		

In this manual, Audi provides important information, tips, suggestions, and warnings for using your vehicle. "Audi" refers to AUDI AG, the respective importer in a country, as well as joint ventures.

It has always been Audi's policy to continuously improve its products. Audi reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. This owner's manual is based on the current data available when it was printed. Text, illustrations, and specifications in this owner's manual are based on the most current information available at the time of printing, and shall not constitute a basis for liability claims.

KEEP THIS GUIDE

Keep this manual and any other applicable documents in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

This owner's manual describes the **equipment** of the **range** for all model versions of this vehicle at the time of printing. Individual equipment options described may only be available at a later date or may only be offered in certain countries.

Some sections in this manual do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example "Applies to: vehicles with speed warning system". Optional or vehicle-specific equipment is also identified with an asterisk "*".

The **illustrations** in this manual are a guide. Some of the details in your vehicle may differ from the illustration.

All directions, such as "left", "right", "front" and "rear", are based on the vehicle's direction of travel.

- Optional equipment or vehicle-specific equipment
- The section continues on the next page.

⇒ ▲ Cross reference to a "WARNING" within a section. If a page number is indicated, the WARNING is located outside of the section.

Λ

WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.



Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.



For the sake of the environment

Text with this symbol contains information on protecting the environment.



Tips

Text with this symbol contains additional useful information.

Quick access

Cockpit

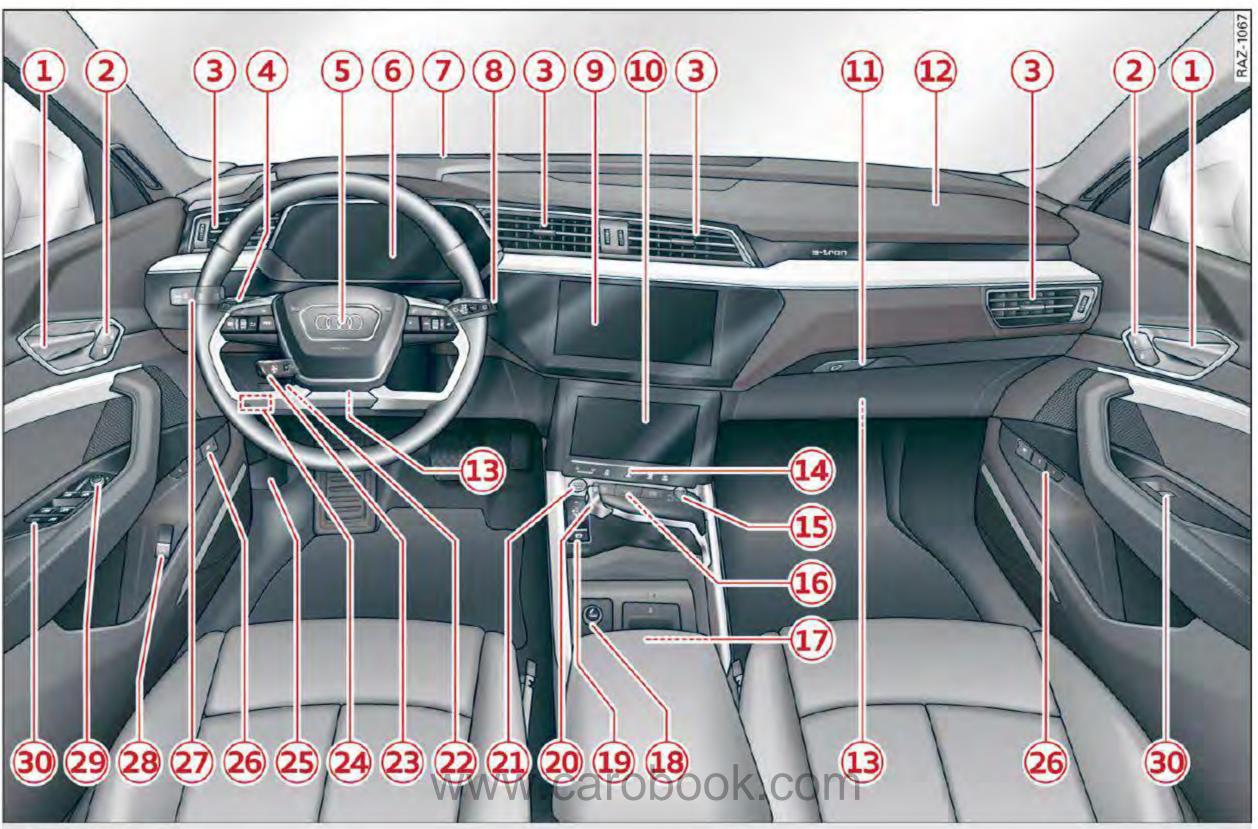


Fig. 1 Cockpit

1	Door handle		12	Front passenger's airbag	70
2	Central locking switch	35	13	Knee airbag	70
3	Vent		(14)	Depending on equipment, buttons	
4	Lever for:			for:	
	- Turn signals and high beams	51		– drive select	106
	– High beam assistant	51		 Electronic Stabilization Control 	
	- Lane departure warning	162		(ESC)	110
	– Lane guidance	155		– Emergency flashers	52
(5)	Multifunction steering wheel with:			- Defrosting	86
	– Horn 🖝			 Rear window defogger 	86
	– Driver's airbag	70	13	MMI On/Off button	18, 29
	– Operating buttons	12, 29	16	Depending on equipment, buttons	
	– Shift paddles	98		for:	
6	Instrument cluster	12		– Parking systems	173
_	Head-up display	25		 Driver assistance systems 	139
8		56	17	Depending on equipment:	
		18		- Starting the vehicle when there is	
9	Upper display			a malfunction	94
10		18	18	– Cup holder	80
(11)	Lockable glove compartment			– Audi music interface	2231



Tips

Some the equipment listed here is only installed in certain models or is available as an option.

Indicator lights overview

Description

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions. Some warning and indicator lights turn on when you switch the ignition on and must turn off when the drive system is switched on or while driving.

With some indicator lights, messages may appear and warning signals may sound. The indicator lights and messages may be covered by other displays. To show them again, select the second tab for messages with the multifunction steering wheel ⇒ page 12.

Some indicator lights in the display can display in several colors.

⚠ Central indicator light

If the or indicator light turns on, check the message in the instrument cluster.

Overview

The following indicator lights may be available, depending on the vehicle equipment:

Red indicator lights

Red indicato	or lights
<u> </u>	Central indicator light ⇒ page 7, Instrument cluster ⇒ page 12
4	Safety belt ⇒ page 68
-	Engine start system ⇒ page 94
0	Transmission ⇒ page 97
	Drive system

-la	⇒page 99,	
	Electrical system	
	⇒ page 242	

Brake system

⇒ page 103

⇒page 101,
<i>⇒ page 242,</i>
Electromechanical parking brake

	Brake system
	⇒ page 101,
(D)	⇒ page 242,
	Electromechanical parking brake
	⇒page 103

DADV	Electromechanical parking brake
PARK	⇒page 102

(6)	Electromechanical	parking	brake
(P)	⇒page 102		

	Air suspension		
C-10	⇒page 107		

0	Steering	
CO:	⇒page 108	

⊕-	Steering	
	⇒page 108	

Charging system ⇒ page 121	Yellow
Night vision assist	
Night vision assist	~
Adaptive cruise assist ⇒ page 153, Safe start monitor	- <u>`</u>
⇒ page 159, Driver intervention request ⇒ page 160	≣(
Adaptive cruise assist ⇒ page 153, ⇒ page 155	
Steering intervention request (Adaptive cruise assist)	
⇒ page 155 Distance warning ⇒ page 161	4
Lane departure warning ⇒ page 162	rohom
Pre sense ⇒ page 165, ⇒ page 165, Intersection assist	?~
Online system update	
Hood ⇒ page 239	
Cooling system ⇒ page 240,	6
⇒ page 240, ⇒ page 241, ⇒ page 283	
Electrical system	(E
⇒ page 242	
⇒ page 242 Loose wheel warning ⇒ page 262, ⇒ page 262	
	<pre></pre>

Yellow indica	ator lights
<u> </u>	Central indicator light ⇒ page 7
Sa.	Central locking ⇒ page 35
	Battery in remote control key ⇒ page 39
	Bulb failure indicator ⇒ page 53
≣C)	Adaptive light ⇒ page 53
	Headlight range control system ⇒ page 53
	Light/rain sensor ⇒ page 53, ⇒ page 59
D!	Windshield wipers ⇒ page 59
2	Safety systems ⇒ page 70
O Comité De	Engine start system page 94
?	Convenience key ⇒ page 94
0	Transmission ⇒ page 97
	Drive system ⇒ page 99 Cooling system ⇒ page 240
9	Drive system ⇒ page 99
	Vehicle sound ⇒ page 99
(D)	Electromechanical parking brake ⇒ page 103
· •	Suspension control ⇒ page 107
4	Air suspension ⇒ page 107
@!	Steering ⇒ page 108

(Ju	Rear cross-traffic assist ⇒ page 180
sos	Emergency call function ⇒ page 199
Ė	Electrical system ⇒ page 242
	Washer fluid level ⇒ page 246
***	Loose wheel warning ⇒ page 262
<u>(L)</u>	Tire pressure ⇒ page 265, ⇒ page 266, ⇒ page 268, ⇒ page 268, ⇒ page 269
TPMS	Tire pressure ⇒ page 266, ⇒ page 269

Other indicator lights

- inc. maio	ito, tigints	
	Low beam headlights ⇒ page 50	
₹0 0 €	Parking lights ⇒ page 50, low beam headlights ⇒ page 50	
4	Turn signals ⇒ page 51, ⇒ page 52	
\Rightarrow	Turn signals ⇒ page 51, ⇒ page 52	
Ä	Rear safety belt ⇒ page 68	
(A)	Hold assist ⇒ page 102	
· Q	Hill hold assist ⇒ page 105	
\$ ¹ \$	Trailer turn signals ⇒ page 131	
CRUISE	Cruise control system ⇒ page 148	

	Cruise control system ⇒ page 148	(7)	Child safety lock ⇒ page 44
**	Efficiency assist ⇒ page 150	a	Child safety lock ⇒ page 44
50	Efficiency assist ⇒ page 150	≣O AUTO	High beam assistant ⇒ page 51,
	Efficiency assist ⇒ page 150	Å	⇒ page 53 Rear safety belt
	Efficiency assist ⇒ page 150	P))	⇒ page 68 Convenience key
=	Efficiency assist ⇒ page 150	Total Control	⇒ page 94 Brake system
%	Efficiency assist ⇒ page 150		⇒ page 101 Electromechanical parking brake
	Efficiency assist	PARK BRAKE	⇒ page 103
	⇒ page 150, Adaptive cruise assist	(P)	Electromechanical parking brake ⇒ page 103
	⇒ page 153 Adaptive cruise assist	· Q	Electromechanical parking brake ⇒ page 103
Â	⇒ page 153 Adaptive cruise assist	.00	Hill hold assist ⇒ page 105
	⇒ page 153, WWW.Caro Ready to drive (Adaptive cruise assist)	4	Air suspension ⇒ page 107
	⇒page 159		High-voltage battery range ⇒ page 121
	Traffic jam assist ⇒ page 153, ⇒ page 155	MPH	Speed warning system ⇒ page 140
<u>a</u>	Adaptive cruise assist ⇒ page 153	(km/h)	Speed warning system ⇒ page 140
* 4	Adaptive cruise assist ⇒ page 153, ⇒ page 155		Camera-based traffic sign recognition ⇒ page 141
/	Lane departure warning ⇒ page 162	7/1	Night vision assist ⇒ page 146
E	High beam headlights ⇒ page 51,	CRUISE	Cruise control system ⇒ page 149
	⇒ page 51 High beam assistant	(5)	Cruise control system ⇒ page 149
AUTO	⇒ page 51		Efficiency assist
	Door lock ⇒ page 35		⇒ page 150

কি	Efficiency assist ⇒ page 150, ⇒ page 156, Adaptive cruise assist ⇒ page 160
> •	Adaptive cruise assist ⇒ page 153, ⇒ page 155
	Adaptive cruise assist ⇒ page 157
ع <u>!</u> چ	Distance warning ⇒ page 162
/	Lane departure warning ⇒ page 162
/ a \	Lane departure warning ⇒ page 164
PV.	Side assist, exit warning ⇒ page 169
78	Intersection assist ⇒ page 171
SOS	Emergency assist ⇒ page 172 www.carobook.com
P∥∆	Parking systems ⇒ page 175
	Rear cross-traffic assist ⇒ page 180

Instrument cluster

Instrument cluster overview



Fig. 2 Instrument cluster overview (Audi virtual cockpit)

Depending on the vehicle equipment, the following items may appear in the instrument cluster:

- Left dial
 - 14
 - High-voltage battery charge level
- 12
- Central area
- Status line (one or two lines)
- (5) Right dial
 - Convenience display
- Right additional display with speedometer
- Left additional display with:
 - Selector lever position 95
 - Audi drive select mode 106

WARNING

If there is a serious system malfunction, the display may turn off. The 🛕 indicator light may also turn on. Stop the vehicle safely. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Tips

- You can select the units used for temperature, speed, and other measurements in the Infotainment system ⇒ page 233.

- Speeds are displayed in mph (miles per hour) or km/h (kilometers per hour).
- Certain instrument cluster content can also be displayed in the head-up display* ⇒ page 25.

Operating

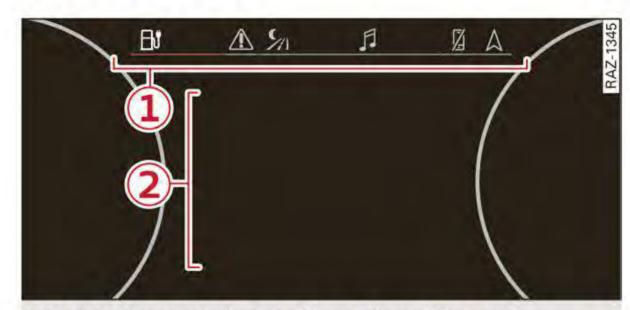


Fig. 3 Instrument cluster: driver information system

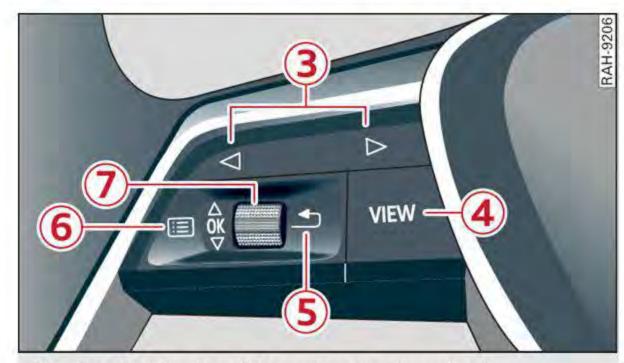


Fig. 4 Left side of multifunction steering wheel

Information is organized within various tabs 1 in the instrument cluster. The tab contents are displayed in the central area 2.

Requirement: the ignition must be switched on.

Selecting a tab

▶ Press the
✓/ > button (3) repeatedly until the desired tab is selected.

Returning to functions at higher levels

▶ Press the △ button (5).

Opening and closing the menu

▶ Press the 🗏 button (6).

Selecting and confirming a function

Requirement: a menu or list must be displayed.

- ➤ To select a function, turn the left thumbwheel

 7 to the desired function.
- ► To confirm a selection, press the left thumb-wheel 7.

Switching the view

► Press the VIEW button 4. WWW.Carok

The following tabs may be available, depending on vehicle equipment:

First tab	Vehicle functions ⇒ page 14
Second tab	Driver messages (this is only dis- played if at least one indicator light/message is being displayed)
Third tab	Night vision assist (this is only displayed if the night vision assist has been activated) ⇒ page 144
Fourth tab	Radio ⇒ page 214
	Media ⇒ page 224
Fifth tab	Telephone ⇒ page 186
Sixth tab	Navigation ⇒ page 201

Adjusting the display

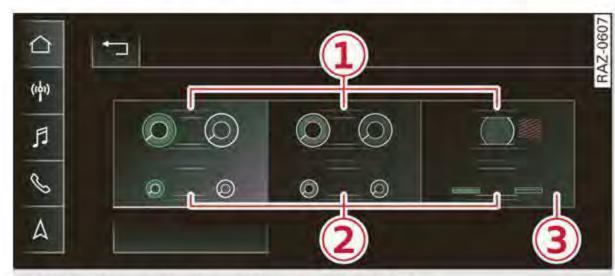


Fig. 5 Upper display: adjusting the display

Switching the view

▶ Press the VIEW button to switch between the default view (1) and the enhanced view (2).

Adjusting the layout

Depending on the vehicle equipment, various layouts may be available.

- Applies to: MMI: Select on the home screen: SETTINGS > Display & brightness > Audi virtual cockpit.
- ► To adjust the desired layout, press 3.

Adjusting the additional display

WWW.Carobook.com
Depending on the vehicle equipment, the addiable, depending
tional displays that can be selected may vary.

- ▶ Applies to: MMI: Select on the home screen: SETTINGS > Display & brightness > Audi virtual cockpit > Configure.
- ► Select the desired additional display.

Reducing the display

Depending on the vehicle equipment, you can hide the central area in the instrument cluster.

▶ Select on the instrument cluster: vehicle functions tab > \overline{\o

Power meter



Fig. 6 Instrument cluster: power meter

The power meter ① ⇒ page 12 gives feedback about the usage capacity of the drive system. The power meter needle displays the current usage capacity. A colored border indicates how much the drive system can currently be utilized. The colored border may vary depending on the selected driving program and the electric power currently available.

Depending on the vehicle equipment, the power meter displays the following driving statuses:

- 1 Drive system switched off
- 2 Vehicle recovering electrical energy
- 3 Drive system switched on
- Vehicle is being driven, drive system usage information in percentage
- Vehicle is being driven briefly with maximum power

Odometer

The trip odometer and odometer are displayed in the status bar $\textcircled{4} \Rightarrow page 12$.

The trip odometer shows the distance driven since it was last reset. It can be used to measure short distances. The odometer shows the total distance that the vehicle has been driven.

Resetting the trip odometer

► Select on the instrument cluster: vehicle functions tab > ■ button > Reset mi.



Tips

Distances are displayed in mi (miles) or km (kilometers).

Outside temperature display

The outside temperature is displayed in the status bar $\textcircled{4} \Rightarrow page 12$.

At temperatures below 41 °F (+5 °C), a snowflake symbol appears in front of the temperature display $\Rightarrow \triangle$.



WARNING

Do not assume the roads are free of ice based on the outside temperature display. Be aware that there may be ice on roads even when the outside temperature is around 41 °F (+5 °C) and that ice can increase the risk of accidents.

Vehicle functions

Overview

The trip computer is displayed in the first tab of the driver information system. Additional vehicle functions can be accessed depending on the vehicle equipment.

- ▶ Press the ■ button on the multifunction steering wheel.
- Trip computer ⇒ page 14
- Charging ⇒ page 116.
- Reduced display ⇒ page 13
- Reset trip odometer ⇒ page 14
- Lap times ⇒ page 143
- Lap statistics ⇒ page 144

On-board computer

Changing the display

► Turn the left thumbwheel on the multifunction steering wheel ⑦ ⇒ page 12, fig. 4 until the desired display is shown.

Resetting values to zero

Requirement: the **Consumption**, **Short-term memory**, or **Long-term memory** display must be selected.

- ➤ To reset the values in one of the memories to zero, press and hold the left thumbwheel on the multifunction steering wheel for one second, or
- ► Select on the instrument cluster: vehicle functions tab > button > Reset mi.

Displays in the trip computer

The following displays may be shown, depending on the vehicle equipment:

- Time and date ⇒ page 233
- Range display ⇒ page 98
- Average consumption ⇒ page 15
- Short-term memory overview
- Long-term memory overview
- Driver assistance ⇒ page 152
- Traffic sign recognition and traffic light information

Short-term memory and long-term/memory

The short-term memory collects driving information from the time the ignition is switched on until it is switched off. If you continue driving within two hours after switching the ignition off, the new values will be included when calculating the current trip information.

Unlike the short-term memory, the long-term memory is not erased automatically. You can select the time period for evaluating trip information yourself.

Average consumption

The current consumption can be shown using a bar graph. The average consumption stored in the short-term memory is also displayed. If the bar is green, your vehicle is saving energy (for example, using recuperation).



Tips

The date, time of day, and time and date format can be set in the Infotainment system

⇒ page 233.

Touch displays

General touch display operation

General information

Applies to: touch displays

The touch display is controlled through the touchscreen. Operation is very similar to operating a smartphone.

All touch displays in the vehicle can be operated with the gestures described in the following information.



Tips

Certain gestures may not be available on all touch displays or in every menu.

Pressing

Applies to: touch displays



Fig. 7 Touch display: pressing

Selecting a function or button

▶ Press the desired function or button.

Pressing and holding

Applies to: touch displays



Accessing options

For some items, you can access additional options that are not directly visible.

Press and hold an item until the associated options are displayed.

Pressing and pulling

Applies to: touch displays

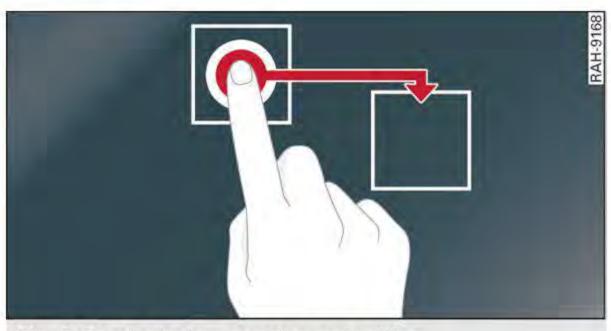


Fig. 9 Touch display: pressing and pulling

Moving an item

You can position some items at any location on the screen.

Press and hold an item, and then use your finger to pull it to the desired location.

Pinching fingers together and pulling apart

Applies to: touch displays

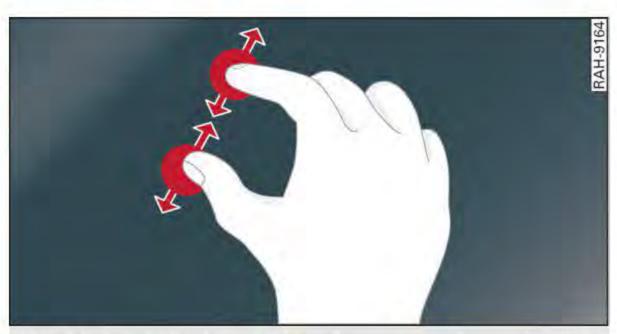


Fig. 10 Touch display: pinching fingers together and pulling them apart

Zooming in and out on an item

- ► To increase the size of an item, touch it with two fingers and pull your fingers apart.
- ► To decrease the size of an item, touch it with two fingers and pull your fingers together.

Rotating

Applies to: touch displays

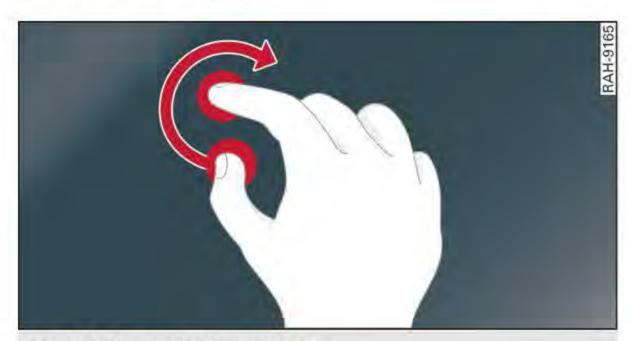


Fig. 11 Touch display: rotating

Rotating the view or perspective

► Rotate the item using two fingers.

Dragging

Applies to: touch displays

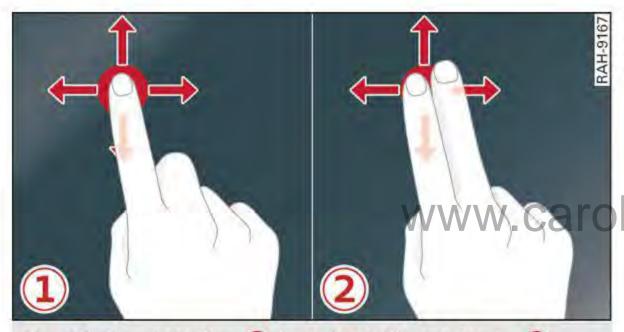


Fig. 12 Touch display: 1 dragging with one finger, 2 dragging with two fingers

Scrolling or browsing through menus/lists

- ► To scroll through menus and lists, swipe upward or downward with one finger.
- ► To browse through menus and lists, swipe to the right or left with one finger.

Tilting 3D displays

▶ Drag upward or downward with two fingers.

Dragging away from/toward the edge of the screen

Applies to: touch displays

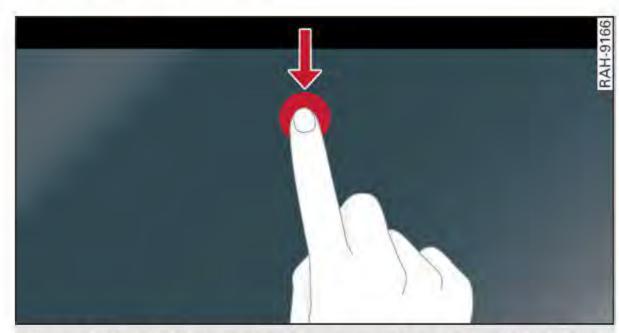


Fig. 13 Touch display: dragging away from the edge of the screen

Opening hidden menus

The symbol indicates that there is a hidden menu.

- Use your finger to drag inward from the upper or lower edge of the screen, or
- ▶ Press the 🖃 button.

Closing hidden menus

Press within the menu and drag it toward the upper or lower edge of the screen.

Information about menu paths

This guide shows you at a glance the paths for opening a desired menu and its settings and functions.

Example of a path

► Applies to: MMI: Select on the home screen: SETTINGS > General > Date & time.

Following the path

- First, determine in which display the path should be entered. In this example, it is the MMI display.
- ▶ If the SETTINGS button is not displayed, use your finger to swipe to the left or right until it appears.
- ▶ Press the SETTINGS button.

Touch displays

- If the General button is not displayed, swipe toward the left or right with one finger until it appears.
- ▶ Press the General button.
- ▶ If the Date & time button is not displayed, swipe upward or downward with one finger until it appears.
- ▶ Press the Date & time button.



Tips

If a menu or symbol is in parentheses in the path, for example, (**General**) or (②), then it is an optional menu item that does not need to be used in every system.

Settings

► Applies to MMI: Select on the home screen: SETTINGS > Display & brightness > MMI.

Possible settings:

- Brightness
- Touchscreen feedback

(i)

Tips

Certain functions are not available while driving.

Switching on or off

Switching the MMI on or off

- ► To switch the MMI off, press and hold the On/Off knob ⇒ page 29, fig. 20 until the upper display and all Infotainment system functions are switched off.
- ► To switch the MMI on, press the On/Off knob.

Restarting the MMI

Press and hold the On/Off knob for at least 10 seconds.

Switching displays on or off

- ► To switch the upper display off, press on the lower display.
- ► To switch the upper display on, touch the upper display or press on the lower display.
- ► To switch both displays on or off, press and

Multi Media Interface WWW.Carobio Conthelower display.

Traffic safety information

Audi recommends only using certain Infotainment system functions while the vehicle is stationary, such as entering a destination or pairing a mobile device. Always be prepared to stop operating the Infotainment system in the interest of your safety and the safety of other road users.



WARNING

- Only use the Infotainment system when road, traffic, weather, and visibility conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- This also applies to operating your mobile device via the MMI. Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident.

Introduction

You can display and operate Infotainment system and vehicle functions using both of the Multi Media Interface (MMI) touch displays.

Configuration wizard

After starting for the first time, the configuration wizard helps you to set up the vehicle, for example to set the desired system language and connect a telephone.

- ► Follow the instructions in the display.
- Applies to: MMI: To access the configuration wizard at a later time, select on the home screen: HELP > Configuration wizard.

Tool tips

You can have tool tips displayed if necessary. They introduce various MMI functions to you.

► Applies to: MMI: To open the tool tips, select on the home screen: **HELP** > **Tool tips** > **Basic information** or **Expert information**. ► Follow the instructions in the display.

Menus and symbols



Fig. 14 MMI: upper/lower display

	Label	Description
1	Overview screen	Displays selected information tiles and provides quick access to certain functions ⇒ page 20
2	Quick access bar	Return to the home screen or the overview page, open menus quickly ⇒ page 20
3	Display area	Select a menu, apply settings, display content ⇒ page 20
4	Favorites	Use or manage favorites ⇒ page 20
S-7	Status bar	Displays existing notifications (6) ⇒ page 21, status display (7) ⇒ page 21, time
8	Function bar	Activate functions or access attached content ⇒ page 22
9	Shortcuts	Use shortcuts ⇒ page 22
10	Climate control settings	Adjust the climate control system settings ⇒ page 86

Description of common symbols

You can operate the default functions using the symbols that follow. The symbols may be found in any menu, depending on the context.

Symbol	Description	
•	Go back one level	
×	Close the menu	
P	Search for content	
(i)	Open explanations for a menu	

Symbol	Description	
0	Open settings for the selected menu	
	Open the submenu	
2 11€	Adjust the settings	
☆/★	Set as favorite	
Switch functions on or off		
@/@	Switch functions on or off	
O / ©	Switch functions on or off	
444	Open additional actions	
>	Open additional information for the selected menu	

Overview screen

The overview screen is the first menu page in the MMI. Information about certain vehicle functions such as media, time, and phone is displayed in tiles. The available information tiles can be rearranged on the overview screen or replaced with others. Depending on the system context, you may be able to operate certain functions directly, such as muting the sound.

WWW.Car

Switching between the overview screen and the home screen

Press repeatedly until the desired view appears.

Configuring the overview screen

- Press and hold an information tile on the overview screen.
- To change the position of an information tile, press and hold it and then slide it to the desired position.
- ➤ To replace an information tile, press A and select the desired information tile.
- ► Press **Done** to complete the configuration.

Quick access

With quick access, you can return to the home screen and quickly switch between four menus that can be configured according to your preferences.

Returning to the home screen or opening a menu quickly

▶ Press ☐ or one of the four buttons.

Configuring quick access

- Press and hold a button on the home screen display area or in the quick access bar.
- ► To move a button to the quick access bar, pull it from the display area to the quick access bar.
- ➤ To adjust the placement of the buttons in the quick access bar, pull them to the desired position in the bar.
- ► Press **Done** to complete the configuration.



Tips

The position of \bigcirc cannot be adjusted.

Display area

You can freely change the location of the buttons on the home screen display area.

Configuring the display area

- Press and hold a button on the home screen display area.
- ➤ To adjust the placement of the buttons, pull them to the desired locations.
- ▶ Press **Done** to complete the configuration.

Switching between menu pages

If a menu contains multiple menu pages, is displayed in the display area. The white bar shows the location of the current menu page.

► To switch between menu pages, swipe your finger to the right or left.

Favorites

By creating favorites, you can have quick access to various items, such as radio stations, frequently-used contacts, or vehicle settings. In the **FA-VORITES** menu, the stored favorites are sorted by topic into information tiles.

Adding a favorite

A \(\frac{1}{2}\) button indicates if you can add a favorite, such as a selected radio station. Depending on the context, you may also be able to add items

without the \(\pri \) button to the favorites, such as entries in a list.

- ▶ Press ☆, or
- > Press and hold an item in a list.
- Press Store as favorite. The selected item will be added as a favorite.

Using favorites

- Applies to: MMI: Select on the home screen: FA-VORITES. The stored favorites will be displayed.
- ► To access a stored favorite, press that favorite.

Stored favorites can only be deleted or configured in the corresponding menu (such as **RADIO**).

Arranging information tiles

- Applies to: MMI: Select on the home screen: FA-VORITES.
- ▶ Press and hold the desired information tile.
- ▶ Pull the information tile into the desired position.
- ▶ Press **Done** to confirm the configuration.

Description A mobile device is connected. The bar indicates the signal strength of the cell phone connection. There is no data connection. (4) An error occurred with the mobile device (5) connection to the MMI. A user is selected. If a question mark appears in the symbol 3, the guest user is ac-6 tive. A Bluetooth device is connected. Bluetooth is switched on, but no Bluetooth 8 device is connected.

- Audio playback was interrupted.
- The audio source is muted.
- Privacy settings are enabled. The additional symbol indicates which privacy settings are currently activated \Rightarrow page 292.
 - The Integrated Toll Module is switched on.
- The numbers 1 3+ indicate how many passengers are selected in the MMI.

Status display WWW.Caro

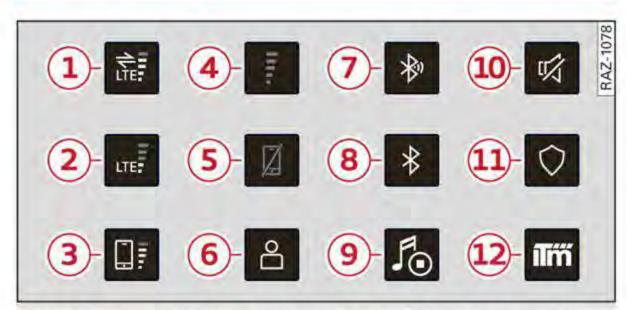


Fig. 15 Upper display: common symbols in the status bar

The symbols in the status bar show you information at a glance, such as if a mobile device is connected or if there is a data connection. The most common symbols are listed in the table.

	Description
1	There is a data connection. The bar indicates the signal strength of the data connection. Data is being transmitted now.
2	There is a data connection. The bar indicates the signal strength of the data connection. No data is being transmitted now.

Notification center



Fig. 16 Upper display: notification center

Notifications can be displayed in the upper display. After a specified time, they will be hidden and a corresponding symbol will appear in the status bar $\textcircled{6} \Rightarrow page 19$, fig. 14. In the notification center, you can view these notifications $\textcircled{2} \Rightarrow fig. 16$ and apply quick settings 1.

Using the notification center

- ▶ To open the notification center, pull the status bar downward, or
- ▶ Press the 🖃 button on the status bar.
- ► To apply quick settings, press the respective symbol ①.

Touch displays

- ► To obtain additional information about a notification, press it.
- ► To delete a notification, pull it toward the right edge of the screen.
- ▶ If there are more than four notifications in the notification center, the older notifications will be hidden. To display the older notifications, drag your finger upward on the screen.

Setting which content is displayed

You can set whether some notifications should be displayed.

- ► To set the displayed content, press , or
- ➤ Applies to MMI: Select on the home screen: SETTINGS > Notifications.
- Select and confirm which notifications should be displayed.

Applying quick settings

Depending on vehicle equipment, the following quick settings may be available in area 1:

Symbol	Description
戊	Apply sound settings
0	Open menu settings
(jú. ≡	Manage connected devices
å	Manage users
3:50 PM 4/9/2017	Set date and time
= ।	Set displayed content in the noti- fication center

Function bar

Depending on the vehicle equipment, you can operate various functions in the function bar.

Symbol	Description
Đ.	Switch hill descent assist on or off
\bigcirc	Open the garage door opener function
\$	Open the charging target

Symbol	Description
OFF	Press : shows settings for the head-up display
	Press and hold: switches the head-up display on or off
[0]	Press : switches the upper display on or off
	Press and hold: switches both displays on or off

Shortcuts

By creating shortcuts, you have quick access to various items, such as radio stations, frequently used contacts, or vehicle settings.

Adding shortcuts

A · · · button in the upper display indicates, for example, if a selected radio station can be added to the shortcuts. Depending on the context, you may also be able to add items from a list to the shortcuts.

Press ··· or press and hold an item in a list.

Press Save as a shortcut. The selected item will be added to the shortcuts on the lower display and displayed as a tile. A favorite is also stored ⇒ page 20.

Using shortcuts

- Press the □□□□ (8) ⇒ page 19, fig. 14 button in the function bar on the lower screen. The saved shortcuts will be displayed or hidden.
- ➤ To access the stored function, press the respective tile.

Moving or deleting shortcuts

- Press and hold a shortcut on the lower display.
- To adjust the order of the shortcuts, drag a shortcut to the desired location.
- ► To delete a shortcut, press ⊗. If the shortcut is deleted, the favorite will also be deleted.

Text input



Fig. 17 Upper/lower display: text input

In the input fields of various menus, you can enter letters, numbers and characters, for example to find an address in navigation.

On the lower section of the screen, you can enter the text with handwriting or using the on-screen keyboard. The current text input is displayed on the upper section of the screen 1. Depending on the context, word suggestions may be given a cobased on the characters that have been entered 2 and a results list may be shown 3.

Opening text input

► Tap inside the input field ①.

Switching input languages

Requirement: multiple input languages must be defined in the MMI \Rightarrow page 24.

► To switch between the defined input languages, press the button (8).

Switching the input methods

► To switch between handwriting input or the onscreen keyboard, press the button 7.

Entering text

▶ Applies to: handwriting input: To enter text, simply write in the input area using one finger
 ⑥. You can write the separate characters next to each other or one on top of the other with-

out having to move your finger over after writing a character. When you end the entry, the writing is interpreted by the system.

- ► Applies to: the on-screen keyboard: To enter text, press the buttons on the keyboard. Depending on the usage context, you may also be able to swipe over the letters ¹⁾.
- Applies to: the on-screen keyboard with an input language that uses accented characters: To enter accented characters (such as â, ç, ñ, ö), press and hold a character that has accented versions available and select the desired accented character.
- Applies to: handwriting input: To enter a space, drag a line from left to right in the input section 6.
- ► To select a location in the text input, press on the desired location in the input field. You can control the location more accurately using the slider in the display (5).
- ▶ To delete individual characters, press ☒ ④, or
- Applies to: handwriting input: Drag a line from right to left in the input section 6.
- ► To delete all characters at a specific location, press and hold (and drag up to the desired location 1). When released, the highlighted characters are deleted.

¹⁾ In certain countries.

Accepting suggested words or selecting entries from the results list

- ► To accept a suggested word ② or select an entry from the results list ③, press on it.
- ► To display more content in the results list, drag your finger upward or downward on the screen.

Setting the input language or keyboard layout

- ► Applies to MMI: Select on the home screen: SETTINGS > Language & keyboard > Keyboard.
- ➤ To change the keyboard layout for an input language, press >. For example, you can select between QWERTZ and QWERTY.

www.carobook.com

Head-up display

Description

Applies to: vehicles with head-up display

The head-up display projects certain warnings or selected information from the assist systems on the windshield. The display appears within the driver's field of vision.

Switching on and off

The \bigoplus button is located in the function bar on the lower display \Rightarrow page 19.

► To switch the head-up display on or off, press and hold the 🎡 button.

Settings in the Infotainment system

- Applies to: MMI: Select on the home screen:
 SETTINGS > Display & brightness > Head-up display, or
- ▶ Press the 🖫 button.

Possible settings:

- Display rotation
- Brightness

- www.carobook.com
- Display height: you can adjust the height of the display. Sit in the correct seating position
 ⇒ page 61 and adjust the head-up display.
- Display contents: you can set which information should be displayed. Some information and warnings cannot be hidden.



Note

To reduce the risk of scratches on the glass covering the head-up display, do not place any objects in the projection opening.



Tips

- Sunglasses with polarization filters and unfavorable lighting conditions can impair visibility of the display.
- An optimal display depends on the seat position and the height adjustment of the head-up display.
- A special windshield is needed for the headup display function.
- For information on cleaning, see ⇒ table Interior cleaning on page 272.

Voice recognition system

General information

Applies to: vehicles with voice recognition system

You can operate many functions in the vehicle easily using voice commands.

Using the voice recognition system optimally

- Speak clearly and distinctly at a normal volume. Speak louder when driving faster.
- ► Emphasize the words in the commands evenly and do not leave long pauses.
- ► To reduce background noise, close all openings, such as doors and windows. Make sure that passengers are not speaking when you are giving a voice command.
- ▶ Do not direct the vents toward the hands-free microphone, which is in the roof headliner near the front interior lights.
- Only the driver should speak to the system, because the handsfree microphone is aimed toward this seating position.

MARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use the voice recognition system in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.



There are no voice guidance* prompts when a dialog is active.

Description

Operating the voice recognition system

Applies to: vehicles with voice recognition system



Fig. 18 Upper display: voice recognition system

Requirement: the ignition and the MMI must be switched on. A system language supported by the voice recognition system must be set. There must be no phone calls in progress and the parking aid must not be active.

Operating by button &

- ▶ Briefly press the № button on the multifunction steering wheel, or depending on the context, press № in the display.
- Say the desired command after the signal tone.
- www.caro switch the voice recognition system off, ing. As the press and hold the (€ button on the multifunctions in ⇒ fig. 18.

Operating with voice commands

- ▶ Applies to: MMI: To operate the voice recognition system using voice commands, select on the home screen: SETTINGS > General > (Speech dialog system) > Activate the speech dialog system with "Hey Audi".
- Say the activation phrase Hey Audi together with the desired command.
- ► To switch the voice recognition system off, say Cancel or press and hold the & button on the multifunction steering wheel, or press ①
 ⇒ fig. 18.

Commands and assistance

In the voice recognition system menu, possible commands or help settings are displayed for the current dialog ③.

► To receive additional help for the current dialog, say or press Help ②.

► To pause voice recognition, say or press Pause

④. To reactivate voice recognition, press ④
again or briefly press the 🍕 button on the multifunction steering wheel.

Additional functions

Applies to: vehicles with voice recognition system

Command during voice output

If the function is switched on, you can simply say a new command during a prompt.

► Applies to: MMI: Select on the home screen: SETTINGS > General > Speech dialog system > Allow commands during voice output.

Online recognizer

Applies to: vehicles with online recognizer

You can activate the online recognizer for additional functions and to improve the results of voice recognition. A supported menu language must be selected. When there is an active Internet connection, the spoken command is evaluated in the vehicle and online.

- ► When you switch on the voice recognition sysf common tem for the first time, a menu for the online recognizer will open, or
- ▶ Applies to MMI: Select on the home screen: SETTINGS > General > Speech dialog system > Consent to online speech recognizer.
- ► Read the licensing agreements and accept them.

Amazon Alexa

Applies to: vehicles with Amazon Alexa Integration

You can activate Amazon Alexa to access certain functions. A reduced number of commands for Amazon Alexa are available during this.

Requirement: you must be logged in to your myAudi account in the vehicle. The online recognizer must be activated. A system language that is supported by both the voice recognition system and Amazon Alexa must be selected.

- ► Applies to: MMI: Select on the home screen: USERS > Connect to Amazon Alexa.
- ► Follow the instructions in the display.
- ► Applies to: MMI: To operate Amazon Alexa using voice commands, select on the home

- screen: SETTINGS > General > (Speech dialog system) > Activate the speech dialog system with "Hey Audi".
- ► Say the activation phrase "Alexa" together with the desired command.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section in General information on page 193.



Tips

Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

External voice operation

Applies to: vehicles with external speech dialog system

You can access and control the voice operation on a connected mobile device through your vehicle.

Switching external voice operation on or off

Requirement: the ignition and the MMI must be switched on. A cell phone must be connected to the MMI with the **Handsfree** profile \Rightarrow page 182. The mobile device being connected must have voice control that can be controlled externally. There must be no phone calls in progress and the parking aid must not be active.

- ➤ To switch on the external voice operation, press and hold the ♠ button longer on the multifunction steering wheel.
- ► To switch off the external voice operation, press and hold the & button longer on the multifunction steering wheel or press Cancel.

Using external voice operation

- ► Say the desired command after the signal tone.
- ► To reactivate voice recognition when it is paused, press the ♠ button briefly on the multifunction steering wheel or press **Resume**.



Tips

Audi simply provides access to control your cell phone with voice operation and does not

Voice recognition system

take any responsibility for the contents and commands within the external voice control.

www.carobook.com

Global functions

Additional function buttons

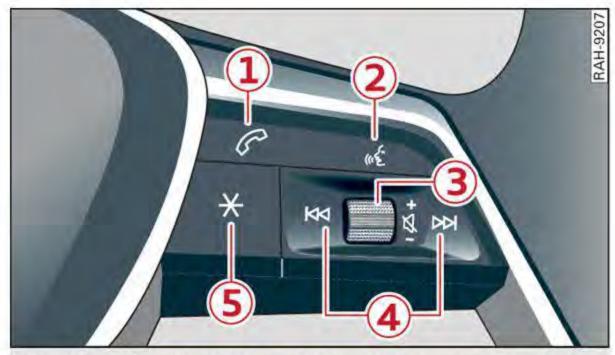


Fig. 19 Right side of the multifunction steering wheel



Fig. 20 Center console: MMI On/Off knob with joystick function

Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- ► To increase or decrease the volume, turn the right thumbwheel ③ ⇒ fig. 19 upward or downward, or turn the On/Off knob ③ ⇒ fig. 20 to the right or left.
- ► To mute, push the right thumbwheel or the On/Off knob.

Selecting the previous/next track or station

► Press the I I I I button 4 or briefly press the On/Off knob to the left/right.

Fast forward/rewind

► Press and hold the <a>| <a>|

Quick access steering wheel button

Depending on vehicle equipment, the button (5) may provide quick access to various functions.

You can program the *\ button with various functions.

- ► To bring up the function that is currently set, press the ★ button.
- ► To perform the function that is currently set, press and hold the ★ button, or:
- ▶ Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Steering wheel button assignment.
- ▶ Select and confirm the desired function.

Switching the voice recognition system on or off

Using the telephone functions

MARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

Personalization

Users

General information

Applies to: vehicles with personalized user settings

Depending on vehicle equipment and your country, your vehicle may be able to manage various users in the MMI. Each user will be assigned the settings that they last used.

Before you begin driving, you can select a user in the MMI and load personalized Infotainment and vehicle settings.

Possible users in the MMI:

- myAudi user: as a myAudi user, you can use Audi connect services that require a myAudi account. Certain settings are transferred online to your myAudi account. If you log into your myAudi account in another vehicle, you can load your settings in the other vehicle.
- Local user: as a local user, you can only store settings in the current vehicle. Your settings cannot be transferred to other vehicles. Audi connect services that can only be used with a local myAudi account will not be available.
- Guest user: as a guest user, you can store settings in the vehicle without changing the settings for other users. Audi recommends only using the guest user temporarily, because settings can be overwritten by other users.

Depending on vehicle equipment, the following options may be used to detect the active user so that the user settings can be loaded automatically before you start driving.

- Vehicle key

Requirement: the driver's door has been opened.

The detected user must be shown in the MMI. Confirm the user shown, select another user ⇒ page 30, or add another user ⇒ page 30.

Λ

WARNING

It may not be possible to load Infotainment and vehicle settings, or they may only load partially. The driver is always responsible for the Infotainment and vehicle settings in order to reduce the risk of an accident.



Tips

- Certain Infotainment and vehicle settings
 (such as mirrors, last radio stations) may be
 stored, depending on vehicle equipment.
 You can find additional information in the
 MMI. Select on the home screen: SETTINGS
 > General > Legal notes > About Audi connect.
- Applies to: myAudi users: The stored settings can only be transferred to vehicles
 that are capable of receiving the transmitted information. There may be restrictions
 that prevent this, particularly in other countries.
- Applies to: myAudi users: The settings can only be transferred and loaded when there is coverage from the applicable mobile phone service provider.
- Applies to: myAudi users with PIN protection switched on: If the MMI displays a detected user but you simply start driving or wait without entering the 4-digit PIN, then the guest user will be selected. Some settings for the detected myAudi user will be transferred to the guest user.

User management

Applies to: vehicles with user management

Opening user management

Applies to: MMI

▶ Press USERS on the home screen.

Selecting a user

Applies to: MMI

- ▶ Press on the desired user.
- ► Enter the 4-digit myAudi PIN, if necessary.

Adding myAudi users

Applies to: MMI and Audi connect

Requirement: you must have successfully registered at my.audi.com and have created a 4-digit myAudi PIN.

- ▶ Press Add user.
- Press Log in now to log in with your myAudi credentials.
- ► Follow the system instructions.

To transfer existing destinations from the MMI to your myAudi account one time, confirm the system prompts with **Yes**.

You can set a profile pictured for your myAudi user at my.audi.com.

Adding a local user

Applies to: MMI

- ► Press Add user.
- ► Press Initiate setup.
- ► Press Local user.
- ► Follow the system instructions.

Editing users

Applies to: MMI

Requirement: the user must be selected and that user's settings must be loaded.

▶ Press on the user.

Depending on the user type, available options may include the following.

PIN protection: when this function is switched on, the 4-digit myAudi PIN must be entered before any settings for this user can be loaded.

Remove the user from the vehicle: the user will only be deleted in the vehicle from the list in the MMI.

Change name: you can change the name of the local user.

Removing users

Applies to: MMI

► Select on the home screen: Users > A=> one or more entries > Delete. The user will only be deleted from the list in the MMI. The authorizations for the user in the vehicle (such as key user) will not be removed.

(i)

Tips

- The guest user cannot be renamed.
- When changing users, the new user settings are loaded in the vehicle.
- If a user has the symbol, PIN protection is active. To switch off PIN protection, you can edit the user.
- Depending on the country, you may be able to use an Audi app or my.audi.com.

Key user

Applies to: vehicles with key user management

The vehicle owner must be set as the key user to use some of the specific Audi connect vehicle control services that depend on vehicle equipment.

The key user automatically has remote access authorization. This remote access authorization is necessary to control certain functions that depend on the equipment, such as Audi connect vehicle control services, through the myAudi app.

Setting the key user

Requirement: a key user must not be set yet.

- To set a key user for the vehicle, you will need a myAudi account. Register in the myAudi app or at my.audi.com.
- Add your vehicle to the myAudi app.
- ► Follow the instructions in the myAudi app.

Managing additional users

Depending on the vehicle equipment, you can grant authorization for additional users to use Audi connect vehicle control services at my.audi. com.

Removing the key user

If you remove the key user, all other users that were stored by the key user at my.audi.com and their authorizations will be deleted. It will no longer be possible to use the Audi connect vehicle control services, depending on the vehicle equipment.

Requirement: a key user must be set. The ignition has been switched on with a vehicle key.

► Applies to: MMI: Select on the home screen: USERS > ③ > Remove key user.

(i)

Tips

- Depending on the country and model there may be an app other than the "myAudi app" available for your vehicle. For additional information, see my.audi.com.
- You do not need to log into the vehicle with a myAudi user in order to use Audi connect

Personalization

- vehicle control services, which depend on the vehicle equipment.
- If you sell your vehicle, reset all settings to the factory default settings.

www.carobook.com

Opening and closing

Central locking

General information

Λ

WARNING

- If you leave the vehicle, switch the ignition off and take the key with you. This applies particularly when children remain in the vehicle. Otherwise, children could start the vehicle or operate electrical equipment (such as power windows), which increases the risk of an accident.
- Applies to: vehicles with anti-theft alarm system: When the vehicle is locked from the outside, no one, especially children, should remain in the vehicle, because the windows can no longer open from the inside ⇒ page 37, Anti-theft alarm system.
 Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.
- Applies to: child safety lock: No one, especially children, should stay in the vehicle at when the child safety lock is activated, because the windows can no longer be opened from the inside. This increases the risk of fatal injury.

Description

All doors and the luggage compartment lid can be centrally unlocked and locked at once. You can select in the MMI if the entire vehicle or only the driver's door should unlock when unlocking the vehicle \Rightarrow page 34. The turn signals flash twice when you unlock the vehicle and flash once when you lock the vehicle. If they do not flash when locking, check if all doors and lids are closed.

Depending on the vehicle equipment, you may have different options for centrally unlocking and locking your vehicle.

- Vehicle key ⇒ page 38
- Sensors in the door handles ⇒ page 38
- Lock cylinder in the driver's door ⇒ page 36
- Interior central locking switch ⇒ page 35

Vehicle key

The term "vehicle key" refers to the remote control key or convenience key*. The convenience key* is a remote control key with special functions ⇒ page 38 and ⇒ page 93.

Power closing*

When closing a door or the luggage compartment lid, you only have to let it fall lightly into the latch. It then closes automatically $\Rightarrow \triangle$.

Automatic locking

If you unlock the vehicle but then do not open any of the doors, the luggage compartment, or the hood within a short period time, the vehicle will lock again automatically. This feature prevents the vehicle from being accidentally left unlocked for a long period of time.

Automatic locking (Auto Lock)

The Auto Lock function locks all doors and the luggage compartment lid once the speed has exceeded approximately 9 mph (15 km/h). The vehicle will unlock again if the unlock function in the central locking switch is pressed, the "P" selector lever position is selected, or the ignition is switched off.

You can open the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull the door handle twice.

In the event of a crash with airbag deployment, the doors will also automatically unlock to allow access to the vehicle.

Unintentionally locking yourself out

Only lock your vehicle when all of the doors and the luggage compartment lid are closed and there is no key in the vehicle. This reduces the risk of locking yourself out accidentally.

The following features help to reduce the risk of locking your vehicle key in the vehicle:

— If the driver's door is open, the vehicle cannot be locked by pressing the button on the remote control key or by touching the locking sensor* on a door.

- If the vehicle key that was used most recently is inside the luggage compartment, the luggage compartment lid will automatically open again after it closes ⇒ ①.
- If the vehicle key that was last used is detected inside the vehicle, then the vehicle cannot be locked from the outside ⇒ ①.



WARNING

Observe the safety precautions ⇒ page 33.



WARNING

Applies to: vehicles with power closing

- To reduce the risk of injury, make sure that the area where the door is closing is clear during the closing process.
- The closing process can be stopped at any time by pulling on the outer or inner door handle.



Note

The following applies when locking the vehicle:

- If the vehicle key that was last used is de- Caro tected inside the passenger compartment, then the vehicle cannot be locked from the outside using the sensor. Take the vehicle key with you and lock the vehicle again. Otherwise, the vehicle will not be protected against unauthorized access.
- Applies to: vehicles with convenience key: If you try to lock the vehicle using the button on the vehicle key while the front passenger er's or rear door is open, and you accidentally place the vehicle key inside the passenger compartment and close the door, the vehicle will lock at first. But if the keyless system detects a vehicle key inside the vehicle after it locks, then the vehicle will unlock again. The turn signals will flash several times and a warning tone 1) will sound to indicate this. If you do not open the vehicle to remove the vehicle key within a brief period, then the vehicle will lock automatically. This prevents the vehicle from being left un-

- locked for long periods of time. The vehicle key will then be locked inside the vehicle.
- Applies to: vehicles with convenience key: If the luggage compartment lid closes and the system detects that the last vehicle key that was used is inside the luggage compartment, then the luggage compartment lid will open again. The turn signals will flash several times and a warning tone¹⁾ will sound to indicate this. The doors will lock. Always take the vehicle key with you, or unauthorized persons may be able to enter the vehicle.



Tips

- Do not leave valuables unattended in the vehicle. A locked vehicle is not a safe!
- The LED in the driver's door rail blinks when you lock the vehicle. If the LED turns on for approximately 30 seconds after locking, there is a malfunction in the central locking system. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

Setting the central locking system

You can adjust the central locking system to your preferences. The settings depend on the vehicle equipment.

▶ Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Central locking.

Door unlocking

- If you select All, all doors and the luggage compartment lid will be unlocked when unlocking the vehicle.
- If you select Driver's door, only the driver's door will be unlocked. To unlock all doors and the luggage compartment lid, press the ⊕ button on the vehicle key twice. In vehicles with a convenience key*, only the driver's door will unlock when you pull the driver's door handle. If you pull another door handle, the entire vehicle will be unlocked.

¹⁾ Applies to: vehicles with anti-theft alarm system

The entire vehicle will always be locked f you press the 🗇 button.

Long press to open windows

You can select if all windows and the panoramic glass roof* should open using the vehicle key ⇒ page 45, Convenience opening and closing. If you press and hold the ⊕ button on the vehicle key, all of the windows and the panoramic glass roof* will close.

Disable rear lid handle

You can select if the luggage compartment lid can open with the handle \Rightarrow page 41, fig. 27, \Rightarrow page 41, fig. 28. If you activate this function, the luggage compartment lid can only be opened with the $\stackrel{2x}{\rightleftharpoons}$ button on the vehicle key or in the driver's door. In vehicles with a convenience key*, you can still open the luggage compartment lid using the handle if an authorized convenience key is detected \Rightarrow page 40.

Fold mirrors

You can select if the exterior mirrors automatically fold in when locking. WWW.Caro

Tone when locking¹⁾

You can select if an audio signal sounds when locking the vehicle.

Open with convenience key

Applies to: vehicles with convenience key

You can deactivate the feature for unlocking using the sensor. The function for locking via the sensor will still be enabled ⇒ page 38.

Central locking switch

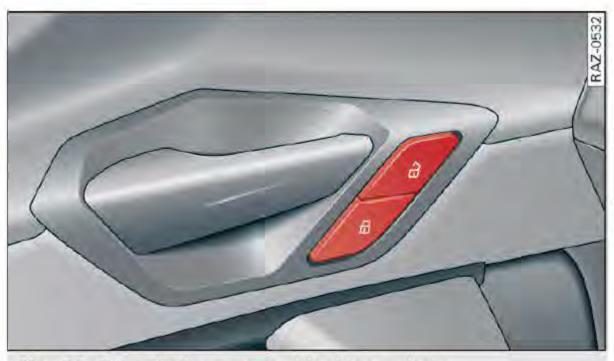


Fig. 21 Driver's door: central locking switch

When locking the vehicle with the central locking switch, the following applies:

- The doors and the luggage compartment lid cannot be opened from the outside for security reasons, for example, to reduce the risk of unauthorized entry while stopped at a light.
- The LED in the central locking switch turns on when all doors are closed and locked.
- WWW.Caroben the doors individually from the inside by pulling the door handle one time. To open the rear doors individually, you must pull sounds when the door handle twice.
 - In the event of a crash with airbag deployment, the doors unlock automatically to allow access to the vehicle.

Λ

WARNING

- Observe the safety precautions ⇒ page 33.
- The central locking button works when the ignition is switched off.
- The central locking switch is inoperative when the vehicle is locked from the outside.

Messages

The following messages may appear depending on the vehicle equipment:

Driver's door: malfunction! Shift to P before leaving vehicle. See owner's manual

¹⁾ This function is not available in all countries.

There is a malfunction in the driver's door. Secure the vehicle before exiting by selecting the "P" selector lever position. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Central locking: malfunction! See owner's manual

There is a central locking malfunction. If the doors cannot lock, you can emergency lock the doors ⇒ page 36. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Door lock: opening while driving is only possible with the emergency release. See owner's manual

It is not possible to power unlock the doors at speeds above approximately 9 mph (15 km/h). If you must open doors at higher speeds in cases of emergency, you can manually unlock the door by forcefully pulling the door handle beyond its noticeable resistance two times. Then press the door handle back into its original position, if necessary.

Mechanically unlocking and locking the doors

All doors must be unlocked or locked separately if the central locking system fails.

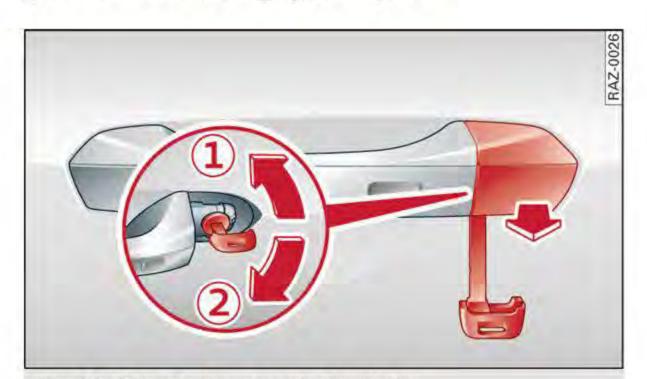


Fig. 22 Driver's door: door lock cylinder



Fig. 23 Door: mechanically locking

Unlocking or locking the driver's door with the mechanical key

- ▶ Remove the mechanical key ⇒ page 38.
- Insert the mechanical key into the slot under the door handle and pry the cap off ⇒ fig. 22.
- ► To unlock the driver's door, turn the mechanical key to the unlock position in the direction of arrow ① ⇒ fig. 22.
- ► Pull firmly on the door handle to open the driver's door. The door handle swings out slightly farther than normal.
- ► To lock the driver's door, select the "P" selector lever position, close the door, and turn the key once to the close position ②

 ⚠.

Locking the front passenger's door and rear doors using the mechanical key

The mechanical lock is located on the edge of the doors. It is only visible when the door is open.

- ► Remove the mechanical key ⇒ page 38.
- If necessary, remove the cap from the opening ⇒ fig. 23.
- ► Insert the mechanical key into the slot on the inside and turn it all the way to the left (when locking the right door), or to the right (when locking the left door).
- ► If necessary, install the cap in the opening and close the door.

Once the doors are closed, it is no longer possible to open them from the outside. The front doors can be opened from the inside by pulling the door handle one time. The rear doors can be unlocked from the inside by pulling the door handle one time and then opened by pulling the door handle again. If the vehicle is without power, the doors can be unlocked from the inside by first

pulling the door handle beyond its noticeable resistance. The doors can then can be opened by pulling the handle again. If the child safety lock in one of the rear doors is activated, you must first pull the door handle from the inside. Then you can open the door from the outside.



WARNING

Observe the safety precautions ⇒ page 33.

Anti-theft alarm system

Applies to: vehicles with anti-theft alarm system

If the anti-theft alarm system detects a vehicle break-in, audio and visual warning signals are triggered. The anti-theft alarm system is switched on or off when locking or unlocking your vehicle. If the alarm is triggered, it will shut off automatically after a certain amount of time.

Switching the alarm off manually

► To switch the alarm off, press the button on the vehicle key or switch the ignition on.

Depending on the vehicle equipment, the antitheft alarm system may have the following features:

Break-in security feature

The alarm will sound if there is a break-in at the doors, hood, and/or luggage compartment lid.

Interior/towing protection monitor

The alarm will be triggered if there are movements detected in the vehicle interior (for example, by animals) or if there is a change in the vehicle angle (for example, when the vehicle is being towed).

You can prevent the alarm from being triggered by deactivating the interior/towing protection monitor.

Deactivating the interior/towing protection monitor

There are the following options for deactivating the interior/towing protection monitor:

► Press the button on the vehicle key a second time within two seconds. Or

- Applies to: vehicles with convenience key: Touch the sensor on the door handle a second time within two seconds. Or
- ► Turn the mechanical key in the door lock to the close position a second time within two seconds. Or
- ▶ Applies to: vehicles with MMI: Select on the home screen: VEHICLE > Settings & Service > Interior monitoring.

If you lock the vehicle, then the interior/towing protection monitor will stay off until the next time the vehicle is unlocked.



WARNING

No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.



Tips

The interior/towing protection monitor only functions correctly when the windows and the panorama glass roof* are closed.

Keys

Key set



Fig. 24 Your vehicle key set

1 Vehicle key

You can unlock and lock your vehicle with the vehicle key.

(2) Mechanical key and release button for mechanical key

A mechanical key is integrated in the vehicle key. To remove it, press the release button and remove the mechanical key.

Using the mechanical key, you can:

- Lock or unlock the glove compartment.
- Manually unlock and lock the doors ⇒ page 36.
- Unlock the luggage compartment lid using the emergency release ⇒ page 43.

(3) PANIC button

In an emergency, you can press the PANIC button to trigger a visible and audible vehicle alarm. You can do this ass long as you are near your vehicle (within the range for the remote control key).

- To trigger the alarm, press the PANIC button
 ⇒ fig. 24.
- To turn the alarm off, press the PANIC button again.

Lost key/replacing a key

If a vehicle key is lost, contact an authorized Audi dealer or authorized Audi Service Facility. Have this vehicle key deactivated. It is important to bring all keys with you.

If a key is lost, you should report it to your insurance company.

Electronic immobilizer

The immobilizer prevents unauthorized use of the vehicle.

In some cases, it may not be possible to establish vehicle drive ready mode if there is also a vehicle key from a different vehicle manufacturer on the key chain.

Data in the vehicle key

When driving, service and maintenance-relevant data is continuously stored in your vehicle key. An authorized Audi dealer or authorized Audi Service Facility can read out this data and tell you about the work your vehicle needs.



WARNING

Observe the safety precautions ⇒ page 33.



Note

Protect the key against high temperatures and direct sunlight.

(

For the sake of the environment

A Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner.

(i)

Tips

- The vehicle key function can be temporarily disrupted by interference from transmitters near the vehicle working in the same frequency range (such as a mobile device or radio equipment). Always check if your vehicle is locked.
- Applies to MMI: You can view the number of keys programmed to the vehicle by selecting on the home screen: VEHICLE > Settings
 & Service > Vehicle information.
- The key set is equipped with a key tag at the factory. The key tag does not directly control any vehicle functions. You can use the key tag if you would like to order a new vehicle key.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Unlocking and locking the vehicle

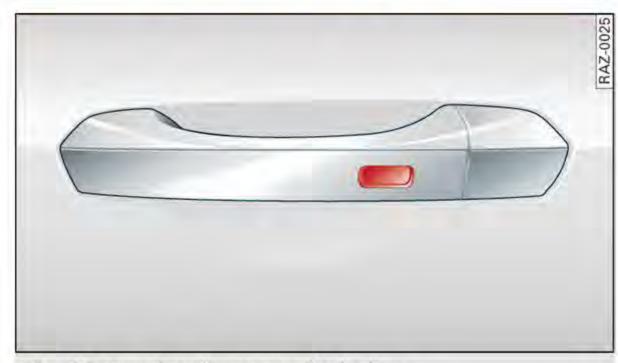


Fig. 25 Door handle: sensor for locking

Depending on the vehicle equipment, you may have various options for unlocking and locking your vehicle. The settings in the MMI specify which doors will unlock ⇒ page 34.

Unlocking or locking using the vehicle key buttons

- ► To unlock the vehicle, press the 🗗 button ⇒ page 37, fig. 24.
- ► To lock the vehicle, press the 🗗 button once.

Unlocking or locking using the sensors

Applies to: vehicles with convenience key

- ► To unlock a door or the luggage compartment lid, grasp the door handle or luggage compartment lid handle.
- To lock the vehicle, close the door and touch the sensor on the door handle once ⇒ fig. 25. Do not grasp the door handle while locking the vehicle, or else the vehicle will not lock. The door cannot be opened for a brief period directly after locking it. This way you have the opportunity to check if the doors locked correctly.

Unlocking and locking with the Audi connect vehicle control service 1)

Applies to: vehicles with Audi connect vehicle control

Requirement: Audi connect vehicle control services must be set up ⇒ page 196. The vehicle must be parking and the ignition must be switched off.

- proximately 4 feet (1.5 m) away from the door handle or luggage compartment.
- Unlocking with the convenience key (keyless access) can be deactivated in the MMI system ⇒ page 34.
- To prevent the vehicle battery from discharging, the energy management gradually switches off convenience functions that are not needed. You then may no longer be able to unlock your vehicle with the sensors.

LED and battery in the vehicle key



Fig. 26 Vehicle key: removing the battery holder

LED in the vehicle key

The LED 1 indicates the vehicle key function.

- If you press a button briefly, the LED blinks once.
- If you press and hold a button (convenience opening/closing), the LED blinks several times.
- ▶ If the LED does not blink, the vehicle key battery is drained. Replace the battery in the vehicle key.

Replacing the vehicle key battery

- Remove the mechanical key ⇒ page 38 and insert it at an angle into the opening ⇒ fig. 26.
- ▶ Push the mechanical key in the opening in the direction of the arrow to operate the release button on the inside ②. To reduce the risk of damage, do not try to pry off the cover.
- ▶ Remove the cover from the battery tray.
- ▶ Insert the new battery with the "+" symbol facing up.
- ► Close the battery tray with the cover.
- ► Insert the mechanical key.

Λ

WARNING

Observe the safety precautions ⇒ page 33.



Tips

- Only use the vehicle key when you can see the vehicle.
- The vehicle can only be locked when the "P" selector lever position is engaged.
- Do not use the vehicle key to lock and unlock when you are inside the vehicle. Otherwise, you could trigger the anti-theft alarm*. If this happens, press the di unlock button.



Tips

Applies to: vehicles with convenience key

 When unlocking or locking the vehicle, the convenience key cannot be more than ap-

¹⁾ In certain countries.

If the indicator light appears with a corresponding message, the vehicle key battery is drained and must be replaced.

Λ

WARNING

If batteries or coin cell batteries are swallowed or enter the body in any other way, they can cause serious or fatal injuries within a short period of time. There is a risk of chemical burns.

- Keep vehicle keys and key fobs with batteries out of the reach of children.
- Keep new or used batteries away from children.
- If the battery compartment on a vehicle key does not close securely, stop using the key and keep it away from children.
- Seek medical attention immediately if you suspect that a battery was swallowed or has entered the body in any other way.

(

For the sake of the environment

Batteries and electrical/electronic devices must be disposed of in an environmentally car safe manner.



Tips

Replacement batteries for the vehicle key must meet the same specifications as the original battery.

Luggage compartment lid

General information



WARNING

- Applies to: vehicles with anti-theft alarm system: When the vehicle is locked from the outside, no one, especially children, should remain in the vehicle, because the windows can no longer open from the inside ⇒ page 37. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.
- Always close and lock the luggage compartment lid and the doors when the vehicle is

- not in use. Otherwise someone such as a child could enter the vehicle through the luggage compartment and become locked inside it. To reduce the risk of injury, do not allow children to play in or around the vehicle.
- To reduce the risk of injuries by pinching, make sure that no one is in the operating area of the luggage compartment lid when closing, especially near the hinges, at the upper and lower edges of the lid, or all around the edge of the lid in general.
- After closing the luggage compartment lid, make sure that it is latched. The luggage compartment lid could open suddenly while driving, which would increase the risk of an accident.
- Never drive with the luggage compartment lid ajar or open, because poisonous gases from the surrounding area can enter the vehicle interior and increase the risk of asphyxiation.
- If there is a luggage rack (such as a bicycle rack) on the luggage compartment lid, the luggage compartment lid may not open completely under certain circumstances or it could close by itself if open due to the extra weight. Therefore, the open luggage compartment lid must be given additional support or the cargo must first be removed from the luggage rack.
- Applies to: vehicles with power-operated or sensor-controlled luggage compartment lid: Pay careful attention when closing the luggage compartment lid. Otherwise, you could cause serious injury to yourself or others despite the pinch protection.



Note

The luggage compartment lid can bump into objects such as the garage ceiling when opening and become damaged.



Tips

 When the vehicle is locked, the luggage compartment lid can be unlocked separately

- by pressing the $\stackrel{2*}{\approx}$ button twice on the vehicle key. The luggage compartment lid locks automatically when it is closed again.
- The ability to open the luggage compartment lid using the handle ⇒ page 41, fig. 27, ⇒ page 41, fig. 28 can be deactivated or activated in the MMI ⇒ page 34.

Opening and closing the luggage compartment lid



Fig. 27 Rear lid: handle



Fig. 28 Driver's door: opening the luggage compartment lid

Opening the luggage compartment lid

- ▶ Unlock the vehicle or the luggage compartment lid using the 🗟 / 🚈 button on the vehicle key and press the handle in the luggage compartment lid \iphi fig. 27. Or
- ► Applies to: vehicles with convenience key:Press the handle in the luggage compartment lid ⇒ fig. 27. When the luggage compartment is locked, the vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment. Or
- ▶ When the ignition is switched off, press and hold the ^{2x} button on the vehicle key twice. Or
- ► Select the "P" selector lever position and pull the ⇔ ⇒ fig. 28 button in the driver's door.

Closing the luggage compartment lid

- ► Applies to: vehicles without automatic luggage compartment lid: Use the inside handle* to pull the luggage compartment lid down and allow it to drop gently into the latch to close it. Or
- Applies to: vehicles with automatic luggage compartment lid: Note ⇒ page 41.


A

WARNING

Observe the safety precautions ⇒ page 40.

Automatic luggage compartment lid

Applies to: vehicles with automatic luggage compartment lid

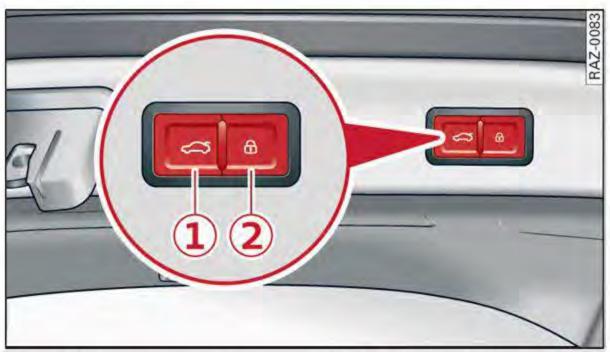

lock button* (vehicles with convenience key*)

The luggage compartment lid can be opened and closed automatically $\Rightarrow \bigwedge$ in General information on page 40.

Opening the luggage compartment lid

- When the ignition is switched off, press the button on the vehicle key twice ⇒ page 37, fig. 24. Or
- ► Engage the "P" selector lever position and pull the

 button* in the driver's door. Or
- ► Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid ①

 ⇒ page 41, fig. 27. When the luggage compartment is locked, the vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment.

Closing the luggage compartment lid

- ▶ Press the ⇒ button in the luggage compartment lid. Or
- ▶ Press the handle in the luggage compartment lid ⇒ page 41, fig. 27. Or

Opening and closing

- Press the luggage compartment lid downward slightly. Or
- When the ignition is switched on, pull the

 switch in the driver's door

 page 41, fig. 28

 until the luggage compartment lid is closed. Or
- ► Applies to: vehicles with convenience key: Press and hold the ﷺ button on the vehicle key while the ignition is switched off until the luggage compartment lid closes. Make sure there is enough distance (maximum of approximately 9 feet (3 m)) between you and the luggage compartment lid. Or
- ▶ Press the ⇒ button in the luggage compartment lid. Or

Stopping automatic opening or closing

The automatic opening or closing of the luggage (compartment lid will stop if:

- You press the ⇒ button or press the handle in the luggage compartment lid again ⇒ page 41, fig. 27. Or
- ► If something blocks the luggage compartment lid or makes it difficult for the lid to move.

If you press the button

or the handle in the luggage compartment lid

page 41, fig. 27 again, the luggage compartment lid will open or close again.

Storing the luggage compartment lid opening position

The position must be at a certain height or higher to store.

Bring the luggage compartment lid into the desired open position. If you want to move the luggage compartment lid to a lower position, move it slowly in small increments; otherwise,

- the luggage compartment lid will close automatically.
- ▶ Press and hold the ⇒ button in the luggage compartment lid for at least four seconds to store the new opening position. A visual and audio signal will follow.
- ► To set a higher open position, wait at least five seconds and then carefully press the luggage compartment lid upward.
- ▶ Press and hold the ⇒ button again for at least four seconds to store the desired opening position.

Manually opening and closing the luggage compartment lid

If the electric motor malfunctions or the vehicle battery charge level is low, the luggage compartment lid can be opened or closed by hand. Extra force will be needed to do this. Move the lid slowly to reduce the amount of force needed.

▶ Pull the luggage compartment lid down slightly by the inside handle* and then press on the lid until it latches.

WARNING

Observe the safety precautions \Rightarrow page 40.

Opening and closing the luggage compartment lid with foot motion (kicking movement)

Applies to: vehicles with sensor-controlled luggage compartment lid



Fig. 30 Vehicle rear: foot motion (example)

The luggage compartment lid can be opened and closed automatically 1) ⇒ <u>∧</u> in General information on page 40.

Requirements: you must be carrying your convenience key* with you. The ignition must be switched off. You must be standing at the center behind the luggage compartment lid. Depending on vehicle equipment, it may also be possible to stand slightly off-center at the back of your vehicle.

► Move your foot back and forth under the bumper one time \Rightarrow fig. 30. Do not touch the bumper. Make sure you have firm footing. The luggage compartment lid will open or close 1) once the system detects the movement. The automatic opening or closing will be canceled if you repeat one of the movements described.

WARNING

Observe the safety precautions \Rightarrow page 40.



WARNING

Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle. This increases the risk of an accident.



Please note that when you have the convenience key with you, the sensor-controlled luggage compartment lid could open or close unexpectedly during activity near the rear of the vehicle (for example, the lid could hit the ceiling in a garage).



Tips

The luggage compartment lid will only open or close 1) if you perform the movement as described. This prevents the luggage compartment lid from opening or closing due to similar movements 1), such as when you walk between the rear of the vehicle and your garage door. In some situations, the function may be limited or temporarily unavailable. This may happen if:

- You are standing too close to the bumper or too far away from it
- The luggage compartment lid was closed or opened immediately beforehand
- You park close to a hedge and the branches move back and forth under the vehicle for a long period of time
- You clean your vehicle, for example with a pressure washer or in a car wash
- There is heavy rain
- The bumper is very dirty, for example after driving on salt-covered roads
- There is interference to the vehicle key's radio signal, such as from mobile devices or remote controls

Mechanically unlocking the luggage compartment lid

The luggage compartment lid can be released from the inside in an emergency.



Fig. 31 Inner luggage compartment lid: access to the emergency release

- ▶ Fold the backrest on the rear bench seat forward ⇒ page 84.
- ▶ Remove the mechanical key ⇒ page 38 or the screwdriver ⇒ page 276.
- ► Using the mechanical key/screwdriver ²⁾, pry the cover >> off the luggage compartment lid trim panel.

The closing function applies to vehicles that also have automatic luggage compartment lid operation.

Use the flat side of the reversible screwdriver blade.

► To unlock the luggage compartment lid, press the lever in the direction of the arrow using a suitable object (such as a screwdriver) or using the mechanical key if necessary.



WARNING

Observe the safety precautions \Rightarrow page 40.



WARNING

If you have folded the backrests into the upright position, always check if the lock is correctly engaged by pulling forward on the backrest.

Child safety lock

The child safety lock prevents the rear doors from being opened from the inside and the rear power windows from being operated.



Fig. 32 Driver's door: controls

- ► To activate or deactivate the child safety lock for the rear doors (which controls the power windows and interior door handle), press the left and/or right 🔓 button in the driver's door \Rightarrow fig. 32. The indicator light in the button turns on/blinks.
- ► Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.
- ► Applies to: vehicles with controls for the climate control system in the rear and MMI: To also restrict the operation of the climate control system in the rear, select on the home screen: SETTINGS > Display & brightness > Operation in rear

When the child safety lock is switched on, the following functions are disabled:

- The rear inner door handles
- The rear power windows
- The control panel* for the climate control system in the rear

Message in the instrument cluster display

The following messages may appear depending on the vehicle equipment:

(f) / (a) Child safety lock: malfunction! Please contact Service

There is a malfunction in the child safety lock. Press the 🔓 button again.

If the message stays on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

WARNING

- Observe the safety precautions ⇒ page 33.
- A malfunction in the child safety lock could allow the rear doors to be opened from the inside, which increases the risk of an accident.

Power windows

Opening and closing the windows

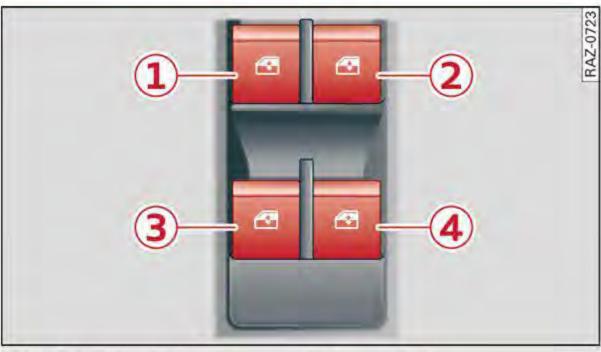


Fig. 33 Driver's door: power window switch

Power window switches:

- Left front door
- Right front door
- Left rear door
- Right rear door

Opening and closing the windows

The driver can control all power windows. All power window switches are equipped with a two-stage function:

- ➤ To open or close the window completely, press the switch down or pull the switch up briefly to the second level. The operation will stop if the switch is pressed or pulled again.
- ► To select a position in between opened and closed, press or pull the switch to the first level until the desired window position is reached.

Correcting a malfunction in the one-touch up/down function

If necessary, you can reactivate the one-touch up/down function if it malfunctions.

- Pull the power window switch up until the window is completely raised.
- ► Release the switch and pull it up again for at least one second.

A

WARNING

- Observe the safety precautions ⇒ page 33.
- Never close the windows carelessly or in an uncontrolled manner, because this increases the risk of injury.



Tips

- You can still open and close the windows for several minutes after turning the ignition off. The power window switch is not disabled until the driver's door or front passenger's door is opened.
- The power windows are equipped with pinch protection. The automatic window may stop closing and will open all the way again even if no obstacle is detected. Pull the power window switch up until the window is completely raised.

Convenience opening and closing

Applies to: vehicles with convenience key

Convenience opening or closing the windows or panoramic glass roof*

You can set in the MMI if all windows or the roof* should open or close all at once ⇒ page 34, Setting the central locking system.

- Press and hold the nor nor the vehicle key until all windows and the roof* have reached the desired position ⇒ . Or:
- ➤ Touch the sensor* on the door handle

 ⇒ page 38, fig. 25 until all of the windows and the roof* are closed. Do not place your hand in the door handle when doing this.

When all of the windows and the roof* are closed, the turn signals will flash once.



WARNING

- Observe the safety precautions ⇒ page 33.
- Never close the windows or panoramic glass roof* carelessly or in an uncontrolled manner, because this increases the risk of injury.
 For security reasons, the windows and the panoramic glass roof* can only be opened and closed with the vehicle key at a maximum distance of approximately 6.5 feet (2 m) from the vehicle. Always pay attention when using the 1 button to close the windows and the panoramic glass roof* so that no one is pinched. The closing process will stop immediately when the 1 button is released.

Panoramic glass roof

Operating the panoramic glass roof and roof sunshade

Applies to: vehicles with panoramic glass roof and roof sunshade

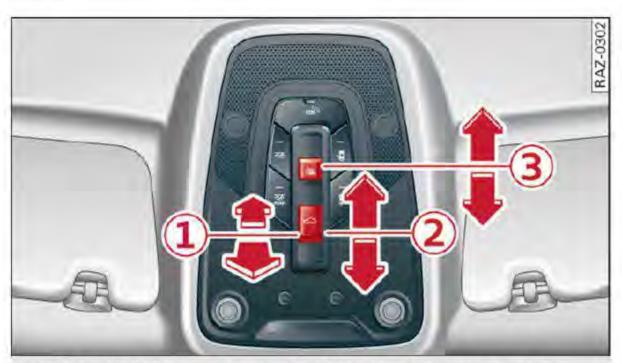


Fig. 34 Headliner: panoramic glass roof and sunshade* buttons

The control buttons are equipped with a twostage function.

When tilting or opening the roof, the roof sunshade will open partially or completely if the sunshade is closed.

Operating the roof sunshade www.caro

- ► Opening and closing the sunshade: push the switch in the headliner ③ forward or toward the rear to the second level.
- ► Partially opening the sunshade: press the switch to the first level until the sunshade reaches the desired position.

Operating the roof

- ► Tilting the roof: press the ⇐⇒ switch in the headliner briefly up to the second level ①.
- Closing the tilted roof: pull the switch down briefly to the second level.
- ▶ Opening the roof: slide the ⇐⇒ switch back briefly twice in a row to the second level ②.
- ► Closing the opened roof: push the ⇒ switch forward briefly to the second level.
- ► Opening or closing partially: slide the switch to the first level and hold it there until the roof reaches the desired position.

Quick opening

You can also open the roof and roof sunshade in one movement.

► Push the ⇔ switch back briefly to the second level ② twice in a row.

Roof emergency closing

If an object is detected when closing, the roof will open again automatically. In this case, you can then close it with the power emergency closing function.

► Within five seconds after the sunroof opens automatically, pull the applicable button until the roof is closed.

A

WARNING

- Observe the safety precautions ⇒ page 33.
- To reduce the risk of injury, always pay attention when closing the roof. Always switch
 the ignition off and take the key with you
 when leaving the vehicle.



Note

Always close the roof when you leave the vehicle and when there is precipitation to reduce the risk of damage to the interior equipment, particularly the electronic equipment.



Tips

- After switching off the ignition, the roof and sunshades can still be operated for several minutes as long as neither of the front doors have been opened.
- It is not possible to open the roof when temperatures are too low.

Garage door opener

Description

Applies to: vehicles with garage door opener

With the garage door opener, you can activate systems such as the garage doors, security systems or house lights from inside your vehicle.

These functions are operated in the MMI. Multiple receivers can be programmed, which can control the functions of up to eight¹⁾ hand-held transmitters.

Λ

WARNING

- When operating or programming the garage door opener, make sure that no people or objects are in the area immediately surrounding the equipment. People can be injured or property can be damaged if struck when closing.
- Do not allow yourself to be distracted from traffic by the viewing and operating the displays.



Tips

- If you sell your vehicle, reset all settings to the factory default settings ⇒ page 234.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.



Tips

www.caroboo

Before you program your system to the garage door opener, first check the compatibility:

- Ask an authorized Audi dealer or authorized Audi Service Facility or check at www.
 homelink.com. You can also find more information about HomeLink there.
- You can display information about Home-Link (compatibility level/status/country code/HomeLink generation) in the MMI:
- Select on the home screen: VEHICLE > Settings & Service > Garage door opener > i).

Operation

Applies to: vehicles with garage door opener

Requirements: the remote control transmitter must be programmed ⇒ page 47, Programming, the vehicle must be within range of the system, and the ignition must be switched on.

There are multiple options to open or close the system (such as the garage door).

- ▶ If you have only programmed one remote control transmitter, press the button on the lower display. Or
- ▶ If you have programmed multiple remote control transmitters, press the ← button on the lower display and then press the respective system button. Or
- Applies to: vehicles with programmable steering wheel button: If you have configured the programmable steering wheel button, press the ★ button ⇒ page 29. Or
- Applies to: vehicles with location pairing: If you have programmed Location pairing, press the button for this in the upper display (notification center ⇒ page 21). As you approach the system, the button is displayed on the MMI.

If transmission was successful, the message: **Send to: XXX** will appear.

Programming

Applies to: vehicles with garage door opener

You can program both fixed code and rolling code systems in the MMI using the procedure that is described.

Requirement: the ignition must be switched on.

Programming the system

Applies to: MMI

Requirement: the hand transmitter must be present and the vehicle must be within range of the system (such as the garage door) that you would like to program.

- ▶ If you are programming the garage door opener for the first time, press the button on the lower display. Follow the instructions in the upper display. Or
- ▶ If you would like to program other systems, select on the home screen: VEHICLE > Settings & Service > Garage door opener. Select the desired button: (+). Follow the instructions in the MMI.

The possible number of hand-held transmitters depends on the equipment.

▶ If you would like to reprogram systems that are already programmed, select on the home screen: VEHICLE > Settings & Service > Garage door opener. Press the substant and select for the system to be reprogrammed. Select: Program. Follow the instructions in the MMI.

With some systems, the garage door opener will be immediately available after programming. With other systems, the garage door opener must also be synchronized.

Synchronizing¹⁾

Requirement: the hand transmitter must already be programmed and the vehicle must be within range of the system (such as the garage door).

If the system synchronization is performed directly after the programming procedure, follow the instructions on the MMI.

If you would like to sync at a later time:

- Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Garage door opener.
- ▶ Press the button for the system that you would | like to synchronize.
- ► Follow the instructions in the MMI.

Location pairing

Applies to: vehicles with location pairing

For easier operation, you can program your system's location.

Requirements: the respective hand transmitter must be programmed ⇒ page 47 and the vehicle must be located in front of the system.

► If you have programmed your system, follow the instructions in the MMI. Or

If you would like to set up location pairing at another time:

- Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Garage door opener.
- ▶ Press the 🖉 button.
- ▶ Press the button for the system your vehicle is facing.

- ► Select: Location pairing.
- ▶ Follow the instructions in the MMI.

Only a maximum of three systems can be displayed in the notification center ⇒ page 21. If you would like to have all systems displayed, press :::

Renaming programmed systems

You can rename the programmed systems according to your preferences (names may have a maximum of 10 characters).

► If you have programmed your system, follow the instructions in the MMI. Or

If you would like to change the name at another time:

- Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Garage door opener.
- ▶ Press the 🖉 button.
- ► Press the button for the system that you would like to rename.
- ► Select: **Rename**. If necessary, delete the preset name, such as Garage door opener 1.
- Follow the instructions in the MMI.

Deleting programmed systems

The programmed systems can be deleted individually or all at once.

- ▶ Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Garage door opener.
- ▶ Press the 🎤 button.
- ➤ To delete an individual system, press the □ button for the desired system. If the checkmark ✓ is set, select: Delete.
- ► To delete all systems, select: All > Delete.



- Make sure the batteries in the hand transmitter are charged before starting the programming process.
- The programming process may take up to 30 seconds. It may be necessary for the

¹⁾ Only applies to rolling code systems

- hand transmitter to be pressed again in the meantime.
- The garage door opener may need to be synchronized with the system after programming. Follow the manufacturer's instructions for doing this.

(i)

Tips

In some cases, the system may need to be programmed in a different mode ("D mode").

- Switch the ignition on.
- Applies to: MMI: Select on the home screen:
 VEHICLE > Settings & Service > Garage door opener.
- Press and hold the desired button (+).
- Select Yes, in D mode and follow the instructions on the MMI.

www.carobook.com

Lights and Vision

Exterior lighting

Switching the lights on and off



Fig. 35 Instrument panel: light button module

1 Light switch 🌣

Press and hold 1 until the desired light function is selected. The selected function is displayed briefly in the instrument cluster. When switching on the ignition, the AUTO light function is automatically selected.

- AUTO The automatic headlights adapt to the surrounding brightness automatically. The day time running lights* will automatically turn on. In vehicles for certain markets, you can switch the automatic daytime running lights* on and off in the MMI.
- ■○ You can switch the low beam headlights on manually once the ignition is switched on.
- ≫ You can switch the parking lights on at speeds below 20 mph (32 km/h).
- USA models: OFF You can switch off all light functions at speeds under 6 mph (10 km/h).
- Canada models: OFF You can switch off all light functions when the ignition is switched off while the vehicle is stationary.

When the low beam headlights or parking lights are switched on, the respective or or indicator light appears in the instrument cluster.

2 All-weather lights RONT

The headlights automatically adjust so that there will be less glare, for example when the road surface is wet.

Automatic headlight range control

Your vehicle is equipped with automatic headlight range control. It reduces glare for oncoming traffic if the vehicle load changes. The headlight range adjusts automatically.

Audi adaptive light

Applies to: vehicles with Audi adaptive light

Audi adaptive light provides better visibility when driving in the dark. The lights are adapted to the road conditions based on speed, such as when driving on expressways, rural roads, at intersections, and around curves. The adaptive light only functions when the automatic headlights are activated.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Automatic headlights are only intended to assist the driver. The driver is still responsible for controlling the headlights and may need to switch them on and off manually depending on light and visibility conditions. For example, fog cannot be detected by the light sensors. So always switch on the low beams O under these weather conditions and when driving in the dark.

(i)

Tips

- If the vehicle battery has been discharging for a while, the parking light may switch off automatically. Avoid using the parking lights for several hours.
- When using lighting equipment, the driver is responsible for adhering to any local applicable regulations while driving and when parking the vehicle.
- Only the front headlights turn on when the daytime running lights are switched on*. In vehicles in certain markets, the tail lights will also turn on.
- In cool or damp weather, the inside of the headlights, turn signals, and tail lights can fog over due to the temperature difference between the inside and outside. They will clear shortly after switching them on. This

does not affect the service life of the lighting.

 When the parking lights are switched on and the ignition is switched off, the symbol appears in the light switch module.

Turn signal and high beam lever

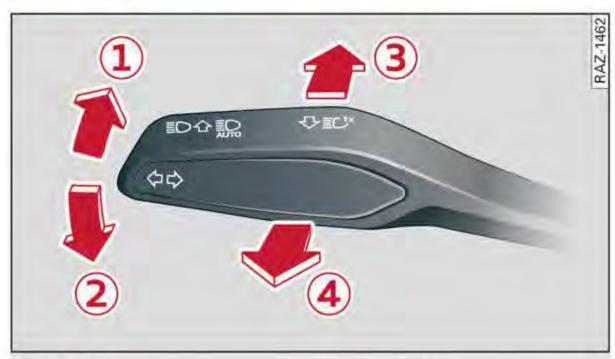


Fig. 36 Operating lever: switching the light functions on and off

The lever operates the turn signals, the high beams and the headlight flasher.

The turn signal will activate when you move the lever into a turn signal position while the ignition is switched on. The respective or indicator light flashes. The turn signal blinks three times if you tap the lever (convenience turn signal).

- 1 Right turn signal
- 2 Left turn signal

If an indicator light blinks twice as fast as usual, a turn signal bulb has failed. Carefully drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

High beams ≣○ and headlight flasher

- ► Move the lever to the corresponding position:
- (3) High beams on (vehicles with High beam assistant* ⇒ page 51)
- 4 High beams off or headlight flasher

The indicator light in the instrument cluster will turn on.

Λ

WARNING

High beams can cause glare for other drivers, which increases the risk of an accident. For this reason, only use the high beams or the headlight flasher when they will not create glare for other drivers.

High beam assistant

Applies to: vehicles with high beam assistant

The high beam assistant automatically turns the high beams on or off depending on the surrounding conditions.

A camera on the rearview mirror mount can detect light sources from other road users. The high beams switch on or off automatically depending on the position of vehicles driving ahead and oncoming vehicles, the vehicle speed as well as other environmental factors and traffic conditions.

Activating high beam assistant 🎎

Requirement: the AUTO light function must be selected and the high beam assistant must be switched on in the MMI \Rightarrow page 52.

► To activate the high beam assistant, tap the lever forward ③ ⇒ page 51, fig. 36. The indicator light will appear in the instrument cluster display and the high beams will be switched on or off automatically. The indicator light will turn on if the high beams are switched on.

Activating and deactivating the high beam head lights manually

If the high beams did not switch on or off as expected, you may switch them on or off manually instead:

- ► To activate the high beams manually, tap the lever forward ③ ⇒ page 51, fig. 36. The indicator light will turn on.
- ► To deactivate the high beams manually, pull the lever back ④ ⇒ page 51, fig. 36. The high beam assistant is deactivated.

Operating the headlight flasher

► To operate the headlight flashers, pull the lever back ④ ⇒ page 51, fig. 36. If the high beam

headlights are not switched on, the high beam assistant will remain activated.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- High beam assistant is only intended to assist the driver. The driver is responsible for controlling the high beam headlights and adjusting them to match the lighting and visibility conditions.
- High beams can cause glare for other drivers, which increases the risk of an accident.
 For this reason, only use the high beams or the headlight flasher when they will not create glare for other drivers.



Tips

Adhere to any local applicable regulations when using the lighting equipment, for example in regard to reducing glare for other drivers. The driver is always responsible for adhering to the regulations applicable in the council try where the vehicle is being operated.

Adjusting the exterior lighting

You can adjust the exterior lighting separately. The settings depend on the vehicle equipment.

Applies to: MMI: Select on the home screen: VEHICLE > Light & Visibility > Exterior lighting.

Automatic headlights

You can adjust the following settings in the **Automatic headlights** menu:

Activation time - You can adjust if the headlights switch on **Early**, **Medium**, or **Late** based on the sensitivity of the light sensor.

High beam assistant - You can switch the high beam assistant on and off.

Digital Matrix LED functions – You can switch the digital Matrix LED functions on or off¹⁾.

Entry/exit lighting

The Entry/exit lighting illuminates the area around the vehicle when the vehicle is unlocked or when the driver's door is opened while the ignition is off. The entry/exit lighting works when it is dark and when the AUTO light function is switched on. The front and rear daytime running lights* switch on automatically each time the vehicle is unlocked regardless of how bright it is outside the vehicle.

Applies to: vehicles with digital Matrix LED functions: The entry lighting also projects a light animation when the vehicle is unlocked and the driver's door is opened. The exit lighting also starts the light animation when the ignition is switched off. The light animation will appear on surfaces in front of the vehicle when it is dark. You can choose from various color profiles, such as **Origami**.

Daytime running lights

USA models: The daytime running lights can be switched on and off.

not be switched off. The lights activate automatically each time the ignition is switched on.

Emergency flashers



Fig. 37 Center console: emergency flashers

The emergency flashers help to make other drivers aware of your vehicle in dangerous situations.

▶ Press the ▲ ① button to switch the emergency flashers on or off.

¹⁾ No function assigned in certain countries.

When the emergency flashers are turned on, the and indicator lights will flash at the same time.

You can indicate a lane change or a turn when the emergency flashers are switched on by using the turn signal lever. The emergency flashers stop temporarily.

The emergency flashers also work when the ignition is turned off.



Tips

You should switch the emergency flashers on if:

- you are the last car in a traffic jam so that all other vehicles approaching from behind can see your vehicle
- your vehicle has broken down or you are having an emergency
- your vehicle is being towed or if you are towing another vehicle

Messages

The following messages may appear depending on the vehicle equipment:

If the indicator light turns on, a bulb has failed. The displayed message indicates the cause and possible solutions. If one of the messages remains on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Audi adaptive light: malfunction! See owner's manual

Adaptive light is not working. The headlights still function. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Headlight range control: malfunction! See owner's manual

There is a malfunction in the headlight range control system, which may cause glare for other drivers. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

High beam assistant: malfunction! See own-er's manual

You can still switch the high beams on or off manually. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

High beam assistant: currently unavailable. Camera view limited due to surroundings. See owner's manual

This message appears if the camera's visual field is blocked. The system will switch itself off. Try switching the systems on later.

Automatic headlights: malfunction! See owner's manual

The light/rain sensor is malfunctioning. When the AUTO light function is on, the low beams will remain switched on at all times for safety reasons. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Interior lighting

Front interior lighting



Fig. 38 Headliner: interior lighting

Interior lighting buttons

添* - Interior lighting on/off

Open contact switch on/off. The interior lighting is controlled automatically.

Touch-sensitive reading lights

- ► To turn a reading light on or off, touch the surface 1 briefly.
- ► To activate the manual dimming function, touch the surface 1 when the light is switched ►

off and keep touching it until the desired brightness is reached.

Rear interior lighting

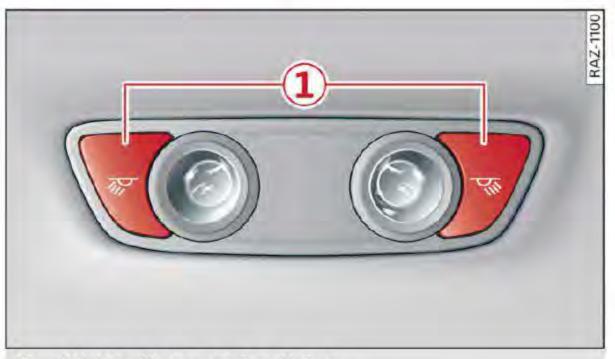


Fig. 39 Headliner: reading lights

Reading lights

- ► To switch the reading lamp on or off, press the witton 1.
- ► To activate the manual dimming function*, touch the surface while the light is switched off

 1 and keep touching it until the desired brightness is reached.

Interior lighting WWW.Ca

Applies to: vehicles with interior lighting

The ambient lighting turns on when the ignition is switched on. The ambient lighting is deactivated when the lights are set to OFF.

You can adjust the ambient lighting separately. The settings depend on the vehicle equipment.

▶ Applies to MMI: Select on the home screen: VE-HICLE > Light & Visibility > Interior lighting.

You can choose from various color profiles, such as **Maritime**.

Additional settings and profiles:

- Brightness: you can adjust the brightness for all of the interior lighting.
- Individual: you can adjust the brightness and color of the interior lighting separately, divided into contour and surface lighting.
- Audi drive select: the contour and surface lighting color changes depending on the selected drive select* mode.



Tips

Depending on vehicle equipment, when the drive select* function is selected, the color of the contour and surface lighting may briefly change to red or blue when the interior temperature is manually increased or decreased.

Display brightness

You can set the instrument and display illumination separately. The settings depend on the vehicle equipment.

► Applies to MMI: select on the home screen: SETTINGS > Display & brightness.

Possible settings in the MMI:

- Cockpit dimming
- Head-up display
- MMI
- Audi virtual cockpit

Vision

Adjusting exterior mirrors



Fig. 40 Driver's door: knob for the exterior mirrors

- ► Turn the knob in the driver's door to the desired position:
- 0 Deactivates all adjustment functions.
- → / ← Selects the left or right exterior mirror.
 To adjust the mirror glass in a mirror, press the knob in the desired direction.
- Heats* the mirror glass depending on the outside temperature.
- Folds the exterior mirrors*. To fold the mirrors out, turn the knob to one of the other

positions. In the MMI, you can select if the mirrors fold in automatically when you lock the vehicle \Rightarrow page 34.

Front passenger's exterior mirror tilt function*

Requirement: the knob must be in the position for the front passenger's exterior mirror.

The mirror surfaces tilt slightly when reverse gear is selected to provide a better view, for example of the edge of the curb.

You can adjust the mirror surface by turning the knob in the desired direction.

The mirror moves from the reversing position back to the original position:

- When you switch the ignition off
- When you drive forward at speeds faster than 9 mph (15 km/h).
- When the knob is no longer in the position for the front passenger exterior mirror

Δ

WARNING

Curved mirror surfaces (for example convex) (O enlarge the field of vision. However, they make objects in the mirror appear smaller and farther away. When using these mirrors to estimate your distance to vehicles behind you when changing lanes, you could estimate incorrectly, which increases the risk of an accident.

1

Note

- Applies to: vehicles with power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must use the power folding function to fold the mirror all the way out. The mirrors will make a loud noise when they latch into place. The mirror housing must not be moved back into place by hand because this could impair the function of the mirror mechanism.
- Applies to: vehicles without power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact

- when maneuvering), you must move it back in place by hand.
- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Never fold power folding exterior mirrors* by hand. Only fold them in and out using the power controls.



Tips

If the power adjusting function malfunctions, the glass in both mirrors can be adjusted by pressing on the edge of it by hand.

Dimming the mirrors

Automatic dimming rearview mirror

► The interior and exterior mirrors dim automatically when light shines on them, for example from headlights on a vehicle behind you.

Λ

WARNING

- If the glass on an automatic dimming mirror preaks electrolyte can leak out. This liquid can irritate the skin, eyes and respiratory system. If there is contact with the fluid, flush immediately with plenty of water. Consult a physician if necessary.
- Repeated or long-term exposure to electrolyte fluid can lead to irritation of the airways, especially in people with asthma or other respiratory conditions. Take deep breaths immediately after leaving the vehicle or, if this is not possible, open all of the doors and windows as wide as possible.
- If electrolyte fluid comes into contact with the eyes, flush them thoroughly with plenty of clean water for at least 15 minutes and then seek medical attention.
- If electrolyte fluid comes into contact with the skin, flush the affected area with clean water for at least 15 minutes, and then clean with soap and water and seek medical attention. Clean affected clothing and shoes thoroughly before wearing again.
- If the fluid was swallowed and the person is conscious, flush the mouth with water for at

least 15 minutes. Do not induce vomiting unless this is recommended by medical professionals. Seek medical attention immediately.



Note

If the glass on an automatic dimming mirror breaks, electrolyte can leak out. This liquid damages plastic surfaces and paint. Clean this liquid as quickly as possible, for example with a wet sponge.



Tips

- If the light reaching the rearview mirror is obstructed, the automatic dimming mirror will not function correctly,
- The automatic dimming mirrors do not dim when the interior lighting is turned on or the reverse gear is selected.

Sun visors

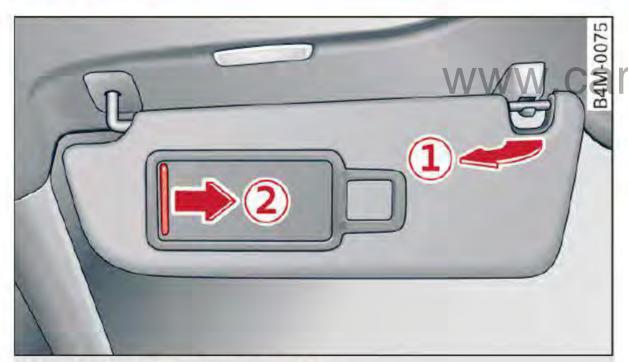


Fig. 41 Roof headliner: sun visor

Sun visor

The sun visors can be moved out of their brackets and turned toward the doors 1.

They can also be moved back and forth lengthwise in this position.

Vanity mirror

The mirror light switches on when the cover over the vanity mirror (2) opens.

Sunshade

Applies to: vehicles with manual sunshade



Fig. 42 Rear door: sunshade

Rear door sunshade

► Pull the sunshade out and attach it to the retainer on the upper door frame.

Windshield wipers

Switching the windshield wipers on

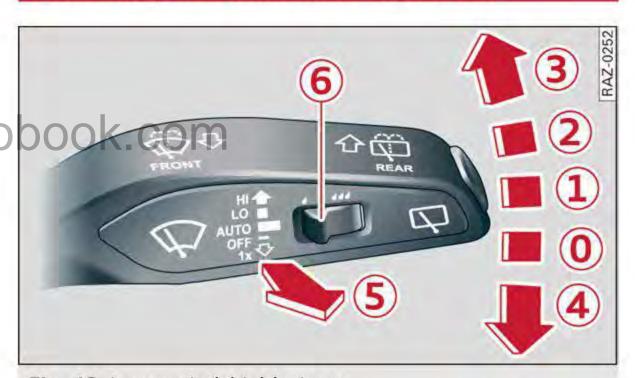


Fig. 43 Lever: windshield wipers



Fig. 44 Lever: rear window wiper

- ► Move the lever ♥ to the corresponding position:
- Windshield wipers off
- 1 Rain sensor/intermittent mode. The windshield wipers switch on once the vehicle speed

exceeds approximately 2 mph (4 km/h) and it is raining. The higher the sensitivity of the rain sensor that is set (switch 6 to the right), the earlier the windshield wipers react to moisture on the windshield. You can deactivate the rain sensor mode, which switches the interval mode on. In intermittent mode, you can adjust the interval time using the switch 6.

- ► Applies to: MMI: Select on the home screen: VEHICLE > Light & Visibility > Rain sensor.
- 2 Slow wiping
- 3 Fast wiping
- 4 Single wipe. If you hold the lever in this position longer, the wipers switch from slow wiping to fast wiping.
- (5) Clean the windshield (1). The number of wipes and afterwipes depends on how long the lever is held in position (5).

The wipers wipe one time after several seconds of driving to remove water droplets. You can switch this function off by moving the lever to position (5) within ten seconds of the afterwipe. The afterwipe function is reactivated the next time you switch the ignition on.

If you hold the lever in position (5) for longer than half a second, the edge wiping feature will be activated. This moves the windshield wipers closer to the edge of the windshield and performs an afterwipe to clean the residue that results from the wiping process from the edge of the windshield. The function is available when driving at speeds up to 75 mph (120 km/h).

The headlight washer system* operates only when the low beam headlights are on. If you move the lever to position (5), the headlights and the night vision assist camera* are cleaned at intervals.

Wipe the rear window
 The number of wipes depends on the windshield wiper movement.

The rear wiper automatically switches on when the reverse gear is selected and the front windshield wipers are on and running. (8) Clean the rear window Ф. The number of wipes depends on how long the lever is held in position (8). This may also clean the rearview camera, depending on the vehicle equipment.

Λ

WARNING

- The rain sensor is only intended to assist the driver. The driver may still be responsible for manually switching the wipers on based on visibility conditions.
- The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increases the risk of an accident. They can also cause wiper blade chatter.
- Properly functioning windshield wiper blades are required for a clear view and safe driving ⇒ page 58, Cleaning/changing wiper blades.



Note

- wiper blades are not frozen to the windshield. Switching on the windshield wipers when the blades are frozen to the windshield can damage the wiper blades.
- Prior to using a car wash, the windshield wiper system must be switched off (lever in position (i)). This prevents the wipers from switching on unintentionally and causing damage to the windshield wiper system.

(i)

Tips

blades regularly.

- The windshield wipers switch off when the ignition is switched off. You can activate the windshield wipers after the ignition is switched on again by moving the lever to any position. The single wipe function (lever
- tion is switched off.
 Worn or dirty windshield wiper blades result in streaking. This can affect the rain sensor function. Check your windshield wiper

in position (4) also functions when the igni-

- The washer fluid nozzles for the windshield washer system are heated when the ignition is on if the outside temperature is low.
- When stopping temporarily, such as at a traffic light, the speed of the windshield wipers automatically reduces by one level.

Cleaning/changing wiper blades

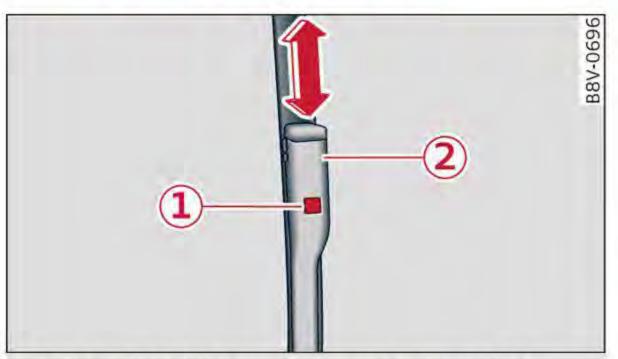


Fig. 45 Windshield wipers: changing the wiper blades

Wiper blade replacement position

- ► Switch off the ignition and hold the windshield wiper lever in position ④ ⇒ page 56, fig. 43 until the windshield wiper moves into the wiper blade replacement position.
- ▶ To bring the windshield wipers into the normal position, switch the ignition on and hold the windshield wiper lever in position ④ until the windshield wipers go back to the original position, or drive faster than 8 mph (12 km/h).

You can also turn the wiper blade replacement position on or off in the MMI:

- ► Switch the windshield wipers off (position ① ⇒ page 56, fig. 43).
- ▶ Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Wiper change position.

Cleaning the wiper blades

Requirement: the windshield wipers must be in the wiper blade replacement position.

- ► Fold the windshield wiper arm away from the windshield.
- ► For information on cleaning, see ⇒ table on page 271.

Replacing the wiper blades

Requirement: the windshield wipers must be in the wiper blade replacement position.

- ► Fold the windshield wiper arm away from the windshield.
- ► Hold the wiper blade firmly.
- ▶ Press the locking knob (1) on the wiper blade.
- ▶ Remove the wiper blade from the windshield wiper arm mount ②.
- ► Insert the new wiper blade into the mount on the wiper arm until it clicks into place.
- ▶ Place the wiper arm back on the windshield.
- ► Exit the wiper blade replacement position.

MARNING

- For safety reasons, the windshield wiper blades should be replaced once or twice each year.
- Dirty windshield wiper blades can impair vision, which increases the risk of an accident.

! Note

- The windshield wipers must only be lifted up when in the wiper blade replacement position. Otherwise, you risk damaging the paint on the hood or the windshield wiper motor.
- You should not move your vehicle or press the windshield wiper lever when the wiper arms are folded up from the windshield. The windshield wipers would move back into their original position and could damage the hood and windshield.

i Tips

- You can also use the wiper blade replacement position for other reasons, for example if you want to protect the windshield from icing by using a cover.
- You cannot activate the wiper blade replacement position when the hood is open.

Cleaning/changing the rear wiper blade

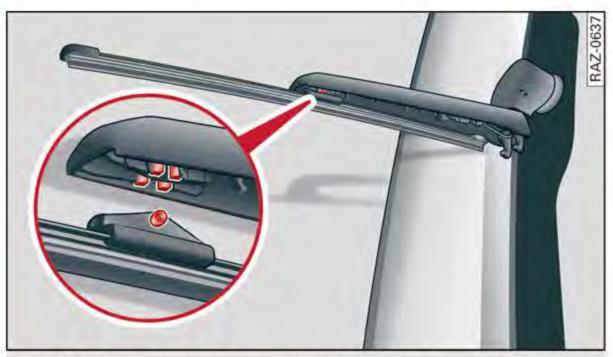


Fig. 46 Rear window wiper: installing the wiper blade

Cleaning the wiper blades

- ► Fold the wiper arm away from the rear window.
- ► For information on cleaning, see ⇒ table on page 271.

Removing the wiper blade

- ► Fold the wiper arm away from the rear window.
- ► Remove the wiper blade from its holder.

Installing the wiper blade

- ▶ Press the wiper blade mount into the retainer.
- ► Fold the window wiper arm back onto the rear owindow.

WARNING

For safety reasons, the windshield wiper blades should be replaced once or twice each year.

Messages

The following messages may appear depending on the vehicle equipment:

If the indicator light turns on, then there is a windshield wiper malfunction. The message that is also displayed indicates the cause and possible solutions. If one of the messages does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Automatic wipers: malfunction! See owner's manual

The light/rain sensor is malfunctioning. You can still control all functions that are not controlled

by the rain sensor using the windshield wiper lever. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Digital compass

Switching the compass on and off

Applies to: vehicles with digital compass

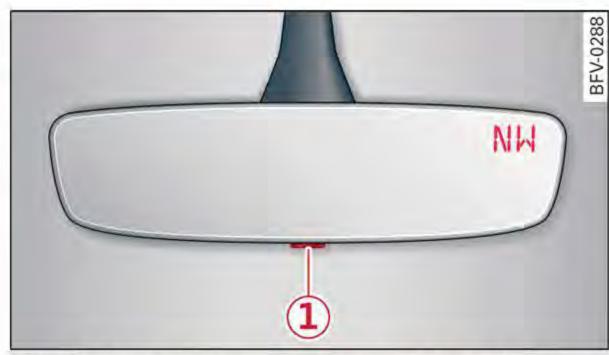


Fig. 47 Rearview mirror: digital compass is switched on

To turn the compass on or off, press the button 1 until the compass display in the mirror turns on or off.

The digital compass only works when the ignition is turned on. The directions are indicated with abbreviations: **N** (north), **NE** (northeast), **E** (east), **SE** (southeast), **S** (south), **SW** (southwest), **W** (west), **NW** (northwest).



Tips

To prevent inaccurate compass readings, do not bring any remote controls, electrical devices or metallic objects near the mirror.

Adjusting the magnetic zone

Applies to: vehicles with digital compass

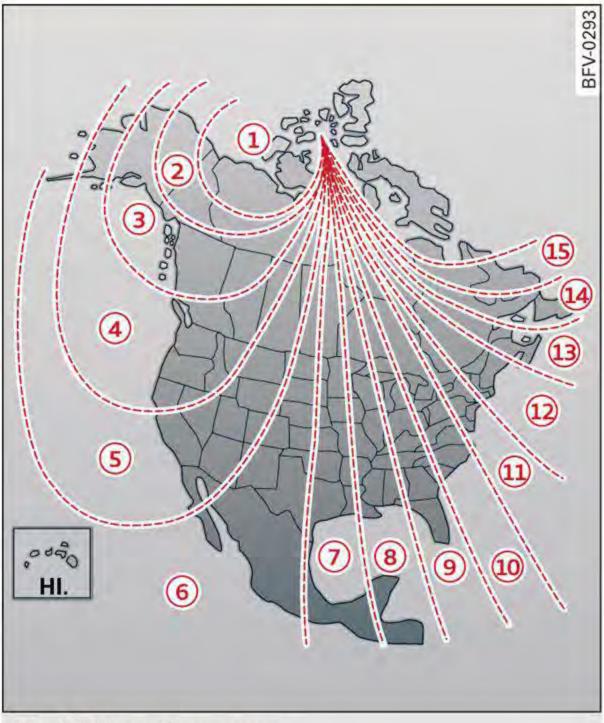


Fig. 48 Magnetic zone map

The magnetic zone must be adjusted correctly for robook. Com the compass to read accurately.

- ▶ Press and hold the button ① ⇒ page 59, fig. 47 until the number of the magnetic zone appears in the interior rearview mirror.
- ▶ Press the button ① repeatedly to select the correct magnetic zone. The selection mode turns off after a few seconds.

Calibrating the compass

Applies to: vehicles with digital compass

You must recalibrate the compass if it does not display the correct direction.

- ▶ Press and hold the button ① until a C
 ⇒ page 59, fig. 47 appears in the rearview mirror.
- ➤ Drive in a circle at about 6 mph (10 km/h) until a direction is displayed in the rearview mirror.

Λ

WARNING

To reduce the risk to yourself and other drivers, calibrate the compass in an area where there is no traffic.

Sitting correctly and safely

Correct passenger seating position

General information

As the driver, you are responsible for making sure every passenger is sitting correctly in their seat and maintaining this seating position while driving. Make sure that:

- Every passenger in the vehicle has adjusted his or her seat correctly ⇒ page 61
- The steering wheel is adjusted correctly
 ⇒ page 64
- The mirrors are adjusted so that there is a sufficient view of the area around the vehicle
 ⇒ page 54
- Every passenger in the vehicle has his or her head restraint adjusted correctly ⇒ page 65
- Every passenger in the vehicle has his or her safety belt fastened correctly ⇒ page 66
- The activation status of the front passenger's airbag is suitable for the passenger in the front passenger's seat ⇒ page 72
- Children are secured in suitable child safety seats that are secured to appropriate vehicle seats ⇒ page 74. Read and observe the important safety information pertaining to the use of child safety seats on the front passenger's seat ⇒ ↑ in General information on page 74.

Examples of incorrect seating positions

Safety belts can only provide its optimal protection when they are routed correctly. Incorrect seating positions significantly reduce the protective functions of the safety belts and increase the risk of injury due to incorrect belt routing.

The following list includes examples of seating positions that could be dangerous for all vehicle occupants. This is not a complete list. Audi would simply like to increase your awareness of the topic. The following points apply when the vehicle is in motion:

- Never stand inside the vehicle.
- Never stand on the seats.

- Never kneel on the seats.
- Never tilt your backrest too far back.
- Never lean against the instrument panel.
- Never lie down on the rear bench seat.
- Never sit only on the front section of the seat.
- Never sit sideways on the seat.
- Never lean against the window.
- Never place your feet out of the window.
- Never place your feet on the instrument panel.
- Never place your feet on the seat cushion.
- Never ride in the footwell.
- Never sit on the armrests.
- Never drive or ride in a seat without fastening your safety belt.
- Never ride in the luggage compartment.

Λ

WARNING

Incorrect seating positions, failure to wear a safety belt, or being too close to an airbag increase the risk of serious or fatal injury to vehicle occupants, especially if the airbags deploy and come into contact with occupants who are not seated correctly. Note the important information and warnings in the chapters for the topics given above.

(i)

Tips

- If you or other vehicle passengers have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

Front seats

General information

Make sure that:

 You can press the pedals down completely while your legs are slightly bent

Sitting correctly and safely

- The distance between your upper body and the steering wheel or instrument panel is at least 10 inches (25 cm)
- The distance between your knees and the instrument panel is at least 4 inches (10 cm)
- Your thighs are lightly supported by the front surface of the seat
- The backrest is in an upright position and your back is resting against it
- You have a sufficient view of the area around the vehicle
- You have a clear view of the instrument cluster, indicator lights, and the head-up display*

Seat settings menu: quick access

Applies to: vehicles with seat settings in the MMI

If you press on the image of the driver's or front passenger's seat in the climate control system menu ⇒ page 86, fig. 79 ①, you will go directly to the seat settings for that seat.

WARNING

- If you are too close to the steering wheel or instrument panel, the airbag system cannot provide the optimal protection, which in creases the risk of injury and death.
- To reduce the risk of injury in the event of sudden braking maneuvers or accidents, never drive with the backrest reclined very far. The airbag system and safety belts can only provide optimal protection when the backrest is in an upright position and the driver is wearing the safety belt correctly. If the backrest is angled back too far, the safety belt can shift to soft areas of the body, such as the stomach, which increases the risk of injury.
- To reduce the risk of an accident, only adjust the seats when the vehicle is stationary.
- Be careful when adjusting the seat. Lack of control or attention when adjusting can result in injuries due to pinching to vehicle occupants both in the front seats and rear seats.
- Never place objects in the driver's footwell.
 Objects could shift and enter the area around the pedals, which could prevent you from using them. You would then be unable

- to use the pedals if sudden driving or braking maneuvers were needed, which increases the risk of an accident.
- Make sure that the floor mats are always securely attached.
- To reduce the risk of an accident, never place additional floor mats or other floor covers over the installed floor mats, because this reduces the pedal's range of motion and can impair pedal operation.
- To reduce the risk of injury, never place your feet on the instrument panel, out of the window, or on the seat surfaces. This also applies to passengers in the rear seats.

! Note

To reduce the risk of damage, be very careful when adjusting the seat to make sure the head restraints do not come into contact with the headliner or the sunroof*.

i Tips

At the same time, only move the respective seat using the controls.

Adjusting the front power seats

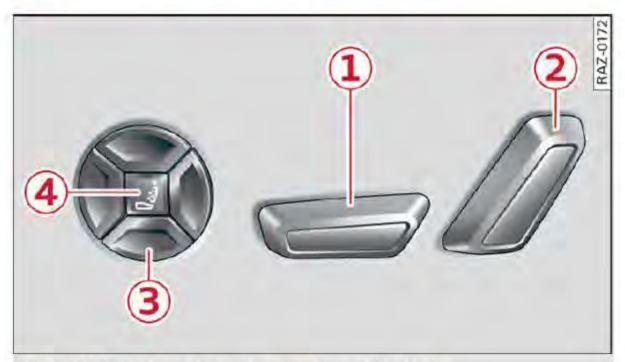


Fig. 49 Front seat: seat adjustment buttons

You can adjust the basic settings using the buttons.

The settings depend on the vehicle equipment.

Adjusting the seat position

► To move the seat forward or backward, push the button 1 forward or backward.

- ► To adjust the seat upward or downward, push the rear section of the button ① upward or downward.
- ► To adjust the seat surface, press the front part of the button 1 upward or downward.

Adjusting the backrests

► To move the backrest forward or backward, press the button ② forward or backward.

Adjusting the lumbar support

► To adjust the lumbar support, press the button ③ in the desired direction.

Massage function

Switching the massage function on or off 4. Setting the massage type and intensity \Rightarrow page 63.



WARNING

The power front seats can also be adjusted when the ignition is switched off. To reduce the risk of injury, children should never be left unattended in the vehicle.

www.caro

Adjusting the front seats in the MMI

Applies to: vehicles with seat settings in the MMI



Fig. 50 Seat setting

You can adjust additional settings in the MMI.

The settings and the number of menus and buttons depend on the vehicle equipment.

Operating

Applies to: MMI

- ► Select on the home screen: VEHICLE > Seats.
- ► To access the various menus ③, swipe to the left or right.
- ► To display the various seats, press > or < ④.

The red coloring in the symbol (5) indicates which seat is selected.

Seat setting

Applies to: MMI

- ► To select a seat setting, press 1 if necessary.
- Press the respective arrow 2 until the desired position is reached.

Massage

See ⇒ page 63

Additional seat settings

See ⇒ page 63

Front seat massage function

Applies to: vehicles with massage function

Selecting the massage function

Applies to: MMI

► To open the **Massage** menu, press the button page 62, fig. 49.

Switching the massage function on or off

Applies to: MMI

- ► To switch the massage function on or off, press the 🔄 button 👍 ⇒ page 62, fig. 49. Or:
- Press Start/Stop on the MMI.

Setting the massage type and intensity

Applies to: MMI

- To adjust the massage type, press the desired button on the MMI, for example Wave.
- ► To adjust the intensity of the massage, press Intensity on the MMI repeatedly until the desired level is reached.



Tips

The massage function switches off automatically after approximately 10 minutes.

Additional settings in the MMI

You can adjust additional settings and switch functions on or off in the MMI.

▶ Applies to MMI: Select on the home screen: VE-HICLE > Seats > Additional seat settings.

Depending on the vehicle equipment, the following options may be available.

Reset seat position

You can adjust the position of the front passenger's seat to match the driver's seat.

Driver seat entry assistance/Front passenger seat entry assistance

Entry assistance makes it easier to enter or exit the vehicle.

Adjusting the front passenger's seat from the driver's seat

Applies to: vehicles with front passenger seat adjustment

You can adjust the front passenger's side with the driver's seat buttons.

Applies to: MMI:

- ► Select on the home screen: **VEHICLE** > **Seats**.
- ► To display the various seats, press > or <.
- ► To switch on the function, press the 🕹 button. The lower edge of the button will turn red.

After you have switched on the function, you can adjust the front passenger's seat using the driver's seat buttons ⇒ page 62, fig. 49.



Tips

The function switches off automatically when you exit the menu.

Front center armrest

Applies to: vehicles with a front center armrest

The front center armrest is located between the front seats.

Adjusting the center armrest

- To adjust the armrest forward or backward, move the armrest in the desired direction.
- ➤ To adjust the angle, raise the armrest from the starting position in stages.
- ➤ To bring the armrest back into the starting position, raise it out of the top level and fold it back down.



WARNING

In certain positions, the front center armrest can interfere with the driver's arm movement, which increases the risk of injury.

Steering wheel

General information

Make sure that:

- The distance between your upper body and the steering wheel is at least 10 inches (25 cm)
- Your arms are bent slightly at the elbows
- You have a sufficient view of the area around the vehicle and you have a clear view of the instrument cluster and head-up display*.
- You are always holding the steering wheel with both hands on the outer edge at the sides (9:00 and 3:00 position) when driving

Λ

WARNING

- To reduce the risk of an accident, make sure the steering wheel is adjusted correctly and cannot be moved out of position before you start to drive.
- If you are too close to the steering wheel, the driver's airbag cannot provide optimal protection, which increases the risk of injury or fatality.
- NWW.Caro

 Never hold the steering wheel in the 12:00

 position or in any other way, such as holding the center of the steering wheel. Otherwise, your arms, hands, and head could be injured in the event that the driver's airbag deploys.

Power steering wheel position adjustment

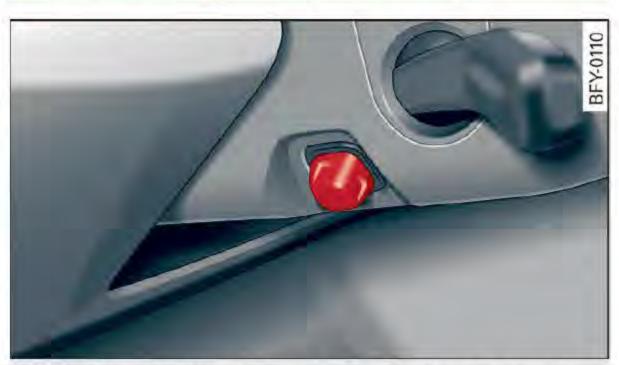


Fig. 51 Steering column: switch for adjusting the steering wheel position

The steering wheel position can be adjusted electrically up/down and forward/back.

➤ To adjust the steering wheel, press the button in the direction in which you would like the steering wheel to move.

The steering wheel can also be adjusted when the ignition is switched off.

Head restraints

General information

Applies to: vehicles with adjustable head restraints

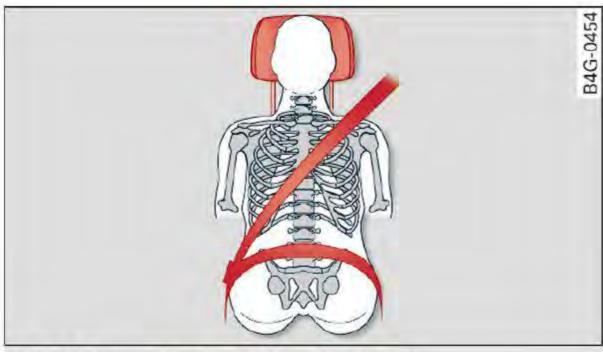


Fig. 52 Correctly-adjusted head restraint

Make sure that:

- The upper edge of the head restraint is as even as possible with the top of your head
- The head restraint is as close as possible to the back of the head
- The head restraints on the occupied rear seats are positioned as high as possible.

WARNING

- There is one head restraint for each seat. All vehicle occupants must adjust the head restraint correctly before every trip. Having head restraints that are not adjusted correctly or not installed in the vehicle increases the risk of a neck injury during sudden or unexpected driving or braking maneuvers or in a collision.
- Only remove the rear seat head restraints if it is necessary to install a child safety seat ⇒ page 74. Stow the removed head restraints securely, for example in the luggage compartment. Reinstall the head restraints immediately once the child safety seat has been removed. Driving without head restraints increases the risk of serious neck injuries.

Front head restraints

Applies to: vehicles with adjustable head restraints

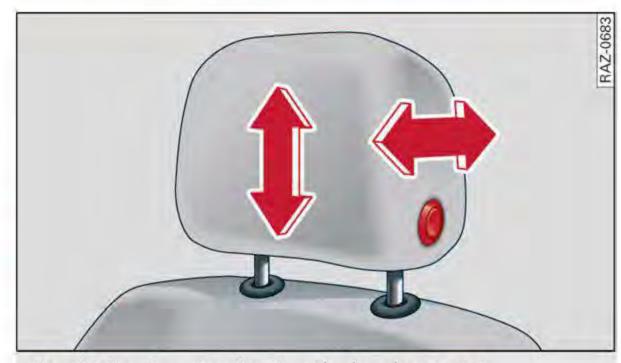


Fig. 53 Front seat: adjusting the head restraint

Adjusting the head restraints

- ► To adjust the head restraint upward or forward, slide it until it locks into place.
- ► To adjust the head restraint downward or backward, press the button on the side and slide the head restraint. Release the button and slide the head restraint farther until it locks into place.

Rear head restraints

Applies to: vehicles with adjustable head restraints

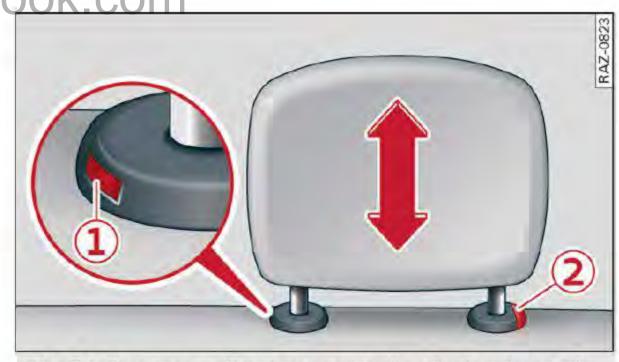


Fig. 54 Rear seat: adjusting or removing the head restraint

Adjusting the head restraints

- ► To adjust the head restraint upward, slide it until it locks into place.
- ➤ To adjust the head restraint downward, press the button ② and slide the head restraint. Release the button and slide the head restraint farther until it locks into place.

Removing the head restraints

Applies to: vehicles with removable head restraints

- ► Applies to: vehicles with folding backrests: Fold the backrest forward slightly ⇒ page 84.
- Move the head restraint upward all the way.

- ► Insert a suitable object, such as the extended vehicle key or mechanical key, into the release point 1 on the inside or outside of the base.
- ▶ Press the button ② and pull the head restraint out of the backrest ⇒ in General information on page 65.

Installing the head restraints

Applies to: vehicles with removable head restraints

- ► Fold the backrest forward slightly ⇒ page 84.
- ► Slide the posts on the head restraint down into the guides until the posts click into place.
- ► Press the button ② and slide the head restraint all the way down. It should not be possible to remove the head restraint from the backrest without pressing the button.

Safety belts

General information

Each seat is equipped with a three-point safety belt. Safety belts that are worn correctly are the most effective way to reduce the risk of serious or fatal injuries in a collision. Therefore, wear your safety belt correctly and make sure that all vehicle passengers are also wearing their safety belts correctly when the vehicle is moving.

Even though your vehicle is equipped with an air-bag system, every vehicle passenger must still always wear the appropriate safety belt. In addition to their normal protective function, safety belts also hold vehicle occupants in the correct seating position in the event of a collision so that the air-bags can deploy correctly and provide additional protection. Safety belts provide protection during collisions when the airbags do not deploy or if they have already deployed.

\triangle

WARNING

The risk of serious or fatal injury increases if the safety belt is not fastened, if it is worn incorrectly, or if it is damaged.

 All vehicle occupants, including the driver, must fasten their safety belts correctly before every trip and must always keep their safety belts fastened during the trip, regardless of whether the seat is equipped

- with an airbag or not. This also applies to children that are seated in a child safety seat that is appropriate for their weight and age and that is secured with a safety belt.
- In the event of a collision, vehicle occupants that are not wearing safety belts could be propelled through the vehicle interior and collide with vehicle components, such as the steering wheel, instrument panel, windshield, or doors. In some situations, vehicle occupants could also be ejected from the vehicle. Vehicle occupants in the rear seats who do not wear safety belts not only endanger themselves, but also other people in the vehicle.
- Only one person may be fastened with a safety belt at a time. Never secure more than one person, including children, with a single safety belt.
- Never allow children or infants to ride on another person's lap and be belted into the safety belt with them.
- Insert the belt buckle only in the belt latch belonging to the corresponding seat, so that the protective function is not impaired.
- To ensure the maximum protective function of the safety belts, all vehicle passengers must sit in the correct seating position
 ⇒ page 61.
- Check the condition of your vehicle's safety belts regularly ⇒ page 271. If you find damage to the belt webbing, the belt connections, the retractor, or the buckle, have the damaged safety belt replaced by an authorized Audi dealer or authorized Audi Service Facility.
- The safety belts must not be removed or modified in any way. Do not attempt to repair the safety belts yourself.
- Safety belts that are strained during an accident must be replaced by an authorized
 Audi dealer or authorized Audi Service Facility.

Correct safety belt positioning

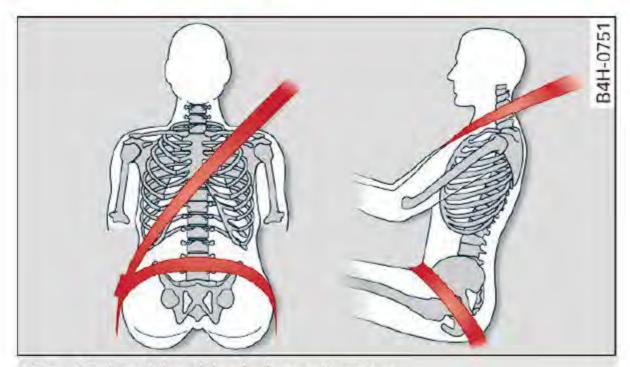


Fig. 55 Lap/shoulder belt positioning



Fig. 56 Safety belt positioning for pregnant women

Fastened safety belts only offer optimal protection during an accident and reduce the risk of serious injury or death when they are positioned correctly. Furthermore, the correct safety belt position holds the vehicle occupant in place so that a deployed airbag can provide maximum protection. Therefore, always fasten the safety belt and make sure it is positioned correctly \Rightarrow fig. 55.

To ensure the safety belt is positioned correctly, make sure of the following points:

- The lap portion of the safety belt must be located across the lap.
- The shoulder portion of the safety belt must rest over the center of the shoulder.
- The safety belt must always rest flat and securely on the body.

For pregnant women, the safety belt must rest evenly across the chest and as low and flat as possible on the lap, so that no pressure is applied to the lower abdomen. This should be done throughout the entire pregnancy ⇒ fig. 56.

Λ

WARNING

Incorrect safety belt positioning can cause serious injury in the event of an accident or during sudden braking or driving maneuvers.

- Never drive with the backrest reclined extremely far. The more the backrest is tilted back, the greater the risk of injury due to the safety belt being routed incorrectly.
- The safety belt itself or a loose safety belt can cause serious injuries if it shifts onto soft areas of the body, such as the stomach.
- The shoulder portion of the safety belt must lie over the center of the shoulder and chest, and never under the arm, behind the back, or across the neck or face.
- The lap portion of the safety belt must lie across the lap and never over the stomach.
- The safety belt must lie flat and securely on the upper part of the body and the lap.
- The belt webbing must not be pinched or twisted, or rub against sharp edges.
- If the safety belt height is set incorrectly and/or the safety belt is routed incorrectly, then the safety belt's protective function will be impaired in the event of an accident. Make sure the safety belt is at the right height and is routed correctly for the passenger using it.
- A safety belt that is too loose may lead to injuries during an accident, because your body will move farther forward due to kinetic energy and will be stopped abruptly by the belt.
- Heavily bulky, loose clothing (for example, a coat over a sports jacket) may prevent the seat and safety belts from functioning correctly.
- Do not position the safety belt over hard or breakable objects (such as glasses, pens, etc.).
- The lap belt portion of the safety belt must sit as low as possible on the lap of pregnant women and lie flat under the belly.



Note

Make sure that there are no hook-and-loop fasteners or sharp objects such as zippers or

rivets on clothing in the area where the safety belt is worn. Otherwise, the safety belt could be damaged.

Fastening and unfastening safety belts

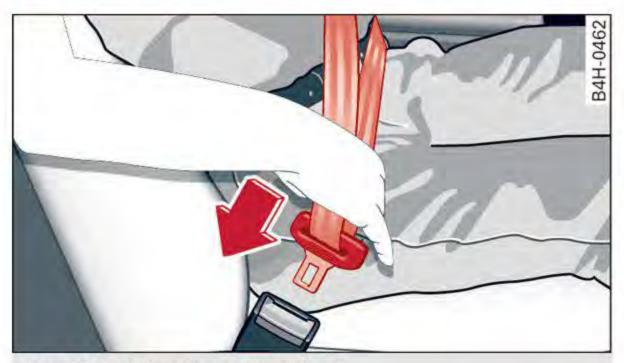


Fig. 57 Belt buckle and belt latch



Fig. 58 Releasing the belt buckle from the belt latch

Observe the safety precautions \Rightarrow page 66.

Fastening the safety belt

- ► Pull the safety belt by the belt buckle evenly across your chest and lap.
- Insert the belt buckle in the belt latch belonging to the seat until it audibly engages
 ⇒ fig. 57.
- ▶ Pull on the belt to make sure that the belt is securely locked in the latch.

Unfastening the safety belt

- ▶ Press the red button on the belt latch ⇒ fig. 58.
 The belt buckle will pop out.
- ► Guide the belt back by hand so that the safety belt can roll up more easily.

Safety belt monitoring system

- If the indicator light turns on or flashes, a front safety belt is not fastened or it has been unfastened while driving. There may be additional audible warning signals.

Depending on the equipment, the safety belts in the rear may also be monitored using the following indicator lights:

- If this indicator light turns on, the safety belt for the corresponding rear seat is not fastened.

- If this indicator light turns on, the safety belt for the rear seat has been fastened.

Adjusting the height of the safety belt

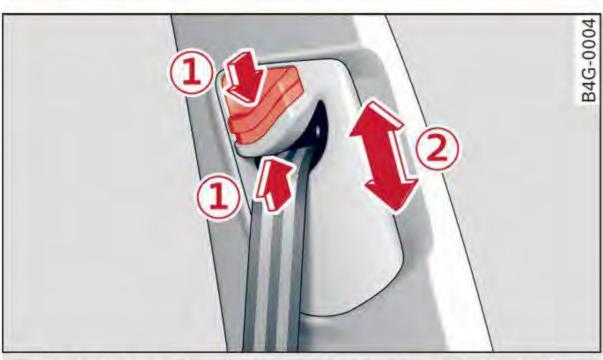


Fig. 59 Belt height adjustment for the front seats - safety

- To move the belt higher, slide the safety belt relay ② upward.
- ► To move the belt lower, press the release button 1 and slide the safety belt relay 2 downward.
- ► To check if the safety belt relay is securely locked in place, pull firmly on the belt.



Tips

You can also adjust the height of the front seats to change the position of the safety belts.

Additional safety belt functions

Belt retractor lock

The safety belts on the rear seats and on the front passenger seat are equipped with a belt retractor lock.

► If you secure a child safety seat with a safety belt, the belt retractor lock on the safety belt

- may need to be activated. Follow the instructions from the child safety seat manufacturer.
- ► When a vehicle passenger has fastened a safety belt, the belt retractor lock should not be activated. If the belt retractor lock has been activated unexpectedly, deactivate it.

Deactivating or activating the belt retractor lock ⇒ page 77.

Safety belt retractor

The safety belts are equipped with an automatic belt retractor. This automatic retractor allows the safety belt to be pulled all the way out when the belt is pulled slowly. However, the automatic retractor locks during sudden braking maneuvers. It also locks the belts when accelerating, driving uphill, and driving around curves.

Belt force limiter

Safety belts with belt force limiters reduce the force placed on the body by the safety belts during a collision.

Belt retractor

After unfastening the safety belt, the electric motor in the reversible belt tensioner will roll the belt up.

Safety belt pretensioners

Safety belts may be tightened with reversible belt tensioners when you start driving and in certain driving situations. If the safety belt is too loose, it will be tightened so that the belt will rest closer to the body.

In some collisions, pyrotechnic belt tensioners may secure the safety belts so that they cannot loosen. This reduces forward movement by the vehicle passengers.

Λ

WARNING

The pyrotechnic system can only provide protection during one collision. If the pyrotechnic belt tensioners deploy, the pretensioning system must be replaced by an authorized Audi dealer or authorized Audi Service Facility.



Tips

Smoke may be released when pyrotechnic belt tensioners deploy. This is not a sign of a vehicle fire.

Memory function

General information

Applies to: vehicles with memory function

With the memory function, you can save and call up seat profiles using the memory buttons in the door trim panel.

Depending on vehicle equipment, some settings such as the driver's seat and exterior mirror position can be stored.

Storing and recalling a seat profile

Applies to: vehicles with memory function

The memory function buttons are located in the door trim panel.

Storing a seat profile

- Press the SET button. If the LED in the button turns on, a seat profile can be stored.
- ▶ Push one of the numbered memory buttons. A tone confirms that the settings were stored.

Accessing a seat profile

- ▶ While the driver's or front passenger's door is open and the ignition is switched off, press the memory button once briefly. The seat will be fully adjusted to the settings in the seat profile.
- ► If the driver's/front passenger's door is closed or the ignition is switched on, press and hold the memory button until the seat profile is completely set.

\triangle

WARNING

- To reduce the risk of an accident, the seat setting can only be recalled when the vehicle is stationary.
- In an emergency, the recall process can be canceled by pressing the seat adjustment button on that seat.

Airbag system

General information

\triangle

WARNING

- If you have not fastened your safety belt, you are in an incorrect seating position, or you are too close to the airbag system, the airbag system will not be able to protect you. This increases the risk of serious or fatal injuries. Make sure that every vehicle passenger has their safety belt correctly fastened and is sitting in a correct seating position ⇒ page 61. This is necessary regardless of whether the seat is equipped with an airbag or not.
- Never place your feet on the instrument panel, out of the window, or on the seat surfaces. To help ensure that the airbag system can deploy correctly, never bend forward or lean on the door or the side window. Otherwise, serious and possibly fatal injuries can occur if the airbags deploy.
- People, animals, or objects between the passengers and the airbag system can interfere with the correct deployment of the airbag or can be thrown through the vehicle interior, increasing the risk of serious or fatal injuries. Make sure that nothing is located between the vehicle occupants and the airbag system. Do not secure or transport any objects within the deployment zone of the airbag systems, especially on the steering wheel, on the instrument panel, on the doors, on the windows, or in the footwell.
- Never put stickers on the airbag system covers or cover them with any objects.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- You must not use seat or protective covers that are not specifically approved for use on Audi seats with side airbags. Since the side airbags deploy from the seat backrest, such

- covers could impair the protective function of the side airbags.
- Damage to the original seat covers in the airbag deployment area must always be repaired by an authorized Audi dealer or authorized Audi Service Facility.
- Airbag system components are installed at various locations in your vehicle. Incorrect work or repairs on the vehicle could damage the airbag system components or impair their functionality. This may prevent the airbags from deploying or cause them to deploy incorrectly in the event of an accident, which increases the risk of serious or fatal injuries. Only have an authorized Audi dealer or authorized Audi Service Facility make repairs or modifications to a vehicle.
- The airbag system can only provide protection during one collision. If there is another collision, the airbag system will not deploy again. If the airbag system has deployed, have it replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.
- Fine dust may appear if the airbags deploy. This is completely normal and does not indicate a fire in the vehicle. The fine dust can irritate the skin and mucous membranes in the eyes and can cause difficulty breathing, particularly for individuals who have or have had asthma or other health issues that affect breathing. Exit the vehicle or open the windows or doors to get access to fresh air.



Tips

If you are transporting children in the vehicle, read the information and follow the safety precautions ⇒ page 74.

Safety systems monitoring

The indicator light in the instrument cluster monitors the safety systems such as the airbags (including the control modules, sensor, and wiring) and the belt tensioners. It turns on when you switch the ignition on and turns off after several seconds.

If the indicator light does not turn on when the ignition is switched on, does not turn off after several seconds, or turns on or flashes while driving, there may be a malfunction in one of the safety systems. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

A V

WARNING

Have the malfunction in the safety systems inspected immediately. Otherwise, there is a risk that the systems may not activate during an accident, which increases the risk of serious or fatal injury.

Description

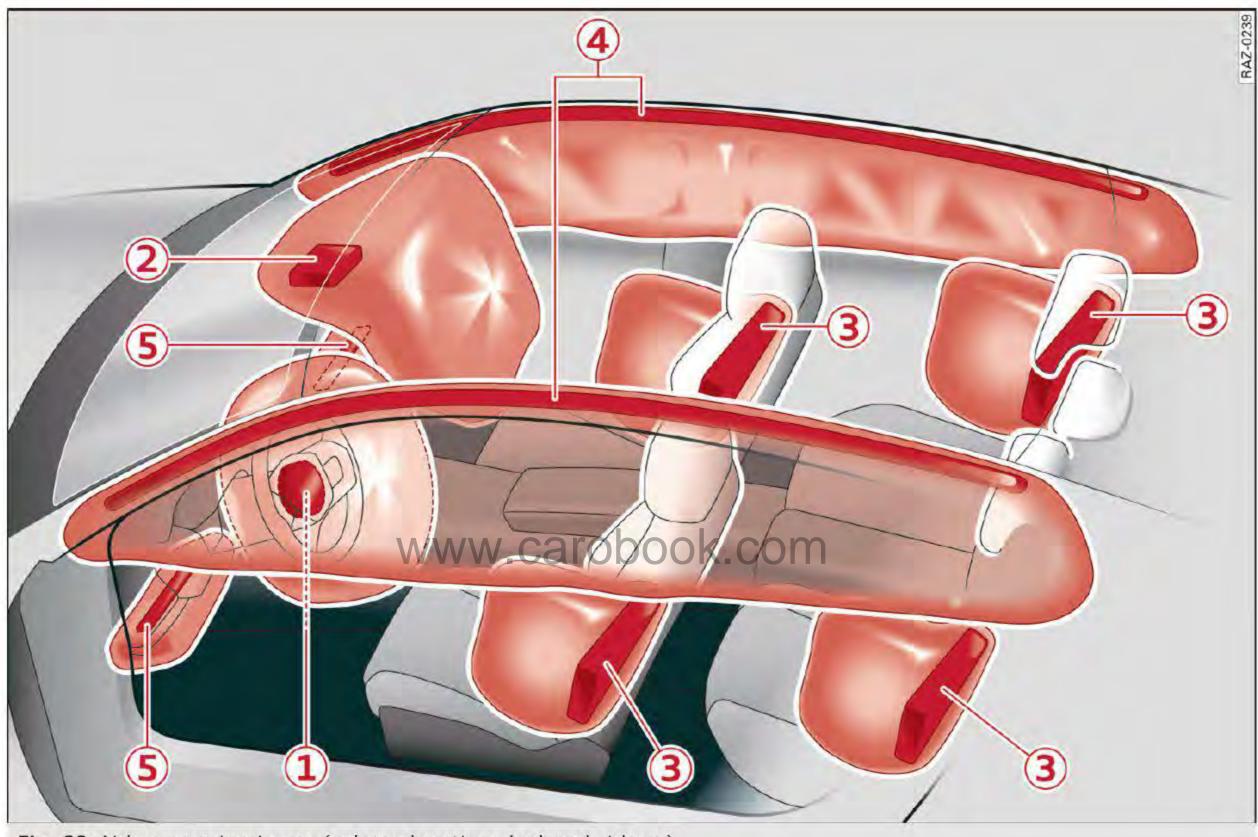


Fig. 60 Airbag overview image (enlarged section: deployed airbags)

The locations of the airbags are labeled with "AIRBAG". The following airbags are installed in your vehicle:

- 1 Driver's airbag
- 2 Front passenger's airbag
- Front and rear side airbags, if applicable
- 4 Head curtain airbag with ejection mitigation
- S Knee airbags

Airbags offer the best possible protection in your vehicle during an accident when they are used together with safety belts that are fastened correctly, and when passengers are sitting in the correct seating position. Airbags are a supple-

mentary restraint system and do not replace safety belts.

Airbags may deploy during front-impact, side-impact, or rollover accidents.

The deployment area for the airbag system cannot be defined for every situation, since the circumstances surrounding accidents can vary widely. Factors that play an important role include the condition of the object that the vehicle hits (hard or soft), the angle of impact, vehicle speed, etc. The deciding factor for the deployment of the airbag system is the deceleration that occurs during an accident. Sensors in the vehicle are designed to detect the severity of an accident in

conjunction with the control module, and to provide a targeted and timely deployment of the restraint system. If the vehicle deceleration that is measured during an accident is below the specified reference values in the control module, then the airbags will not deploy, even though the vehicle may be severely damaged from the accident. In these cases, the vehicle occupants will be protected by the safety belts if they are fastened and worn correctly.

The deployment of the front passenger's airbag will depend on the occupancy of the seat ⇒ page 72.

Each deployed airbag is filled with gas. When this occurs, the airbag covers open and the airbags unfold with great force into the deployment zone within milliseconds. Inflated airbags reduce the movement of passengers wearing safety belts in the direction of the impact and thus help to reduce the risk of injury. They can help to protect the head, upper body, and lap, for example. However, there is the possibility that airbag deployment can cause injuries.

The airbag system only works when the ignition is turned on.

If you or other vehicle passengers have physical limitations that prevent sitting in a correct position, modifications to the vehicle may be necessary. For more information, contact an authorized Audi dealer or authorized Audi Service Facility, or call Audi customer support at 1-800-822-2834.

(i)

Tips

The side curtain airbags in your vehicle have ejection mitigation functions. This reduces the risk of being ejected from the vehicle interior during an accident, especially in the event of a vehicle rollover.

Advanced airbag system



Fig. 61 Headliner: indicator light to display the status of the front passenger's airbag

The Advanced Airbag System in your vehicle has been certified to comply with the requirements of the United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured. According to these requirements, the front Advanced Airbag System on the passenger's side has been certified for "suppression" for infants approximately 12 months old and younger, and for "low risk deployment" for children aged 3 to 6 years old (as defined in the standard).

The advanced airbag system will activate or deactivate the front passenger's airbag based on the occupancy of the seat. If a front airbag deploys during an accident, the deployment force will adapt to the passenger.

Components

The advanced airbag system consists of the following components:

- Front airbags in the steering wheel and in the instrument panel on the front passenger's side: these can protect the front passengers during an accident
- Passenger occupant detection sensor in the front passenger's seat: this detects if the front passenger's seat is occupied (for example, by a person or a small child in a child safety seat)
- Seat position sensors on the front seats: these determine the distance between the seat and the steering wheel or instrument panel
- Sensors in the front safety belt latch: these detect if the safety belts are fastened

- PASSENGER AIR BAG OFF % ON w indicator light in the headliner: this indicates if the front passenger's airbag is activated or deactivated
- Indicator light in the instrument cluster: this monitors the function of the Advanced Airbag System components to ensure they are functioning correctly

How the components function together

The passenger occupant detection sensor in the front passenger's seat detects if the front passenger's seat is occupied. The passenger occupant detection sensor measures the electrical capacity on the front passenger's seat. The passenger's airbag is activated or deactivated depending on the electrical capacity that is measured.

The passenger's airbag is activated if:

- The electrical capacity is higher than the threshold stored in the control module
- The electrical capacity is the same as or greater than the electrical capacity of a typical adult

The passenger's airbag is deactivated if:

- The electrical capacity is lower than the threshold stored in the control module
- The electrical capacity is the same as or less than the electrical capacity of a typical oneyear-old child in a child safety seat that has been used for certification in accordance with FMVSS 208

If the front passenger's airbag is activated, the PASSENGER AIR BAG ON (a) indicator light will turn on. If the front passenger's airbag is deactivated, the PASSENGER AIR BAG OFF (%) indicator light will turn on.

The deployment force of the front airbags adapts based on whether or not the safety belt is used and the distance between the seat and the steering wheel/instrument panel. For example, if a person is too close to the front airbag, the front airbag will deploy with less force to help reduce the risk of injury.

Meaning of PASSENGER AIR BAG OFF № ON indicator light

When the ignition is switched on, the system detects whether the front passenger's seat is occupied. PASSENGER AIR BAG OFF 20N will turn on for several seconds during this process. Then it will indicate whether the front passenger's airbag is activated or deactivated.

- PASSENGER AIR BAG ON : the front passenger's airbag is activated and could deploy in the event of an accident.

If a change to the occupancy status of the front passenger's seat is detected PASSENGER AIR BAG OFF 2 ON will flash for several seconds and will then display the status of the front passenger's airbag.

Always make sure the indicator light corresponds to the occupancy of the front passenger's seat.

- An adult or individual of similar size in the front passenger's seat: the front passenger's airbag must be activated, therefore PASSENGER AIR BAG ON must remain turned on.
- An individual of smaller size (for example, an adolescent or small adult) in the front passenger's seat: the front passenger's airbag must be activated, so PASSENGER AIR BAG ON must stay on.
- Child in a child safety seat on the front passenger's seat: the front passenger's airbag must be deactivated, so PASSENGER AIR BAG OFF № must stay on.
- Front passenger's seat not occupied: the front passenger's airbag must be deactivated, so PASSENGER AIR BAG OFF № must stay on.

⚠ WARNING

 An adult or a person with a small stature (such as a young person or small adult) seated on the front passenger's seat will not be protected by the passenger's airbag in the event of a collision if the passenger's airbag is deactivated. This increases the risk of injury and death. Always make sure that PASSENGER AIR BAG ON @ remains on while driving. If

PASSENGER AIR BAG ON does not turn on, make sure the front passenger is sitting correctly in the seat ⇒ page 61 and that there is nothing covering the front passenger's seat (such as blankets or pillows). If PASSENGER AIR BAG ON still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

– A child in a child safety seat on the front passenger's seat - especially in a rear-facing child safety seat - can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious or fatal injury. Always secure child safety seats on the rear seats. If special circumstances require the use of a child safety seat on the front passenger's seat, always make sure that PASSENGER AIR BAG OFF ☼ stays on while driving. If

PASSENGER AIR BAG OFF № does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If PASSENGER AIR BAG OFF № still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspected.

– Fluids, electronic devices, or mechanical damage on the front passenger's seat may cause the front passenger seat occupant detection to malfunction. The system may then incorrectly detect if the front passenger's seat is occupied. As a result, it could deploy the front passenger's airbag incorrectly or fail to deploy it, which increases the risk of serious or fatal injury. Make sure that no wet objects (such as a wet hand towel) and no fluids come into contact with the front passenger's seat cushion. If the front passenger's seat becomes wet, dry it immediately. Make sure no electronic devices (such

- as a laptop or a retrofitted seat heater) are on the front passenger's seat. Do not transport any objects on or under the front passenger's seat.
- Seat covers or protective covers may prevent the advanced airbag system from correctly detecting child safety seats or passengers in the front passenger's seat. You must not use seat covers or protective covers on the front passenger's seat that are not specifically approved for use on Audi seats with an advanced airbag system.

Child safety seats

General information

When installing and using child safety seats, follow the information in this Owner's Manual, the applicable state and federal regulations, and the manufacturer instructions for the child safety seat.

You can also obtain useful and current information from the following sources:

U.S. National Highway Traffic Safety Administration

http://www.nhtsa.gov http://www.safercar.gov

National SAFE KIDS Campaign

http://www.safekids.org

SafetyBeltSafe U.S.A.

http://www.carseat.org

Transport Canada Information Centre

http://www.tc.gc.ca/roadsafety

Audi Customer Experience Center

https://www.audiusa.com/help/contact-us https://www.audi.ca/ca/web/en/models/layer/ contact.html



WARNING

To reduce the risk of serious or fatal injuries, children must always be secured in the vehicle with a child safety seat that is appropriate for their body size, weight, and age.

 Children ages 12 and under must be transported using the appropriate child safety

- seat. Note differences in regulations between states and countries.
- Child safety seats secured incorrectly in the vehicle may cause serious or fatal injuries in the event of an accident. Always secure the child safety seat according to the manufacturer instructions.
- Children or babies must not under any circumstances be held on the lap of the driver or other passengers while driving.
- Do not secure more than one child in a child safety seat.
- Never allow a child to sit in a child safety seat unsupervised.
- Never allow children to ride unsecured in the vehicle or to stand or kneel on the seats while driving. In the event of an accident, a child could be propelled through the vehicle. This can cause serious or fatal injuries for the child and passengers.
- If children use an incorrect seating position while driving, they have a higher risk of injury during a sudden braking maneuver or accident. This especially applies to children in the front passenger's seat or children who have their head near the side airbag deployment area, if the airbag system is deployed during an accident. This incorrect seating position can cause severe or even fatal injuries.
- Make sure there is enough space in front of the child in the child safety seat. If necessary, adjust the angle and position of the seat in front of the child safety seat.
- The rear side of a forward-facing child safety seat should be positioned as close as possible to the backrest on the vehicle seat. If the head restraints make it difficult to install a child safety seat, adjust or remove them if necessary ⇒ page 65. Reinstall the head restraints immediately once the child safety seat has been removed.
- Always make sure that the backrest on the seat where the child safety seat is installed is securely locked in place and cannot move forward. Otherwise, the backrest where the child safety seat is secured could move for-

- ward in the event of an accident or other emergency situation.
- NEVER use a rear-facing child safety seat on a seat with an ACTIVATED FRONT AIRBAG; this could cause DEATH or SERIOUS INJURIES to a CHILD.
 - Always secure child safety seats on the rear seats. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Always make sure that PASSENGER AIR BAG OFF № stays on while driving. If PASSENGER AIR BAG OFF 2 does not turn on, remove the child safety seat and install it again according to the child safety seat manufacturer instructions. If PASSENGER AIR BAG OFF № still does not turn on, the front passenger's seat must not be used. Drive to an authorized Audi dealer or authorized Audi Service Facility and have the airbag system inspect-
- ed.

 If you must use a forward-facing child safety seat on the front passenger's seat, move the seat as far back as possible so that it is as far as possible from the front passenger's airbag. While doing this, make sure the seat can be adjusted all the way. A child in a child safety seat on the front passenger's seat can receive a severe impact if the front passenger's airbag deploys, which increases the risk of serious or fatal injury.
- Replace the child safety seat after an accident because there could be damage that is not visible.
- Even if a child is not sitting in the child safety seat, the child safety seat must be secured. An unsecured child safety seat may be thrown through the vehicle interior during sudden braking maneuvers or an accident.

Correct positioning for children

Always secure children in a child safety seat designed for the body size, weight, and age of the child.

You can secure child safety seats in your vehicle using the lower LATCH anchors or the safety belts. You can also secure child safety seats to the top tether anchor. Depending on the child safety seat, it may also be necessary to secure it to the top tether anchor. In Canada, securing forward-facing child safety seats to the top tether anchors is required by law.

Always transport children in the rear seats

Accident statistics show that children that are secured correctly in the rear seats are safer than in front seats. Always transport children in suitable child safety seats secured on the rear seats.

In exceptional circumstances: transporting children in the front passenger's seat

If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this \Rightarrow page 72, Advanced airbag system. If you must secure a forward-facing child safety seat, move the front passenger's seat as far back as possible so that it is as far as possible from the front passenger's airbag. While doing this, make sure the seat can be adjusted all the way.

Only switch to a larger child safety seat when absolutely necessary

Switch to a larger child safety seat only when absolutely necessary. Secure your child using a safety belt without a child safety seat only if all of the following statements are true:

- The child is large enough to sit upright in the seat
- The child is able to sit with his or her back resting completely on the seat backrest
- The child is able to sit with his or her knees bent over the edge of the seat surface
- The child is able to sit with both of his or her feet completely touching the floor in the footwell

- The lap portion of the safety belt lies flat and securely over the hip area and never over the stomach
- The shoulder portion of the safety belt lies flat and securely over the center of the shoulder and the chest, and never under the arm, behind the back, or over the neck or face.
- The child is able to maintain this seating position throughout the entire trip

Read and follow the important information and warnings regarding the correct use of safety belts \Rightarrow page 66.

(i)

Tips

- Child safety seats can also be secured to seats with side airbags. In the event of an accident, children can also be protected by the side airbags if the child is correctly secured in a suitable child safety seat that is attached correctly.
- The lower LATCH anchors as well as the safety belt may be required to correctly install some child safety seats. Using both at the same time is permitted, provided that the fastening systems or safety belts do not impair those in an adjacent seating position.
- All child safety seats are constructed so that they can be secured using the lap safety belt in the vehicle.
- Child safety seats with a load leg can only be secured to the outer rear seats and to the front passenger's seat.

Securing child safety seats to the lower LATCH anchors



Fig. 62 Rear bench seat: lower LATCH anchors

Observe the safety precautions \Rightarrow page 74.

In the United States and Canada, child safety seats can be secured without safety belts using the LATCH system. LATCH stands for Lower Anchors and Tethers for Children. In Canada, similar systems are called UCRA, LUAS, or UAS.

The lower LATCH anchors in your vehicle are located on the outer seats of the rear bench seat between the seat surface and the backrest. These seating locations each have two lower LATCH anchors that can be used to secure a LATCH child safety seat. Marking points with a \Rightarrow fig. 62 symbol are located on the covers for the lower LATCH anchors. You can locate the LATCH anchors using the marking points.

- ► Activate the child safety lock ⇒ page 44.
- Remove the cover from both lower LATCH anchors.
- ▶ If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒ ⚠ in Securing child safety seats with a safety belt on page 78.
- ► Secure the child safety seat according to the child safety seat manufacturer instructions.
- ► Pull on the child safety seat to theck if both \ O sides are engaged correctly in the LATCH anchors.
- If possible, also secure the child safety seat to the respective top tether anchor on the seat ⇒ page 78.

Λ

WARNING

The LATCH anchors in the vehicle are only designed for child safety seats with the LATCH system. To reduce the risk of serious or fatal injury, never secure other child restraint systems, belts, or objects to the anchors.



Tips

The LATCH anchors are designed for a total weight (child and child safety seat combined) up to 65 lbs (29 kg). If the total weight is greater than this, the child safety seat must be secured with the vehicle safety belt.

Securing child safety seats with a safety belt

Observe the safety precautions \Rightarrow page 74. The front passenger's seat is a dangerous location for a child, even with an advanced airbag system. If exceptional circumstances require the child safety seat to be placed on the front passenger's seat, then the front passenger's airbag must be deactivated. Please note the important information for this \Rightarrow page 76, Correct positioning for children and \Rightarrow page 72, Advanced airbag system.

Securing child safety seats

- ► Activate the child safety lock ⇒ page 44.
- If you secure a child safety seat to the rear seat, secure any unused safety belts that are within reach of the child ⇒ ♠, ⇒ page 79.
- ▶ If you secure a child safety seat to the front passenger's seat, adjust the front passenger's seat to the highest position.
- Secure the child safety seat according to the child safety seat manufacturer instructions.
- ⇒ page 77, Activating the belt retractor lock.
 - ▶ If the child safety seat is secured on the front passenger's seat, adjust the front passenger's seat backrest until it rests flat against the child safety seat. Also make sure that the upper safety belt fixture is behind the child safety seat.
 - If you secure a child safety seat on the rear seat, also secure it to the correct top tether anchor if possible ⇒ page 78.

Activating the belt retractor lock

If you secure a child safety seat using the vehicle safety belt, you must activate the belt retractor lock. Follow the child safety seat manufacturer instructions.

The belt retractor lock prevents the safety belt from becoming loose while driving, which could result in the child safety seat no longer being adequately secured.

➤ Secure the child safety seat according to the child safety seat manufacturer instructions.

While doing so, pull out the safety belt. Insert

the safety belt into the belt latch that belongs to that seat until it audibly locks.

- ▶ Pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- ▶ Push the child safety seat into the seat and allow the belt to retract more.
- ► Make sure that the child safety seat cannot move more than 1 inch (2.5 cm).

Deactivating the belt retractor lock

- ► Unbuckle the safety belt from the belt latch.
- Remove the child safety seat according to the manufacturer instructions.
- ► Allow the safety belt to retract completely. The belt retractor lock is deactivated.

/ WARNING

- A safety belt that is not locked by the belt retractor lock or a locking device cannot secure a child safety seat while driving or in the event of an accident, which increases the risk of fatal injury. Always make sure the belt retractor lock on the safety belt is activated if the child safety seat manufacturer instructions require it.
- Due to the risk of fatal injury, never place a rear-facing child safety seat on the front passenger's seat when the front passenger's airbag is switched on.
- For the child safety seat to offer the maximum protection, it is especially important to route the vehicle safety belt correctly. Always follow the instructions from the child safety seat manufacturer for routing the safety belt correctly. Incorrectly fastened safety belts can cause injuries, even during minor accidents.

Additionally securing a child safety seat to the top tether anchor

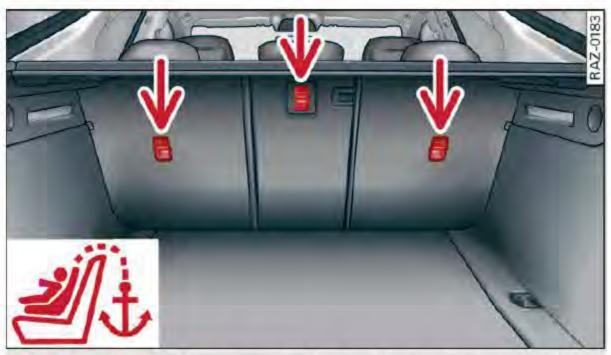


Fig. 63 Rear backrest: top tether anchors to secure a child safety seat with an upper belt



Fig. 64 Rear backrest: securing the upper belt to the top

Observe the safety precautions \Rightarrow page 74.

There is a top tether anchor behind every seat in the rear bench seat to additionally secure a child safety seat with an upper belt.

- Move the head restraint behind the child safety seat upward.
- ► Secure the child safety seat according to the child safety seat manufacturer instructions.
- ► Guide the upper belt on the child safety seat under the head restraint or along both sides of it and toward the rear (depending on the child safety seat model).
- ► Fasten the belt to the top tether anchor
 ⇒ fig. 64. While doing this, make sure the belt is not twisted and is not running over any sharp edges.
- ► Pull the belt tightly so that the child safety seat rests at the top of the seat backrest.
- ▶ If necessary, move the head restraint behind the child safety seat downward.

A

WARNING

The top tether anchors in the vehicle are only designed for child safety seats equipped with an upper strap. To reduce the risk of serious or fatal injury, never secure other child restraint systems, belts, or objects to the anchors.

fatal injury. Always secure unused safety belts so that they are not within reach of children in child safety seats.

Securing unused safety belts on the rear bench seat



Fig. 65 Rear bench seat: securing unused safety belts

If a child safety seat is used on the rear bench seat, the child must not be able to reach any safety belts that are not being used. Secure safe book. Com ty belts that are within reach of the child.

- ► If you secure a child safety seat to the LATCH anchors, fasten the safety belt on the seat where the child safety seat is installed using the seat's safety belt latch.
- ► If you secure a child safety seat to one of the outer seats, fasten the safety belt for the center seat in its latch.
- ▶ Activate the belt retractor lock on the fastened safety belts. To do this, pull the upper belt out completely and then allow it to retract. You will hear a clicking sound while the belt is retracting. It will not be possible to pull the safety belt out any farther.
- ► Make sure the fastened safety belt does not block access to the LATCH anchors. Otherwise, it may not be possible to secure the child safety seat to the LATCH anchors correctly.

A

WARNING

A child in a child safety seat could play with the unused safety belts and then become entangled in them, which increases the risk of

Storage and convenience

Power sources

When the ignition is switched on, you may be able to use multiple power sources for external devices, depending on the vehicle equipment.

12 volt sockets

You can connect electrical accessories to the 12 volt sockets. The power usage from the sockets must not exceed a total of 120 watts. Do not connect multiple devices to the sockets in the vehicle at the same time.

The 12 volt sockets are labeled with the 12V symbol. They are located in the front center console, in the rear, and on the side trim panel in the luggage compartment.

USB ports

Applies to: vehicles with USB ports

You can charge mobile devices using the USB ports. Depending on the vehicle, the USB ports may be labeled with one of the following symbols: ♣♣, ♠♠, or CHARGE ONLY. WWW_CATO

MARNING

- To reduce the risk of fatal injury, store all connected devices securely when driving so that they do not move around inside the vehicle when braking or in the event of an accident.
- Incorrect usage can lead to serious injuries or burns. To reduce the risk of injuries, never leave children unattended in the vehicle with the vehicle key.

! Note

- Read the operating manuals for the connected devices.
- To reduce the risk of damage to the vehicle electrical system, never attempt to charge the vehicle battery by connecting accessories that provide power to the power sources.
- Do not connect any device whose network class (voltage) does not match the network class designed for the socket.

 Disconnect the connectors from the power sources carefully to reduce the risk of damaging them.

(i)

Tips

Do not connect any other devices to the sockets when using the compressor* provided by the factory \Rightarrow page 276. The power consumption in the sockets may be temporarily exceeded when using the compressor*.

Cup holders

Applies to: vehicles with cup holders

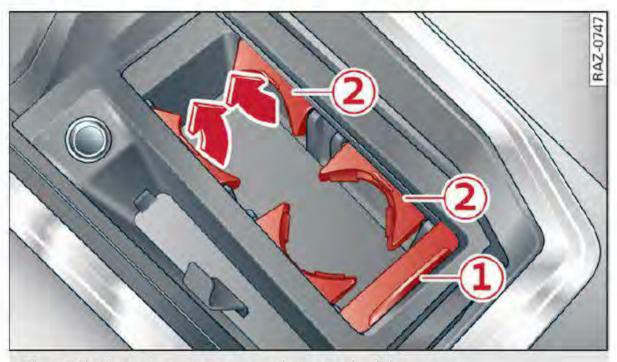


Fig. 66 Front center console: cup holder

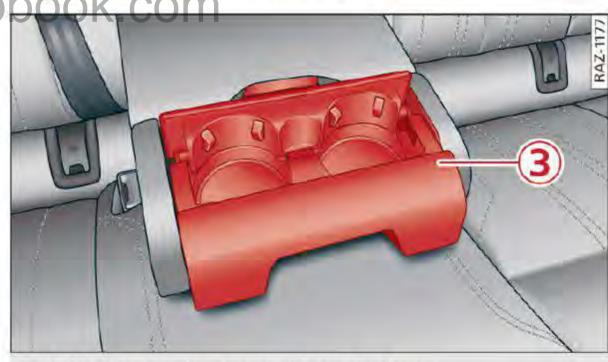


Fig. 67 Rear center armrest*: cup holders

Cup holders in the front center console

- ► Slide the cover 1 back, if necessary.
- ► Fold the cup holder ② outward.

Cup holders in the rear center armrest*

- ► Fold the center armrest* downward.
- ► To open the cup holders ③, tap on the strip on the cover.
- To close the cup holders, slide them back and push the top of the cover down.

WARNING

- Do not put any hot beverages in the cup holder while the vehicle is moving. Hot beverages could spill, which increases the risk of injury.
- Do not use any breakable beverage containers (for example, made out of glass or porcelain). You could be injured by them in the event of an accident.



Note

Beverage containers in the cup holders should always have a lid. Otherwise, the liquid inside could spill and cause damage to vehicle equipment.

Storage and compartments

Front compartment storage compartment



Fig. 68 Front compartment: storage compartment

There is a compartment in the front compartment for storing objects, such as the charging system.

Observe the safety precautions \Rightarrow page 238.

- ▶ Open the hood ⇒ page 239.
- ► To open the storage compartment cover, pull the lever ① upward.
- ► Store the objects.
- Close the storage compartment cover. It must lock into place.
- ► Close the hood.

Additional storage compartments

Depending on vehicle equipment, there are a variety of storage areas, compartments, and retainers, such as the glove compartment, for safely storing and securing objects.

Λ

WARNING

- To reduce the risk of injury, make sure all storage compartments are always closed while driving.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Only use the storage compartments in the door trim panels to store small objects that will not stick out of the compartment and impair the function of the side airbags.
- Only lightweight clothing should be hung from the garment hooks in the vehicle. Do not use clothes hangers to hang clothing. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. This could impair the effectiveness of the side curtain airbags.
- Make sure your view toward the rear is not blocked, for example by hanging clothing or objects in the vehicle.

Luggage compartment

General information

All pieces of luggage or objects must be securely fastened in the luggage compartment. Note the following to maintain good vehicle handling:

- ► Distribute the load evenly in the luggage compartment.
- Stow heavy luggage as far forward in the luggage compartment as possible.
- ► Use non-elastic cords attached to the tie-downs to secure objects.



WARNING

 Applies to: vehicles with luggage compartment cover: The luggage compartment cover is not a surface for storing objects. Objects placed on the cover increase the risk of injury to all vehicle occupants during sudden driving or braking maneuvers or in the event of an accident.

- Applies to: vehicles with luggage compartment cover: The luggage compartment cover must always be securely fastened when in use to reduce the risk of an accident.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Always stow objects securely in the luggage compartment and secure them at the tie-downs. Use straps suitable for heavy objects.
- If pieces of luggage or objects are secured to the tie-downs with unsuitable or damaged straps, this can increase the risk of injury during braking maneuvers or accidents.
- When transporting heavy objects, the vehicle characteristics will change due to the shift in the center of gravity, which increases the risk of an accident. You may need to adapt your driving style and speed to the current conditions.
- The cargo net* is only strong enough to secure light objects. Heavy objects are not adequately secured. Attempting to secure heavy objects increases the risk of injury.
- Never exceed the permitted axle and load and vehicle weight ⇒ page 299.
- Never secure a child safety seat to the tiedowns.
- Never leave your vehicle unattended, especially if the luggage compartment lid is open. Children could enter the luggage compartment and close the luggage compartment lid from the inside. This creates the risk of fatal injury, since the children would be locked inside and may not be able to escape by themselves.
- Do not allow children to play in or on the vehicle. Close and lock the luggage compartment lid as well as all other doors when you leave the vehicle.
- Never transport passengers in the luggage compartment. Every passenger must be cor-

- rectly secured with the safety belts in the vehicle ⇒ page 66.
- Be careful when releasing the backrest and folding it forward. To reduce the risk of being pinched, pay attention and check when folding backrests forward.
- The backrest must be securely latched so objects cannot slide forward out of the luggage compartment during sudden braking.
- The backrest must be latched securely to ensure that the safety belt is protecting the center seating position.
- Always pull forward on the backrest to make sure it is check if it is correctly locked in place.
- For stability reasons, the bag hooks* can hold a maximum weight of 6.6 lbs (3 kg).
 Heavier objects are not adequately secured.
 There is risk of personal injury.

(!)

Note

- To reduce the risk of damage, move the rear head restraints down ⇒ page 65 before
 folding the rear backrests forward.
- When folding the backrest forward, make sure the outer safety belts are in the belt guide recess so that they do not get pinched in the backrest lock and damaged. Other objects should be removed from the rear bench seat to protect the backrest from damage.
- If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
- Make sure that the heating grid strips for the rear window defogger are not damaged by abrasive objects.
- Applies to: vehicles with manual luggage compartment cover: Let the luggage compartment cover roll up slowly to reduce the risk of damage.

(i)

Tips

- The tire pressure must be adapted to the load ⇒ page 257.
- You can purchase straps at specialty stores.

Luggage compartment cover

Applies to: vehicles with luggage compartment cover

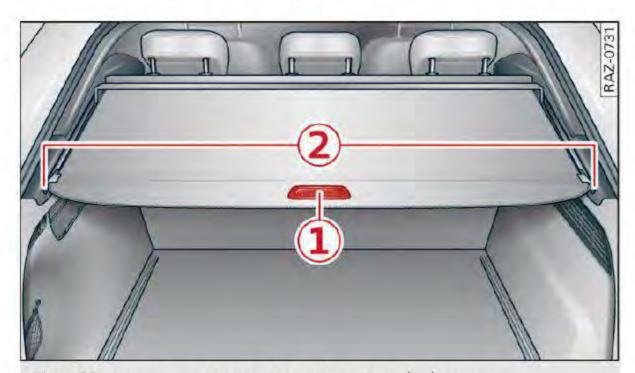


Fig. 69 Luggage compartment: extended cover



Fig. 70 Luggage compartment: removing the luggage compartment cover

www.carob

Observe the safety precautions ⇒ page 81.

- ► To attach the luggage compartment cover, pull the cover out by the handle ① and secure it in the mounting eyelets ② on the side trim panels.
- ➤ To remove the luggage compartment cover, pull both levers ③ firmly in the direction of the arrow and remove the cover upward.
- ➤ To install the luggage compartment cover, place the cover in the mounts on the side trim panels on the left and right side.
- Push the cover downward until it clicks into place.

Two-part luggage compartment cover

Applies to: vehicles with two-part luggage compartment cover

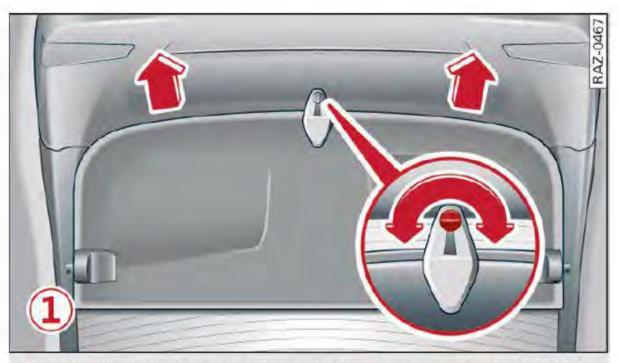


Fig. 71 Luggage compartment: luggage compartment lid cover

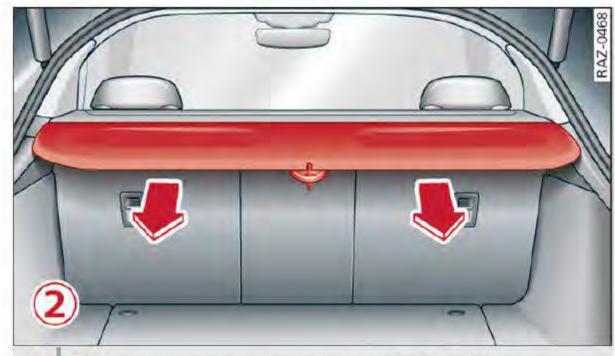


Fig. 72 Luggage compartment: cover behind the rear bench seat

Observe the safety precautions \Rightarrow page 81.

Removing and installing the luggage compartment lid cover

- ► To remove the luggage compartment lid cover 1, turn the knob to a horizontal position.
- ► Pull the cover out of the retainers in the direction of the arrow.
- ► To install the cover, slide it forward on the retainers until they engage.
- ► Turn the knob to a vertical position.

Removing and installing the cover behind the rear bench seat

- To remove the cover behind the rear bench seat
 pull the cover in the direction of the arrow.
- ▶ Pull the cover upward to release.
- ➤ To install the cover, insert the left and right sides of the cover into the mounts on the side trim panel.
- Slide the cover forward until it locks into place.

Folding the outer backrests

Applies to: vehicles with folding backrests

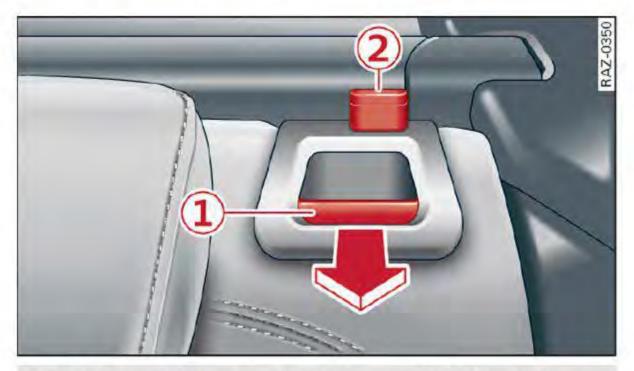


Fig. 73 Outer backrest: release lever and latching indicator with red marking



Applies to: vehicles with release lever in the luggage compartment

Fig. 74 Luggage compartment: release lever

The rear seat backrests can be folded forward either separately or together.

Observe the safety precautions ⇒ page 81.

- ▶ Pull the release lever 1 or 3 in the direction of the arrow to fold the backrest forward.
- ► After the transport, fold the backrest up again until it latches and the red marking ② is no longer visible.

Folding the center armrest

Applies to: vehicles with folding center armrest

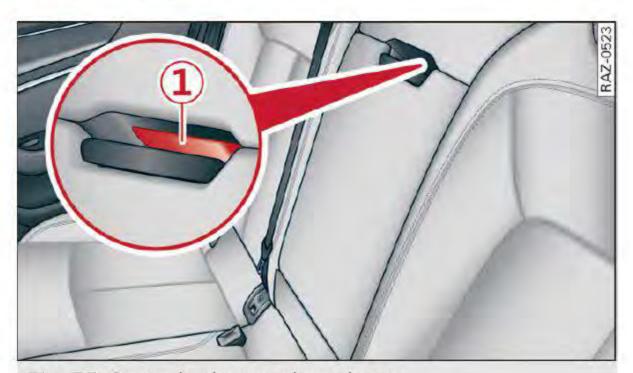


Fig. 75 Center backrest: release lever

Observe the safety precautions ⇒ page 81.

- ► To fold the center backrest forward, pull the lever 1 in the backrest opening.
- ► After the transport, fold the center backrest up until it locks into place.

Tie-downs and cargo net



Fig. 76 Luggage compartment: location of the tie-downs

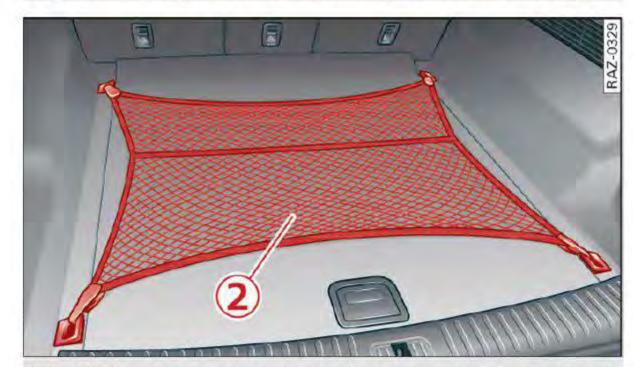


Fig. 77 Luggage compartment: luggage compartment net* stretched out

Observe the safety precautions \Rightarrow page 81.

Tie-downs

There are tie-downs 1 in the luggage compartment to secure pieces of luggage and objects.

▶ Use the tie-downs to secure the cargo.

Cargo net

Applies to: vehicles with cargo net

Light objects can be secured in the luggage compartment using the cargo net 2.

- ► Fold the clip for the tie-downs upward.
- Insert the hooks on the cargo net into the tiedowns.

Cargo floor

Depending on vehicle equipment, there may be a removable box under the cargo floor.

- ► To remove the cargo floor, pull the entire cargo floor toward the back of the vehicle.
- ➤ To insert the cargo floor, lay the cargo floor into the guide and then slide it toward the backrest all the way until it stops.

- Make sure the roof rack is mounted on the vehicle only at the specified locations (1).
- Note the permitted axle load, permitted total weight, and permitted roof load of your vehicle ⇒ page 299. The roof load is the total of the weight of the roof rack, the attachments and the cargo you are carrying. However, you must also note the permitted load of the carrier system being used.

\triangle

WARNING

- Follow the installation instructions provided with the roof rack system. If you do not secure the roof rack system and objects on the roof correctly, they could come loose from the vehicle and cause an accident.
- The risk of an accident increases when using a roof rack system, because it changes the driving characteristics by shifting the center of gravity and/or the increasing the surface area exposed to wind. You may need to adapt your driving style and speed to the current conditions.

Roof rack

General information

Applies to: vehicles with roof rack mount

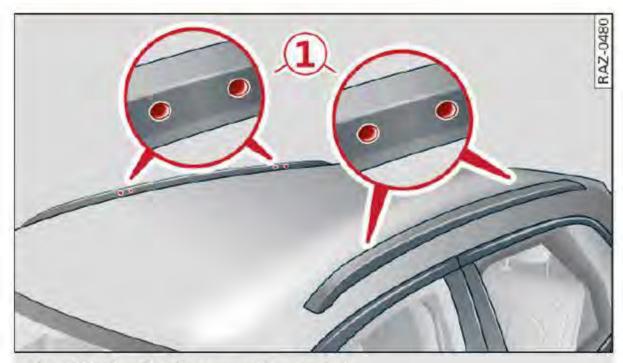


Fig. 78 Roof rail: mounting points

If luggage or cargo is to be carried on the roof, you must observe the following:

– These roof racks are the basis for a complete roof rack system. Only roof racks that are suitable for your vehicle may be used. Audi recommends roof racks and attachments from the Audi Genuine Accessories program.

www.carobogy.Note

Make sure that the luggage compartment lid and the panoramic glass roof* do not come into contact with objects on the roof when they are open.

For the sake of the environment

Energy usage will increase because of the increased wind resistance. Remove the roof rack when you are no longer using it.

Warm and cold

Climate control system

Description

Your vehicle has a deluxe automatic climate control system with four zones where the temperature, air distribution, and amount of air can be adjusted separately at every seat.

The climate control system warms, cools, dehumidifies, and filters the air in the vehicle interior. It is the most effective when the windows and panoramic glass roof* are closed. If there is a build-up of heat inside the vehicle, ventilation can help to speed up the cooling process.

The deluxe climate control system automatically maintains a temperature once it has been set. In all heating mode functions except defrost, the blower only switches to a higher speed once the heater has reached a certain temperature.

Active combination filter

When the fan is running, the filter will reduce particulate matter and the concentration of polarical len, as well as odors in the interior.



For the sake of the environment

Energy can be saved by switching off the A/C mode.



Tips

- To prevent interference with the heating or cooling output and to prevent the windows from fogging over, the air intake in front of the windshield must be free of ice, snow, and leaves.
- Condensation from the cooling system can drip and form a puddle of water under the vehicle. This is normal and does not mean there is a leak.
- The energy management system may temporarily switch off certain functions, such as the seat heating* or rear window defogger.
 These systems are available again as soon as the energy supply has been restored.

Operation



Fig. 79 Center console: lower display and switch panel

Settings are adjusted using both displays, the switch panel in the center console, and the control panel in the rear. For information on how to operate the touch displays, see ⇒ page 16, Touch displays.

You can adjust all climate control system settings in the front; only certain functions are available in the rear.

Lower display

The lower display has two sections with controls:

You can regulate the blower and the air distribution automatically using AUTO in area 1. You can also apply individual settings here.

In area 2, you can switch individual climate control system functions on and off.

Switch panel in the center console

Both the $mathbb{m}$ and $mathbb{m}$ buttons to defog windows as quickly as possible are located in area $mathbb{3}$.

Upper display

In the upper display, you can switch additional functions on and off, display them, and adjust settings.

- ▶ Applies to: MMI: Select on the home screen: VEHICLE > Air conditioning, or
- ► Press · · · on the lower display.

Control panel in rear

You can operate certain climate control functions in the rear using the control panel.

Customizing

A climate control function from the upper display can be assigned to each button to the left and right of ••• in area ②.

- ▶ Press and hold the symbol for the desired function on the upper display for at least three seconds. A menu that consists of two sections appears.
- ▶ If you pull the symbol toward the left section, the button to the left of ••• will be assigned.
- ► If you pull the symbol toward the right section, the button to the right of · · · will be assigned.

Settings

Press the buttons to turn the functions on or off. One bar in the button or the LED in the button will light up when the function is switched on. Some buttons can have several functions assigned to them. The various functions can be activated by pressing the button multiple times.

AUTO Automatic mode

The automatic mode regulates the amount of air and air distribution automatically, so that the set temperature is reached is quickly as possible.

REAR Rear climate control system

To enable operation of the climate control system from the rear of the vehicle, press REAR.

To exit this mode again, press REAR or REAR MODE EXIT.

SYNC Synchronization

When synchronization is switched on, the temperature, air distribution, and blower strength on the driver's side is applied to all seat positions. You can also control the synchronization directly using a gesture. Pull two fingers together on the lower display ⇒ page 16.

OFF Switching off

The climate control system is switched off. Air supply from the outside is blocked. If you press OFF in the front, the front and rear climate control system will switch off. If you press OFF in the rear, the rear climate control system will switch

off. To switch the climate control system back on, press on any button in the respective display.

A/C / A/C / A/C Cooling mode

The cooling mode only functions with the blower turned on. The air is not cooled and humidity is not reduced when cooling mode is switched off. This can cause fog on the windows. The cooling mode switches off automatically at low outside temperatures.

If you activate the A/C, the cooling mode will be automatically regulated.

If you activate A/C, the cooling mode will run with maximum cooling output and maximum blower speed. To reduce unnecessary energy usage, only use this function briefly.

If you activate $\frac{A/C}{ECO}$, the climate control system will operate in energy-saving mode.

+ / - Temperature

Temperatures between 60 °F (+16 °C) and 84 °F (+28 °C) can be set. If outside of this range, LOW / LO or HIGH / HI will appear in the display. In both settings, the climate control runs constantly at the maximum cooling or heating level. The temperature is not regulated.

ℬ Blower

With \(\seta / \seta \), you can manually adjust the volume of air generated by the blower to your preferences. The blower should always run at a low setting to prevent the windows from fogging and to ensure a continuous exchange of air inside the vehicle. To have the blower regulated automatically, press AUTO.

a Air distribution

To prevent the side windows from fogging over, open the side air vents and angle them toward the side.

Using the control panel in the rear, you can adjust the air distribution based on the direction of the arrow by pressing the a button multiple times.

Defrosting

The windshield and side windows are defrosted or cleared of condensation as quickly as possible. Align the outer air vents with the side windows. The maximum amount of air flows mainly from the vents below the windshield. Recirculation mode switches off. The temperature should be set at 72 °F (+22 °C) or higher. Depending on the outside temperature, the A/C cooling mode may automatically switch on.

Rear window defogger

The rear window defogger only operates when the drive system is running. It switches off automatically after 10 to 20 minutes, depending on the outside temperature.

To prevent the rear window defogger from switching off automatically, press and hold the button for more than three seconds. It will remain on until the ignition is switched off,

A / Recirculation mode

In recirculation mode, the air inside the vehicle is circulated and filtered. This prevents the unfiltered air outside the vehicle from entering the vehicle interior $\Rightarrow \triangle$.

Pressing switches recirculation mode on or off manually.

When switched on, automatic recirculation controls the recirculation mode automatically. You must press the was button if fog forms on the windows.

₩ Seat heating

Applies to: vehicles with heated seats

The seat heating temperature can be set at multiple levels. Press # once to switch on the highest level. Press 🖏 again to decrease the temperature one level at a time. The seat heating is switched off if the button is not illuminated.

Seat ventilation

Applies to: vehicles with seat ventilation

The seat ventilation intensity can be set to multiple levels. Press 💆 once to switch on the highest level. Press 💆 again to decrease the heat level one level at a time. The seat ventilation is switched off if the button is not illuminated.

Child safety lock*

If a turns on in the control panel in the rear, the child safety lock is active and operation is blocked ⇒ page 44.

lonizer

Applies to: vehicles with ionizer

Hazardous particles and germs in the air may be reduced through ionization. This helps to improve the air quality for individuals in the passenger compartment.

Fragrance

Applies to: vehicles with fragrance function

The fragrance function will dispense a scent in the vehicle interior. It is dispensed through the front outer vents. This will produce a pleasant scent. The fragrance is time-delayed, especially at low or high temperatures. You can adjust the fragrance function \Rightarrow page 89.

MARNING

- You should not use the recirculation mode for an extended period of time, because no fresh air is drawn in. This can cause the windows to fog, which increases the risk of an accident. The CO2 concentration in the vehicle interior can also increase when recirculation mode is used for long periods of time, which can impair concentration and affect well-being. Switch recirculation mode off and ventilate the vehicle at the first sign of unwellness.
- Even though fresh air is supplied automatically, using recirculation mode for long periods of time can result in an increased concentration of CO₂ in the vehicle interior. This

could impair concentration and affect wellbeing, which can increase the risk of an accident. Switch recirculation mode off at the first sign of unwellness.

– Applies to: vehicles with seat heating: Individuals with reduced sensitivity to pain or temperature could develop burns when using the seat heating function. To reduce the risk of injury, these individuals should not use seat heating.



Note

Applies to: vehicles with heated seats

To reduce the risk of damage to the seat heating elements, do not kneel on the seats or place heavy pressure on one area of the seat.

i

Tips

- Applies to: vehicles with heated seats: If the front passenger's seat heating has been turned on, it will not turn on again automatically if more than 10 minutes have passed between switching the ignition off and on again.
- Applies to: vehicles with fragrance function: Only use the fragrance function in moderation and take any other passengers and animals into consideration when using the function. An overlap of different scents or odors could cause discomfort. If there is discomfort, reduce the intensity or switch the fragrance function off. Only use fragrances that are approved by Audi.

Adjusting the vents

You can open and close the vents using the thumbwheels. The levers adjust the direction of the airflow from the vents.

Additional settings

You can adjust additional settings.

► Applies to: MMI: Select on the home screen: VEHICLE > Air conditioning > .

Fragrance

Applies to: vehicles with fragrance function

Using Fragrance selection, you can select the fragrance and see the fill level of the fragrance.

You can select the strength of the scent with **Fragrance level**.

Footwell temperature

Applies to: vehicles with footwell heating

You can adjust the footwell temperature for the driver and front passenger.

Air quality indicator

Applies to: vehicles with air quality display

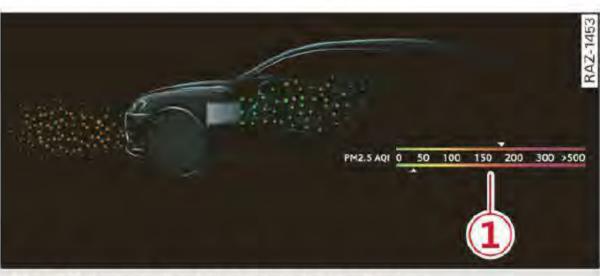


Fig. 80 Upper display: air quality indicator

You can display information about the air quality.

▶ Applies to: MMI: Select on the home screen: VEHICLE > Air conditioning > Air quality.

Active combination filter

Applies to: vehicles without particulate matter sensor

A schematic display represents the effectiveness of the filter. The display visualizes the amount of pollutant particles in the vehicle interior in comparison to the surroundings.

Particulate matter sensor

Applies to: vehicles with particulate matter sensor

A sensor detects the particulate matter concentration (PM2.5) outside and inside the vehicle. The detected values are displayed as the air quality index (AQI) on a colored scale ①. A value in the green range indicates very good air quality.

The system displays the approximate values, which may differ from actual conditions. In certain situations, no values or values that appear to be implausible may be displayed temporarily, or the system may only be available to a limited extent:

- in extreme weather conditions
- when the vehicle is stationary
- in a car wash
- if an individual smokes or if dust is stirred up in the vehicle interior
- if fresh air is introduced in order to prevent the windows from fogging



Tips

- For optimal air quality in the vehicle interior, close all windows and doors and activate A/C cooling mode, the AUTO function, and recirculation mode.
- Applies to: vehicles with particulate matter sensor: The air quality display only shows the concentration of particulate matter (PM2.5). Other types of air pollution are not displayed.
- Applies to: vehicles with particulate matter sensor: For technical reasons, the values measured in the vehicle may differ from the values measured by other measuring systems.

Steering wheel heating

Switching on and off

Applies to: vehicles with steering wheel heating

Press to switch steering wheel heating on or off.

You can also operate the steering wheel heating using the multifunction steering wheel ⇒ page 29.

Auxiliary climate control

Description

The auxiliary climate control system warms or cools the vehicle interior. The vehicle will turn on the auxiliary climate control system if needed, depending on the last temperature that was set with the climate control system controls. This function can be used when the drive system is switched off.

You can control the auxiliary air conditioning in the MMI and using the myAudi app.

Requirement: the charge level of the high-voltage battery must be sufficient.



Tips

- Using the auxiliary climate control while charging can also reduce the charge level of the high-voltage battery.
- Starting or parking the vehicle will not switch off the auxiliary climate control automatically.

Operation

Immediate start

You can immediately switch the auxiliary climate control on and off using the \$\mathbb{k}\$ button. When this function is switched on, a colored bar lights up over the button and the remaining time is displayed.

The auxiliary climate control will run for a maximum of 30 minutes after the immediate start. When charging with sufficient charging power, the auxiliary climate control can run for up to 60 minutes.

Timer programming

You can set up and activate up to two timers for the departure time.

- ► Select one timer.
- ► Set the date and press Next.
- ► Set the time (departure time) and press OK.
- ► Set the second timer, if necessary.

By setting the departure time, you determine when your vehicle should reach the desired temperature. The departure time can be a maximum of six days in the future. The auxiliary climate control will continue to run approximately ten minutes after the departure time is reached.

After switching off the ignition

Information about the active timer(s) will appear on the upper display after switching off the ignition. You can start the set climate control settings immediately with the \begin{center} button, or go to the auxiliary climate control menu with the > button.

(i)

Tips

- Make sure the time and date match in the system settings so that the timer can function correctly ⇒ page 233.
- The auxiliary climate control can also be switched on and off immediately when a timer is set.
- You can operate the climate control in the vehicle interior when the high-voltage battery is charging using the charging timer
 ⇒ page 119. The climate control output depends on the power supply capacity.

Additional settings

► Applies to MMI: Select on the home screen: VE-HICLE > Air conditioning > \$ > \$ \@\www.carobo

Start A/C after unlocking

If this function is activated, the climate control will continue to run for five minutes after the vehicle has been unlocked.

Comfort aux. A/C

Applies to: vehicles with comfort auxiliary climate control

You can adjust if comfort heating functions, such as seat heating*, should also be activated when auxiliary climate control is used. You can select the respective zones.

Window and mirror heating*

Applies to: vehicles with comfort auxiliary climate control

You can set if the rear window and mirrors should also be heated during auxiliary climate control.

Messages

The following messages may appear depending on the vehicle equipment:

The auxiliary air conditioning is currently unavailable due to a malfunction.

If this message appears, there is a system malfunction. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Fluids in the A/C system

Refrigerant in the A/C system

The sticker in the front compartment provides information about the type and amount of refrigerant used in the vehicle's climate control system. The sticker is located in the front section of the front compartment or at the front or back of the hood.

Symbol	Meaning
A	Warning: the A/C system must only be serviced by qualified technicians.
*	Refrigerant type
	Lubricant type
0020	Refer to the service information (only available for authorized Audi dealers or authorized Audi Service Facilities)
	The A/C system must only be serviced by qualified technicians.
*	Flammable refrigerant
	Make sure all components are disposed of correctly and never install components in the vehicle that have been removed from old vehicles or taken from recycling.

Lubricant in the A/C system

The sticker in the front compartment provides information about the type of lubricant used in the vehicle climate control system. For the refrigerant oil quantity, refer to the Technical Data

⇒ page 299.



WARNING

To ensure secure and safe operation, the A/C system must only be serviced by qualified

Warm and cold

technicians and certified technicians (SAE standard J2845).



Tips

- Never repair the A/C system evaporator with components from old vehicles or from recycling.
- New replacement evaporators for portable A/C systems must be certified and labeled as such, so that they comply with the SAE standard J2842 HFO-1234yf and R744.

www.carobook.com

Driving

Starting the vehicle

Description



Fig. 81 Center console: switching on the drive system

Your vehicle is powered by electricity. Similar to a vehicle with a combustion engine, the ignition and drive system can be switched on separately. When only the ignition is switched on, electronic systems such as the MMI are available. However, the vehicle is not ready to drive. Electric power is able to move the vehicle once the drive system is switched on and becomes active.

Requirement: the key must be in the vehicle.

Switching the drive system on

- ► Press and hold the brake pedal.
- ► Press the START STOP button. The drive system switches on.

The power meter indicates if the drive system is switched on \Rightarrow page 14.

Switching the drive system off

- ▶ Bring the vehicle to a full stop.
- ► Press the START STOP button. The drive system will switch off.

The steering is locked when you switch off the drive system in "P" and open the driver's door. The steering lock helps prevent vehicle theft.

Switching the drive system off in an emergency

If necessary in an emergency, the drive system can also be switched off while driving using the emergency off function*.

► Press the START STOP button twice in a row or press and hold it one time.

Switching on and off

If you would like to switch the ignition on or off without switching on the drive system, follow these steps:

► Press the START STOP button without pressing the brake pedal.

Switching the ignition off automatically

To prevent the vehicle battery from draining, the ignition and possibly the exterior lighting may switch off automatically.

Requirements:

- You must have driven the vehicle.
- You must have left the vehicle for longer than 30 seconds.
- The ignition must be switched on.

Among other indicators, the system detects that you have left the vehicle based on the following factors:

Carobooke driver's door has been opened.

- The driver's safety belt has been unbuckled.
- The brake pedal is not being pressed.
- The driver's seat is not occupied.

The ignition will also be switched off after 30 minutes or if you lock the vehicle from the outside.

WARNING

- Never switch off the drive system before the vehicle has come to a complete stop. Switching it off before the vehicle has stopped may impair the function of the brake booster and power steering. You would then need to use more force to steer and brake the vehicle. The fact that you cannot steer and brake as usual may increase the risk of accidents and serious injuries.
- Secure the vehicle against rolling before exiting the vehicle ⇒ page 94.

(i)

Tips

- Brief noises are normal when starting and parking the vehicle and are no cause for concern.
- It may not be possible to start the vehicle in extremely low temperatures.
- The drive power depends on the temperature and the charge level of the high-voltage battery.

Messages

The following messages may appear depending on the vehicle equipment:

Engine start system: malfunction! Please contact Service

Do **not** switch the ignition off because you may not be able to switch it on again. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Engine start system: malfunction! Please contact Service

There is a malfunction in the engine start system. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Remote control key: key not detected. Is the key still in the vehicle?

The vehicle key was removed from the vehicle while the drive system was active. If the vehicle key is no longer in the vehicle, you can no longer switch on the ignition or the drive system after switching off the drive system. You also cannot lock the vehicle from the outside.

Remote control key: hold back of key against the designated area. See owner's manual

The battery in the vehicle key may be drained or there may be a malfunction. To start the vehicle, you must also hold the vehicle key against the location shown \P \Rightarrow page 93, fig. 81.

If the malfunction remains, drive immediately to an authorized Audi dealer or authorized Audi

Service Facility to have the malfunction corrected.

When driving

Starting to drive, stopping, and parking

Starting from a stop

- ▶ Press and hold the brake pedal.
- ▶ Switch on the drive system.
- ► Select "D" or "R".
- ► Release the parking brake.
- ► Release the brake pedal.
- ▶ Press the accelerator pedal to accelerate.

Always make sure that the vehicle does not "creep" when starting to drive and maneuvering. If you take your foot off the brake pedal, the vehicle will not be set into motion by the drive system.

Securing the vehicle against rolling

Secure your vehicle to prevent it from rolling before exiting the vehicle.

- www.carobsetthe parking brake.
 - ► Select the "P" selector lever position.
 - ▶ If parking on a steep road, turn the steering wheel so that your vehicle will roll against the curb in case it should start to move.

If one of these measures is not possible, for example because there is no vehicle power, you must secure your vehicle against rolling using additional measures.

- ► Only park the vehicle on a level surface.
- Use suitable objects to block the front and rear wheels.

Set the parking brake before selecting the "P" selector lever position. This prevents too much stress from being put on the locking mechanism when parking on a steep surface.

Λ

WARNING

– Always set the parking brake when leaving your vehicle, even if for a short period of time. If the parking brake is not set, the vehicle could roll away, increasing the risk of an accident.

- Do not leave your vehicle unattended while the drive system is active, because this increases the risk of an accident.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always make sure the "P" selector lever position is selected when the vehicle is parked.
- If you leave the vehicle, switch the ignition off and take the key with you. This is especially important when leaving persons or animals in the vehicle. Otherwise, the vehicle could start unintentionally, the parking brake could release, or electronic equipment could activate, which increases the risk of an accident.
- No persons or animals should be left in a locked vehicle. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.
- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.

! Note

If you have to stop on an incline, always press the brake pedal to hold the vehicle in place to reduce the risk of the vehicle rolling backward. Do not try to hold the vehicle in place by pressing and holding the accelerator pedal. The drive system can overheat, which increases the risk of damage.

Hill hold assist

If you take your foot off of the brake pedal when driving on hills, the braking force will be held for several seconds. At that time, you can start driving without the vehicle rolling backward.

Requirement: the driver's door must be closed, the drive system must be on, and the vehicle must be facing uphill. ➤ To activate hill hold assist, press and hold the brake pedal for several seconds while the vehicle is stationary.

Use the hold assist ⇒ page 102 when the braking force should be applied for more than several seconds.

A

WARNING

- If you do not begin driving immediately after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.
- The hill hold assist cannot hold the vehicle on inclines in every scenario (for example, on slippery or icy ground).

Gears and driving programs



Fig. 82 Center console: hand rest with selector lever

The selector lever is located on the side of the hand rest. You can operate the selector lever using your thumb and index finder. Operation is similar to a vehicle with an automatic transmission.

The gears are displayed next to the hand rest.

- P (Park): parking lock

- R (Reverse): driving in reverse

- N (Neutral): idle

- D (Drive): driving forward

Selecting a gear

Requirement: the ignition must be switched on.

 Bring the vehicle to a full stop and press the brake pedal.

- To select the nearest position, move the selector lever forward or back until you feel the first pressure point.
- To skip a position (for example, to move from "D" directly to "R"), move the selector lever past the pressure point in the desired direction.
- The label next to the selector lever for the selected gear will light up.

"N" (Neutral) position

In the "N" selector lever position, power is not transmitted to the driving wheels. Use the "N" selector lever in a car wash (with conveyor belts), for example.

If you unintentionally select "N" while driving (faster than 1 mph (2 km/h)), you can also select "D" again without pressing the brake pedal.

For safety reasons, the vehicle cannot be locked when the "N" position is engaged.

"P" (Park) selector lever position

The parking lock secures the vehicle from rolling when the "P" selector lever position is selected.

The parking lock is a mechanical locking mechanism in the transmission.

- Bring the vehicle to a full stop and press the brake pedal.
- Press the "P" button (1) on the selector lever.
- The "P" next to the selector lever will light up.

"P" will be engaged automatically if you switch the drive system off while the "D" or "R" position is selected. If you switch the drive system off in "N", "P" will engage automatically after approximately 30 minutes.

If you would like to switch from "P" to "D" or "R", the drive system must be on.

Selecting the driving program

Various driving programs can be selected when in the "D" gear. The programs influence how the accelerator pedal and drive system respond.

If you select the **dynamic** or **offroad** Audi drive select* mode, the "S" driving program will be activated. If you select **efficiency**, "E" will be activated. When the ignition is switched off, the driving program may be reset to "D".

To switch between the current driving program and "S", push the selector lever toward the rear.

Λ

WARNING

- Before you start driving, check if the label for the desired selector lever position next to the selector lever is lit up.
- Secure the vehicle against rolling before exiting the vehicle ⇒ page 94.
- To reduce the risk of an accident, do not press the accelerator pedal when changing selector lever positions while the vehicle is stationary and the drive system is switched on.
- Never select the "R" position while driving.
 Doing so could cause an accident.
- The vehicle can roll even if the ignition is switched off.



Tips

If you shift back and forth between "D" and "R" within one second, you do not need to press the brake pedal. This makes it possible to "rock" if it is stuck, for example.

Accelerator pedal

You can accelerate the vehicle using the accelerator pedal.

Maximum acceleration

If you press the accelerator pedal all the way down, the motor's full power will be used and you will reach maximum acceleration, also called "kick-down".

Applies to: vehicles with boost function: In the "S" driving program, even more power is utilized for a brief period of time via the boost function. The availability of this function depends on the charge level of the high-voltage battery and the temperature of the drive system components, among other things.



WARNING

The driving wheels could spin and the vehicle could swerve on slick or slippery road surfaces

when using kick-down, which increases the risk of an accident.

Launch Control

Applies to: vehicles with Launch Control

Launch Control provides the best possible acceleration when starting from a stop.

Requirements

- Driving program "S" ⇒ page 96 or the dynamic Audi drive select* mode must be selected ⇒ page 106.
- The boost function is available ⇒ page 96.

Using Launch Control

- Press the brake pedal with your left foot and hold it all the way down for at least one second.
- With the brake pedal pressed, press the accelerator pedal all the way down with your right foot at the same time.
- Once the display in the power meter actively flashes, remove your foot from the brake pedal.

WARNING

www.carobcek.com

Only use Launch Control when road and traffic conditions allow it and other road users will not be endangered or impacted by your driving and the vehicle's acceleration. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces, which increases the risk of an accident.

Note

When accelerating using Launch Control, all vehicle components are subject to heavy loads. This can result in increased wear.



Tips

After accelerating using the Launch Control, the temperature of some vehicle components may increase greatly. If that happens, the function will not be available for a few minutes to reduce the risk of damage. After a cool-down period, Launch Control will be available again.

Messages

The following messages may appear depending on the vehicle equipment:

Transmission: malfunction! Safely stop vehicle

Do not continue driving. Stop the vehicle as soon as possible in a safe location and secure it so it does not roll ⇒ page 94. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Selector lever: malfunction! Gear change only possible if using both shift paddles.

There is a system malfunction in the selector lever. You can continue driving with restricted function. The selector lever is not working. Gears can only be selected by tapping both shift paddles at the same time when the vehicle is stationary. The "P" gear is automatically engaged when you switch off the drive system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction correct-

P button: malfunction! Auto P when engine off. Please contact Service

There is a malfunction in the "P" button on the selector lever. The "P" gear is automatically engaged when you switch off the drive system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

O Danger of rolling away! P not possible. Please apply parking brake

The parking lock can no longer be engaged. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94.

Drive system

Breaking in

A new vehicle must be broken in within the first 2,000 miles (3,000 km) so that all moving parts work smoothly together, which helps to increase the service life of the drive system components. The energy use may be higher during this time.

Drive for longer stretches whenever possible during the break-in period, and use a moderate driving style.

Electric drive system

Vehicles with an electric drive system are powered by an electric motor. The drive power depends on the temperature and the charge level of the high-voltage battery.

Recuperation

The vehicle is able to recover energy by using "recuperation". The electric drive system operates like a generator and converts a large portion of kinetic energy into electrical energy that is stored in the high-voltage battery. The vehicle is braked during recuperation, which is similar to the engine braking effect on a vehicle with a combustion engine. This will happen automatically if you press the brake pedal while driving in the "D" selector lever position, or if you remove your foot from the accelerator pedal.

When you press the brake pedal, recuperation is used to brake the vehicle. The brakes will only be activated if necessary. When driving normally, this makes it possible to brake using only recuperation just before coming to stop and to lose little energy and range from braking.

Setting options

You can set how strongly the vehicle should be braked by recuperation while coasting.

▶ Applies to: MMI: Select on the home screen: VEHICLE > Charging & Efficiency > Efficiency assist > Recuperation.

Automatic: the recuperation braking effect is adjusted proactively*, for example to the route or vehicles driving ahead. You can temporarily adjust the braking effect by selecting a recuperation level with the shift paddles.

Manual: the recuperation braking effect is controlled manually. You can select a recuperation level using the shift paddles.

Settings using the shift paddles:

- ► Select for a stronger braking effect.
- ► Select (+) for a weaker braking effect.

Λ

WARNING

In certain situations, the recuperation may brake proactively. However, the recuperation braking effect is limited. Always be ready to brake to reduce the risk of an accident.



Tips

If the ESC is limited or switched off, automatic recuperation is not available and will not brake.

Range monitor

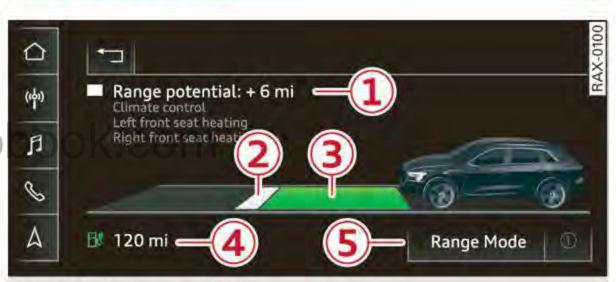


Fig. 83 Range monitor

You can display the projected range of the vehicle.

- ► Applies to: MMI: Select on the home screen: VEHICLE > Vehicle data.
- You may need to scroll down to the Range monitor display.
- Range potential (value)
- Range potential (graphic)
- (3) Total range (graphic)
- Total range (value)
- (5) Range mode

Range potential: the value indicates an additional amount of distance that can be gained by turning off certain convenience functions. The convenience functions with high energy usage are listed on the display.

Range mode: to maximize the current range, you can use the button to switch the vehicle to a mode with less energy consumption. This will reduce the drive system power and the maximum speed. This can also turn off certain energy consumers. You can exit this mode by either pressing the button again, pressing the Audi drive select* button, or switching off the ignition.

(i)

Tips

- The range can also be displayed in the trip computer in the instrument cluster.
- The range that is indicated is based on the previous and predicted consumption values.
 For example, this may influence the navigation route guidance or activated convenience functions.

Vehicle sound

The electric drive system generates considerably less noise than a combustion engine. An artificial engine sound is generated when driving electrically so that the vehicle can be heard from the outside when driving. The vehicle sound auto- matically fades out at higher speeds when the sounds from the tires and wind start increasing.

\triangle

WARNING

Other road users may not be able to clearly hear electric vehicles when they are driving. This increases the risk of an accident particularly when driving in areas with little traffic, when maneuvering, or when driving in reverse.

Efficient and environmentally-friendly driving

Your driving style greatly influences the amount of fuel and energy consumed, the environmental impact, and the wear on the motor, brakes, and tires. Note the following information for efficient and environmentally-conscious driving:

- Select the Audi drive select* efficiency mode.
- Turn off electrical equipment that is not needed, for example seat heating*.

- Anticipate upcoming traffic situations while driving to avoid unnecessary acceleration and braking.
- Avoid driving at high speeds.
- Avoid adding extra weight to the vehicle if possible, for example by not leaving roof racks or bike racks installed when they are not needed.
- Make sure the tire pressure is correct.
- Have maintenance performed regularly on the vehicle.
- Do not drive with winter tires during the summer.
- Brake early and evenly to use recuperation.

Messages

The following messages may appear depending on the vehicle equipment:

Drive system: malfunction! Safely stop vehicle

There is a malfunction in the drive system. The vehicle can no longer be driven. Park the vehicle in a safe location as soon as possible. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Drive system: malfunction! Please contact Service

There is a malfunction in the drive system. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Drive system: warning! Limited performance

The driving power is limited. The high-voltage battery may not be sufficiently charged or is at the operating temperature threshold, for example, when the outside temperatures are extremely cold.

Vehicle sound: malfunction! Pedestrians cannot hear vehicle. Please contact Service

There is a malfunction in the vehicle sound function. Drive extremely carefully, since other road users may not be able to hear your electric vehicle. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Brakes

General information

You can apply the vehicle's brakes using the brake pedal.

Operating noise

Noises may occur when braking depending on the speed, braking force, and outside conditions such as temperature and humidity.

When the vehicle is stationary, the brake system performs system tests at regular intervals. This can cause brief noise and haptic feedback effects on the brake pedal.

Braking effect

The response time from the brakes depends on the weather and environmental conditions. To ensure the optimal braking effect, the brake system is cleaned at regular intervals. This is done by applying the brake pads to the brake rotors for a short period of time when driving at high speeds when the windshield wipers are switched on.

If the brake system becomes damp, for example after driving in heavy rain, the braking effect may be delayed. Other factors that could temporarily increase the response time of the brakes include:

- Wet conditions
- Low temperatures, ice, and snow
- Roads covered in salt
- Dirty brake pads

Corrosion

Corrosion may form on the brake rotors if there is no heavy braking, if the vehicle is not driven for long periods of time, or if the vehicle is not driven frequently or for long distances. In this case, braking heavily several times while driving at high speeds can clean the brake rotors

∧.

Select the "N" position when doing this, so that recuperation is not used for braking.

Brake pads

New brake pads do not achieve their full braking effect during the first 500 mi (800 km). They must be "broken in" first. However, you can compensate for the slightly reduced braking force by pressing firmly on the brake pedal. Avoid heavy braking during the break-in period.

Because recuperation is also used for braking, the break-in period for new brake pads is 500 miles (800 km).

Brake pad wear depends largely on the way the vehicle is driven and on operating conditions. Brake pad wear increases when driving frequently in the city or short distances or when using a very sporty driving style.

Automatic post-collision braking system

The automatic post-collision braking system can help to reduce the risk of sliding and of additional collisions after an accident. If the airbag control module detects a collision, the vehicle is braked by the ESC.

The vehicle does not brake automatically if one of the following occurs:

- The driver presses the accelerator pedal, or
- The braking force generated by the pressed brake pedal is greater than the braking force that would be initiated by the system
- The ESC, the brake system, or the vehicle electrical system is not functioning

Λ

WARNING

- Only apply the brakes for the purpose of cleaning the brake system when road and traffic conditions permit. You must not endanger other road users and increase the risk of an accident.
- Due to the risk of injury, only have an authorized Audi dealer or authorized Audi
 Service Facility work on the brake system.
 Incorrect repairs could impair the function.

4KE012721BH

- Never let the vehicle roll while the drive system is switched off because this increases the risk of an accident.
- During automatic braking maneuvers, the brake pedal may move downward automatically. To reduce the risk of injury, do not place your foot under the brake pedal.

! Note

- Never let the brakes "rub" by pressing the pedal lightly when braking is not actually necessary. This can cause the brakes to overheat and increases braking distance and causes wear.
- Observe the important information for driving downhill ⇒ page 103. This especially applies when towing a trailer.

i Tips

- If you retrofit your vehicle with a front spoiler, wheel covers or similar items, make sure that the air flow to the brakes is not obstructed. Otherwise the brake system can overheat.
- Also refer to the information about brake fluid ⇒ page 242.

Messages

The following messages may appear depending on the vehicle equipment:

BRAKE / Brakes: malfunction! Safely stop vehicle

There is a malfunction in the brake system. If ABS / and also turn on, there is a malfunction in the ABS, ESC, and braking distribution. If the brake booster is not working, you have to use much more force when braking the vehicle.

Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance. Read and follow the other safety precautions $\Rightarrow \Lambda$.

BRAKE / Brake pads: wear limit reached. You can continue driving. Please contact Service

The brake pads are worn. Drive to an authorized Audi dealer or authorized Audi Service Facility as

soon as possible to have the malfunction corrected.

Brake booster: limited functionality. You can continue driving. Please contact Service

There is a brake booster malfunction. The brake booster is available, but its effectiveness is reduced. The braking performance may be different compared to the usual performance. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Other indicator lights

When you switch the ignition on, the **BRAKE** / **W** indicator light turns on briefly to check the function. If the indicator light does not turn on, there is a system malfunction.

If **BRAKE** / Stays on, there is a malfunction in the brake system.

— A high load was placed on the brakes from driving downhill for a long period of time. Follow the instructions in the message to utilize recuperation and to relieve the brakes.

\triangle

WARNING

If a malfunction occurs in the ABS, ESC, and braking distribution, interventions that stabilize the vehicle will no longer be available. This could cause the vehicle to swerve, which increases the risk that the vehicle will slide. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Electromechanical parking brake

Operating the parking brake

The electromechanical parking brake is used to secure the vehicle from rolling away unintentionally.

The (P) switch is located under the selector lever in the center console. It turns on when the parking brake is set. You can release the parking brake manually or automatically when you start to drive.

Setting and releasing the parking brake

- ► Setting: pull the (®) switch.
- ► If MM / @ appears, the parking brake is holding the vehicle. You can remove your foot from the brake pedal.
- ► Releasing: when the ignition is switched on, press and hold the brake pedal and press the (D) button.

If the red indicator light flashes, the braking force has not built up enough or it has decreased. You can also secure the vehicle by selecting the "P" gear or pressing the brake pedal. Make sure the indicator light is off before you start driving.

Automatically releasing the parking brake when starting to drive

Requirement: the driver's door must be closed and the driver's safety belt must be fastened.

► Press the accelerator pedal to start to drive.

WARNING

- To reduce the risk of an accident, always make sure the vehicle is situated safely while stationary.
- If the parking brake is set, it can release automatically when the accelerator pedal is pressed. To reduce the risk of an accident, do not inadvertently press the accelerator pedal and always shift into "P" when the vehicle is stopped.
- If the power supply fails, you cannot set the parking brake once it is released, or release it if it is set. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Tips

- On steep inclines, especially when in trailer mode, the vehicle may roll backwards unintentionally when starting to drive. To reduce the risk of this happening, pull and hold the (D) switch while pressing the accelerator pedal. If enough drive power has built up at

- the wheels and the vehicle does not roll backwards, then release the switch to start to drive.
- If you leave the vehicle when "D" or "R" are engaged, the parking brake will be set automatically.
- Noises when the parking brake is set and released are normal and are not a cause for concern.
- The parking brake goes through a self-test cycle at regular intervals when the vehicle is stopped. Any noises associated with this are normal.

Hold assist

Applies to: vehicles with hold assist

If the vehicle is stopping frequently, the system can assist the driver in a comfortable transition when starting to drive from a stop, for example, at a red light, on a hill, or in stop-and-go traffic.

Switching the hold assist on and off

You can switch the hold assist on and off in the www.carobbok.com

> ► Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Hold assist.

Starting to drive with hold assist

Requirement: the driver's door must be closed and the drive system must be on.

- Press and hold the brake pedal for several seconds while the vehicle is stationary.
- ▶ If appears, the hold assist is holding the vehicle. You can remove your foot from the brake pedal.
- ► Press the accelerator pedal to start to drive.

In certain situations, the hold assist may transfer the function of holding the vehicle to the parking brake.

Depending on the equipment, hold assist may be switched off when in "R" gear to help improve maneuverability. If this is the case, press the brake pedal to secure the vehicle.

WARNING

- The hold assist cannot hold the vehicle on inclines in every scenario (for example, on slippery or icy ground). Be ready to apply the brakes at all times when using the hold assist.
- To reduce the risk of an accident, always make sure the vehicle is situated safely while stationary.



Note

Switch hold assist off before driving your vehicle into a car wash with a conveyor belt. Otherwise, the parking brake could engage automatically.

Emergency braking function

Emergency braking should only be used in an emergency, if the standard brake pedal is malfunctioning or obstructed. When the emergency braking function is activated, the braking effect is similar to a heavy braking maneuver.

- ► Pull and hold the (②) switch while driving.
- An audio warning signal will sound and emergency braking will begin.
- ► If you press the accelerator pedal, emergency braking will be canceled.



WARNING

Heavy braking while driving through curves or in poor road or weather conditions can cause the vehicle to slide or the rear of the vehicle to swerve, which increases the risk of an accident.

Messages

The following messages may appear depending on the vehicle equipment:

Parking brake: malfunction! Safely stop vehicle. See owner's manual

Parking brake: malfunction! Please release parking brake

If one of the two messages appears, there is a malfunction in the parking brake. If the message appears while stationary, check if the parking brake is released and can be reset. If this is the case, switch the ignition off and back on.

If the message stays on, if the parking brake cannot be released, or if the message appears while driving, do not continue driving. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Parking brake: malfunction! Please contact Service

There is a malfunction in the parking brake. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Do not park the vehicle on inclines and shift to "P".

/ Parking brake: warning! Vehicle position too steep

The braking force may not be enough to secure the vehicle from rolling away. Park the vehicle in a place with less of an incline.

Parking brake: applied

The parking brake is set. Press and hold the brake pedal to release the parking brake.

Take over!

The vehicle cannot be held in place automatically. Press the brake pedal to secure the vehicle from rolling away unintentionally.

Special driving situations

Driving uphill and downhill

When driving uphill, downhill, or at high altitudes, note the following information:

- Drive slowly and carefully.
- Do not try to turn around if you cannot safely drive on an incline or hill. Instead, drive in reverse.
- When driving down hills, use the recuperation braking effect ⇒ page 98. This reduces the load on the brakes.

- Use the hold assist if necessary ⇒ page 102
- Use the hill descent assist if necessary ⇒page 104

WARNING

- Only drive on inclines that your vehicle is designed to handle. Do not exceed the hill climbing ability of your vehicle. Your vehicle could tip or slide.
- Do not drive at an angle on steep inclines and hills. If your vehicle is about to tip, you must immediately start steering in the direction of the downward slope to reduce the risk of an accident.
- Always be ready to brake when using the hill descent control function.

Offroad driving

Your vehicle is not an offroad vehicle. Note the following points when driving offroad:

- Drive slowly and carefully.
- To reduce the risk of underbody damage, pay attention to the vehicle's ground dearance and drive across raised areas of the ground with the wheels on one side of the vehicle, instead of allowing the center of the vehicle to pass over the raised areas.
- To reduce the risk of becoming stuck, drive through sandy or swampy areas at a steady speed and without stopping, if possible.

If necessary, use the following functions:

- Audi drive select* offroad mode ⇒ page 106
- Hill hold assist* ⇒ page 104
- Raising the vehicle ⇒ page 107
- Limit ESC ⇒ page 110



WARNING

Only drive in terrain that is suitable for the vehicle and your driving ability.



For the sake of the environment

Avoid actions that are damaging to the environment. Show respect for the natural environment and remain on marked routes.



Tips

Clean your vehicle after driving offroad. Dirt and stones falling off your vehicle can affect other road users.

Driving through water

If you must drive through water, follow these instructions:

- Check the stability of the ground, the current, and the water depth. If the ground is unstable, there is a strong current, or there are waves, the water must only reach up to the lower edge of the body at the most.
- Drive carefully and no faster than at walking speeds to prevent the front of the vehicle from creating waves, because they could splash above the lower edge of the body. Oncoming vehicles could also create waves.
- Do not stop the vehicle while in the water.
- Drive in reverse.
- Do not switch off the drive system.

WARNING

After driving through water, press the brake pedal carefully to dry the brakes so that the full braking effect will be restored.



Note

Vehicle components such as the motor, drive system, suspension, or electrical system can be severely damaged by driving through water.



Tips

If possible, avoid driving through salt water because it increases the risk of corrosion. Use fresh water to clean any vehicle components that come into contact with salt water.

Hill descent assist

Applies to: vehicles with hill hold assist

The Button is located in the function bar on the lower display. It lights up when the system is turned on.

Hill descent assist can assist you when driving down hills by maintaining a constant vehicle speed by automatically braking all four wheels. You can adjust the speed using the accelerator and brake pedals. The regulation depends on the hill and the vehicle speed.

- ► Switching on: press 🐎.
- ► Switching off: press 💝 again.

Active regulation

Regulation begins shortly after you start driving and is possible at speeds up to approximately 19 mph (30 km/h) and on hills that have an approximately 6-60% grade. If these conditions are met, regulation will be activated and the indicator light will turn on.

Ready mode

If one of the requirements for active regulation is not met, the system will be in ready mode. The indicator light will turn on. Once the requirements are met again, the system will be able to provide active regulation again.



WARNING

www.carobook.com

- Be ready to apply the brakes at all times when using the hill hold assist.
- Always adjust the speed to the visibility, weather, road, and traffic conditions. The system cannot replace the driver's attention.
- The system cannot maintain a constant vehicle speed in all situations, for example when on smooth or slippery ground. This can increase the risk of an accident.



Tips

If you select the Audi drive select* **offroad** mode, hill descent assist will switch on.

Driving dynamic

Audi drive select

Introduction

Applies to: vehicles with Audi drive select

Drive select makes it possible to experience different types of vehicle characteristics in one vehicle. With different driving modes, the driver can switch the setting, for example from sporty to comfortable. This allows you to adjust individual systems collectively as a group to your personal preferences.

Selecting an Audi drive select mode

Applies to: vehicles with Audi drive select

The stive button is located above the selector lever in the center console.

- ► Press the left or right arrow key until the desired mode appears in the MMI. Or:
- ► Applies to MMI: Select on the home screen: **VE- HICLE** > **Audi drive select**.

You can change the driving mode when the vehical cle is stationary or while driving. If traffic permits, briefly remove your foot from the accelerator pedal after changing modes so that the mode you have selected will be activated for the drive system.

The following modes may be available depending on the equipment:

offroad – Provides assistance when driving offroad. The vehicle will be raised to the secondhighest level using the air suspension*. The ESC will be restricted and the hill descent assist* will be activated. The vehicle will exit this mode after the ignition is switched off.

allroad – Provides balanced vehicle handling. The vehicle will be raised to the second-highest level using the air suspension*.

efficiency – The vehicle switches to a fuel-efficient vehicle setup and supports the driver with fuel economy messages. The "E" driving program is selected.

comfort – Provides a comfort-oriented vehicle setup and is suited for long drives on highways.

auto - Provides an overall comfortable yet dynamic driving feel and is suited for everyday use.

dynamic - Gives the driver a sporty driving feel and is suited to a sporty driving style. The "S" driving program is selected.

individual – Provides the option for personalized vehicle settings. Press to configure the mode ⇒ page 106, Individual settings.



Tips

When the ignition is being switched on, individual systems, such as the drive system, will be reset to a balanced setting. Select the current mode again to attain its full configuration.

Individual settings

Applies to: vehicles with Audi drive select

The equipment in your vehicle will determine which settings you can adjust.

Drive

The drive system will react to accelerator pedal moves more quickly or in a more balanced manner.

Steering

The power steering will adapt. Light steering is suitable for long trips on highways or smooth driving around curves, for example.

Suspension

The suspension adjusts to be tighter or more comfort-oriented when it comes to compensating for uneven spots on the road.

The vehicle ground clearance is adjusted by the air suspension* based on the setting.

Suspension

Adaptive dampers

Applies to: vehicles with suspension control

The adaptive dampers are an electronically-controlled damping system. The firmness of the suspension will adapt to the driving conditions and the driving situation. The settings depend on the selected Audi drive select* mode.

Air suspension

Applies to: vehicles with air suspension

The air suspension is an electronically-controlled suspension and leveling system. The firmness of the suspension will adapt to the driving conditions and the driving situation. The system balances out changes in load. The vehicle level will also adapt gradually to the vehicle speed in order to reduce the wind resistance at high speeds and increase the ground clearance at low speeds. The settings depend on the selected Audi drive select* mode.

Displaying the vehicle level WWW.carobo warning

► Applies to MMI: Select on the home screen: VE-HICLE > Audi drive select.

The filled-in boxes represent the current vehicle level. The more boxes that are filled in, the higher the ground clearance. The box that corresponds with the current vehicle level will flash while the vehicle is lifting or lowering. The target level is highlighted in color.

Raising the vehicle

- ► Applies to MMI: Select on the home screen: VE-HICLE > Audi drive select.
- ► Press Raise to reach the highest vehicle level and thus the maximum ground clearance.
- ▶ Press Lower to lower the vehicle down again.

The Audi drive select* mode will be changed if necessary when the vehicle is raised.

The vehicle will lower at speeds of approximately 22 mph (35 km/h) and below. This function may only be used temporarily when increased ground clearance is necessary. It is not intended for long drives.

Note

- Also refer to the information about ground clearance ⇒ page 107.
- When transporting the vehicle on a road carrier, rail carrier, ship carrier, or other carrier, it may only be secured at the running surfaces of the tires (circumference). Securing the vehicle at the axle components, suspension struts, or towing eyes is not permitted because the pressure in the air suspension struts can change during transport. The vehicle might not be secured sufficiently if this happens.

Ground clearance

The vehicle height and clearance can be influenced by the following factors:

- Change in temperature
- Change in load
- Change to the Audi drive select* mode
- Lifting and lowering via the air suspension*

To reduce the risk of injury, make sure no one gets pinched when the vehicle level is changing, for example when cleaning the underbody or the wheel housings.

Note

Always make sure there is enough clearance above and below the vehicle. This is especially important for entrances with height restrictions, for example, before driving into underground garages. You could also scrape the ground when driving over the edges of curbs or on steep ramps, which could damage your vehicle.

Messages

The following messages may appear depending on the vehicle equipment:

Air suspension: malfunction! You may continue driving slowly at max. XX mph (km/h)

There is a malfunction. Driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately. Do not drive faster than the speed given in the message.

Air suspension: malfunction! You can continue driving. Speed limited to max. XXX

There is a malfunction. Driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately. The maximum speed has been limited.

Air suspension: malfunction! Safely stop vehicle. Steering and ground clearance limited

There is a malfunction. Do not continue driving. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94. Avoid turning the steering wheel, because the vehicle ground clearance may be so low that turning the steering wheel could result in damage to the wheels and wheel housings.

Suspension: malfunction! You can continue driving

There is a malfunction. See an authorized Audit are dealer or authorized Audi Service Facility for assistance.

Air suspension: vehicle too low. Limited ground clearance

The vehicle ground clearance is very low. Wait until the air suspension system has restored normal ground clearance. Have an authorized Audi dealer or authorized Audi Service Facility repair the malfunction immediately if the indicator light does not turn off after a significant period of time.

Air suspension: malfunction! Please contact Service

There is a malfunction. The driving stability may be limited and the ground clearance may be low. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Audi drive select: automatic suspension lowering. See owner's manual

The vehicle level is adjusted to the setting stored for the active personal profile \Rightarrow page 30.

Audi drive select: automatic suspension lift. See owner's manual

The vehicle level is adjusted to the setting stored for the active personal profile ⇒ page 30.

Steering

Description

Electromechanical steering supports the driver's steering movements by electronically adapting the power steering depending on the vehicle speed. The settings depend on the selected Audi drive select* mode.

Messages

The following messages may appear depending on the vehicle equipment:

Steering: malfunction! Please stop vehicle

The power steering may have failed. Adapt your driving style immediately to compensate for the fact that it may be more difficult to turn the steering wheel, and stop your vehicle in a safe location as soon as possible. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering: malfunction! Please stop vehicle

There is a malfunction in the electronic steering lock. You cannot turn the ignition on. Secure the vehicle against rolling before exiting the vehicle ⇒ page 94. Do not tow your vehicle because it cannot be steered. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering: malfunction! You can continue driving

There is a malfunction in the steering system. Steering may be more difficult or more sensitive. Adapt your driving style. Have the steering system checked immediately by an authorized Audi dealer or authorized Audi Service Facility. Please note that the red indicator light may turn on after restarting the drive system. Do not continue driving if it does.

Steering lock: malfunction! Please contact Service

There is a malfunction in the electronic steering lock. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Λ

WARNING

Do not tow your vehicle if there is a malfunction in the electronic steering lock because this increases the risk of an accident.



Tips

If the or indicator light only stays on for a short time, you may continue driving.

All wheel drive (quattro)

Description

Applies to: vehicles with all wheel drive

The all-wheel drive system distributes the driving power variably to the front and rear axle to improve the driving characteristics. It works together with selective wheel torque control, which can activate when driving through curves

⇒ page 110.

Caution. Drive to thorized Audi S

Electror

Electror

Electronic torque vectoring

Applies to: vehicles with electronic torque vectoring

The electronic torque vectoring distributes the drive power at the rear axle based on the situation. The goal is a high level of agility and ability to accelerate on curves. The vehicle is very responsive to steering while in a curve. The settings depend on the selected Audi drive select* mode.

Λ

WARNING

- Even in vehicles with all wheel drive, you should adapt your driving style to the current road and traffic conditions to reduce the risk of an accident.
- The braking ability of your vehicle is limited to the traction of the wheels. In this way, it

- is not different from a two wheel drive vehicle. Do not drive too fast because this increases the risk of an accident.
- Note that on wet streets, the front wheels can "hydroplane" if driving at speeds that are too high. Unlike front wheel drive vehicles, the motor RPM does not increase suddenly when the vehicle begins hydroplaning. Adapt your speed to the road conditions to reduce the risk of an accident.

Messages

The following messages may appear depending on the vehicle equipment:

All-wheel drive: malfunction! Limited stability. Please contact Service

Driving stability is reduced. Continue driving with caution. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

Electronic Stabilization Control

Description

Electronic Stabilization Control (ESC) supports driver safety. It reduces the risk of slipping and improves driving stability. ESC detects critical situations, such oversteering and understeering of the vehicle, the drive wheels spinning, or the risk of the vehicle tipping.

The brakes are applied or the motor torque is reduced in order to stabilize the vehicle.

The following stabilization functions are integrated into the ESC, among others:

Anti-lock braking system (ABS)

ABS prevents the wheels from locking when braking. The vehicle can still be steered even during hard braking. Apply steady pressure to the brake pedal. Do not pump the pedal.

Noises will indicate when the system is working. >

Anti-Slip Regulation (ASR)

ASR reduces drive power when the wheels begin spinning and adapts the power to the road conditions. This will increase the driving stability.

Electronic Differential Lock (EDL)

The EDL applies the brakes to wheels that are slipping and transfers the drive power to the other wheels. This function is not available at higher speeds.

In extreme cases, EDL automatically switches off to keep the brake on the braked wheel from overheating. The vehicle is still functioning correctly. EDL will switch on again automatically when conditions have returned to normal.

Selective wheel torque control

Selective wheel torque control is used when driving on curves. Braking is targeted toward the wheels on the inside of the curve as needed. This allows more precise driving in curves.

Power steering

The ESC can also support vehicle stability W.Caro through steering.

\triangle

WARNING

- The ESC and its integrated systems cannot overcome the limits imposed by natural physical laws. This is especially important on slippery or wet roads. If the systems begin acting to stabilize your vehicle, you should immediately alter your speed to match the road and traffic conditions. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
- Please note the risk of a collision increases when driving fast, especially through curves and on slippery or wet roads, and when driving too close to objects ahead. There is still a risk of accidents because the ESC and its integrated systems cannot always prevent collisions.
- Accelerate carefully when driving on smooth, slippery surfaces such as ice and snow. The drive wheels can spin even when

- these control systems are installed and this can affect driving stability and increase the risk of a collision.
- As the vehicle load increases, especially the roof load, the vehicle's center of gravity also increases along with the risk of the vehicle tipping. To reduce the risk of an accident, always adapt your driving style to the current conditions and avoid sudden driving maneuvers.



Tips

- The ABS and ASR only function correctly when all four wheels have a similar wear condition. Different tire sizes can lead to a reduction in motor power.
- You may hear noises when the systems described are working.

Operation

The soft button (or solve, depending on the model) for controlling the ESC is located in the center console, in front of the selector lever. The ESC is automatically switched on when the ignition is switched on.

Limiting ESC

In some situations, it may make sense to limit the stabilizing function of the ESC so that the wheels can spin, for example to rock a vehicle to free it when it is stuck or to drive with snow chains. The ESC can also be limited to provide more sporty driving characteristics with fewer stabilizing corrective actions.

- To limit the ESC, press the 息 button briefly.
 The indicator light will turn on.
- To completely reactivate the ESC stabilization function, press the button again. The indicator light turns off.

Depending on the Audi drive select mode that is selected, one of the following ESC modes will be selected automatically:

 sport - this mode is designed for driving on a level surface. It is used in all Audi drive select modes except offroad. - offroad - this mode is suited for driving offroad and is designed for uneven terrain or loose ground. If you select the offroad Audi drive select mode, the offroad ESC mode will be automatically used.

Switching off ESC

For a more active control of the vehicle where the stabilizing functions of the ESC cannot intervene, the ESC can be switched off.

- To switch off the ESC, press and hold the 身off button for more than three seconds. The and **ESC OFF** indicator lights turn on.
- To completely reactivate the ESC stabilization function, press the button again. The indicator lights turn off.

WARNING

- When the ESC is switched off or limited, there will be no vehicle stabilization or it will be limited. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces. When there is a heavy vehicle load and sudden arobook. com driving maneuvers, it may not be possible to prevent the vehicle from tipping under certain circumstances, which increases the risk of an accident.
- Because of the increased risk of an accident, only drive with the ESC switched off or limited when it is necessary. Reactivate the ESC as soon as possible.

Tips

- If you select the Audi drive select* offroad mode, hill descent assist will switch on.
- If the ESC is limited, switched off, or malfunctioning, systems with an automatic braking intervention function may not be fully available.
- If malfunctions occur in other systems or certain driver assist systems are active, the ESC must be switched on by the system. The ESC may switch on automatically and cannot be operated with the button.

Messages

The following messages may appear depending on the vehicle equipment:

ABS / <a> <a> Mas <a> Stabilization control (ESC/ <a> C ABS): malfunction! See owner's manual

There is a malfunction in the ABS or EDL. This also causes the ESC to malfunction. The brakes still function with their normal power, but ABS is not active.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Other indicator lights

If 👼 blinks while driving, the ESC is actively regulating. Operating noises may occur. If the indicator light stays on, the ESC has been switched off due to system needs. The indicator light turns off when the system is fully functional.

High-voltage system

General information

Introduction

All work done on the high-voltage system must only be performed by certified high-voltage technicians at authorized Audi dealers or authorized Audi Service Facilities in accordance with Audi guidelines.

The high-voltage system is composed of the following high-voltage components, among other things: the high-voltage battery, the power electronics, the electric motors, the high-voltage A/C compressor, the high-voltage heater, the charging system and charging port as well as the orange high-voltage wiring.

The high-voltage battery is located on the vehicle underbody and does not require any maintenance from the driver.

A

WARNING

The voltage in the high-voltage system is high enough to cause fatal injuries. Touching a damaged high-voltage component can result in a fatal electric shock. The components in the high-voltage system are marked with a warning label which warns against the high-voltage.

- The voltage level in the high-voltage system is still dangerous and potentially life-threatening when the ignition is switched off.
- Never perform work on the orange highvoltage cables or on other high-voltage components. Only authorized repair facilities that are certified may perform work on the high-voltage system.
- Never damage, alter or remove the orange high-voltage cable or disconnect it from the high-voltage system.

- Never perform any work using cutting, shaping or sharp-edged tools or heat sources near the high-voltage system and high-voltage cables.
- Gases that escape from the high-voltage battery can be poisonous or flammable.
- Damage to the high-voltage battery can cause poisonous gases to escape, either immediately or at a later time. The escaping gases can also cause a fire. If you notice the smell of fire or gases, follow these steps:
 - Do not inhale the gases.
 - Park the vehicle in a safe place outdoors that is not near buildings or vehicles, roof overhangs, carports, or similar structures.
 - Switch the ignition off and evacuate the vehicle.
 - Leave the danger area.
 - Contact emergency services.
- Do not expose yourself to any leaking fluids and do not come into contact with them.
- The high-voltage battery electrolyte fluid is caustic. If electrolyte fluid comes into contact with the skin, flush the affected area for at least 15 minutes with clean water. Then wash the affected area with soap. Have the
 - wash the affected area with soap. Have the affected area examined by a medical professional.
- In the event of a technical emergency, inform the responders that the vehicle is equipped with a high-voltage battery.



Note

The high-voltage system can be damaged if the vehicle underbody comes into contact with the ground. Immediately drive your vehicle to an authorized repair facility and have it inspected.

Charging the high-voltage battery

Introduction

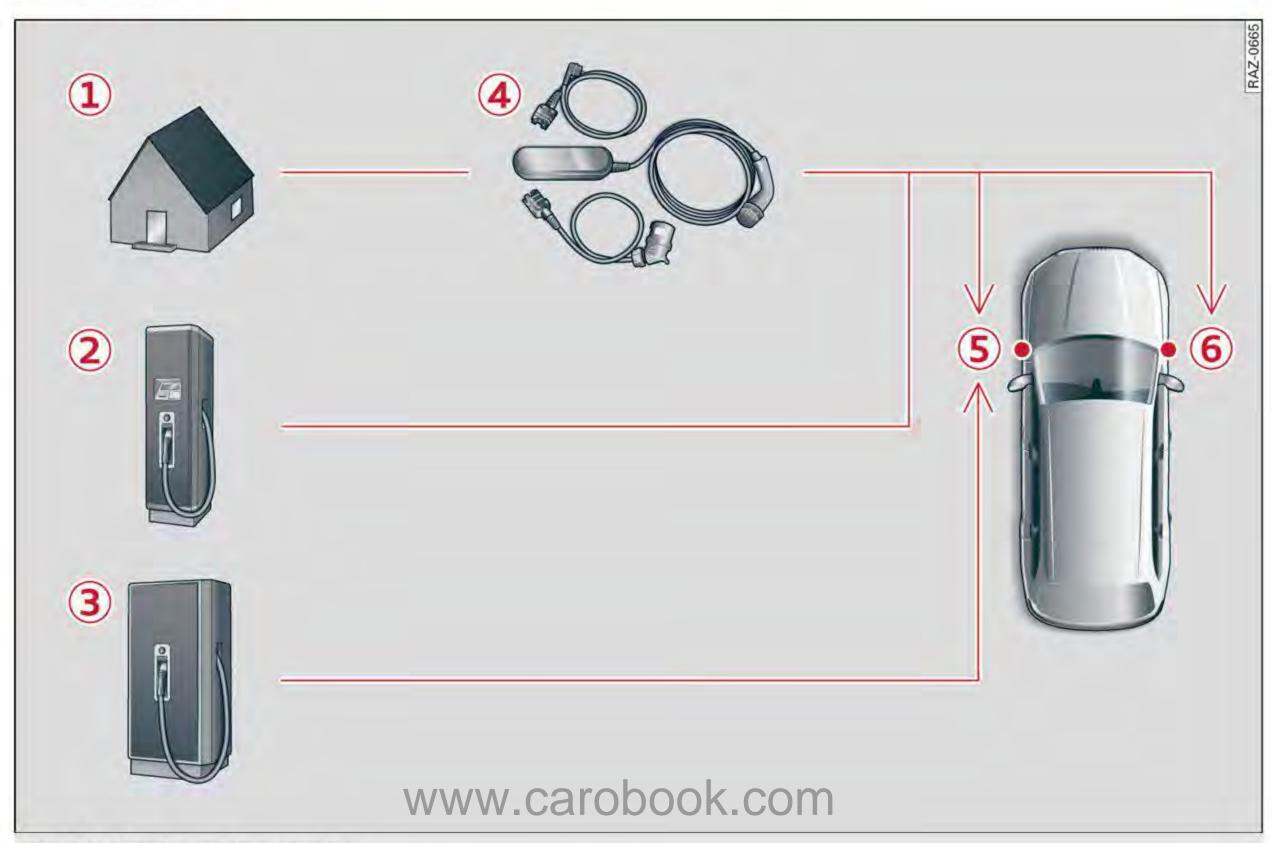


Fig. 84 Charging options overview

The following options are available to charge the high-voltage battery:

Charging method	Charging cable	Charging port on the vehicle	
① Charge with household and industrial alternating current (AC) sockets	Audi e-tron compact charging system ⇒ page 123	S or 6*	
② Charge at public alternating current (AC) charging stations	Charging station cable	(5) or (6)*	
Quick charge at public direct current (DC) charging stations	Charging station cable	(5)	

Audi recommends using alternating current (AC) to charge the high-voltage battery at industrial sockets, charging stations, or a wallbox. This will allow you to achieve higher efficiency and a considerably shorter charging time when compared to charging with a household socket.

Only use household sockets to charge with the Audi e-tron charging system in special circumstances, when it is not possible to charge with an

industrial alternating current (AC) socket or with a public alternating current (AC) or direct current (DC) charging station.

High-voltage batteries age over time, which reduces the available range. High-voltage batteries can also age based on how they are used: frequently charging the high-voltage battery completely can accelerate the aging of the battery and reduce the available range.

Charging at household and industrial sockets or at public charging stations with alternating current (AC)

The vehicle's high-voltage battery can be charged with alternating current (AC) via the charging port (5) on the driver's side. Depending on the vehicle equipment, there may be a second charging port (6) on the front passenger's side. Both charging ports have the same charging power. You can use whichever charging port is more convenient for your charging setup. When using one charging port, the opposite charging port is locked.

Quick charging at public direct current (DC) charging stations

The vehicle's high-voltage battery can be charged at a direct current (DC) charging station via the charging port on the driver's side (5). The charging time shortens significantly compared to charging with alternating current (AC). The charging cable used may be a maximum of 98 feet (30 m).

Charging time

The duration of the charging process may vary based on the following factors:

- Sockets being used (household or industrial sockets)
- Country-specific system voltage, current strength and number of available phases
- Household connection
- The value set for the charging power level on the Audi charging system control unit
- Fluctuations in the system voltage
- The temperature outside the vehicle
- The temperature of the high-voltage battery and the Audi charging system control unit.
- Settings for the climate control inside the vehicle
- Current capacity of the charging connector
- Whether the ignition is on or off

Important safety precautions

Λ

WARNING

Short circuiting, electric shock, explosions, fire, and severe burns can result from charging the battery incorrectly (for example by disregarding general safety precautions, using unsuitable or damaged sockets and charging cables, or charging with unsuitable electrical equipment) and can lead to serious and fatal injuries.

- Do not charge using sockets/electrical equipment that is clearly damaged or installed incorrectly.
- Never use charging equipment that is clearly damaged and/or dirty. Check the charging equipment for damage before every use.
- Never modify or repair any electrical components, especially the high-voltage system.
- Never charge in areas at risk for explosions.
 The components in the charging equipment can trigger sparks, which can cause flammable or explosive fumes to ignite. To reduce
- www.caro the risk of explosions, especially in garages, make sure the Audi e-tron charging system control unit is at least 19 inches (50 cm) above the floor when charging.
 - Never use the charging equipment with an extension cord, a cable reel, a power strip, or an adapter, for example, a travel adapter or timer.
 - Do not touch the contacts on the vehicle charging port or charging equipment.
 - Do not insert any objects in the vehicle charging port or in the charging equipment.
 - Always protect the sockets and connections from water, moisture and other fluids.
 - Never charge with both vehicle charging ports at the same time.
 - Only use the charging equipment provided by the factory or the charging station cable.



WARNING

Applies to: Audi charging systems

Sockets that are installed incorrectly can cause electric shock or fire when charging the

high-voltage battery using the vehicle charging connection.

- Read all information and safety precautions for Audi charging systems before using them.
- Monitor the Audi charging system if it is being used near children.
- Installation and setup of the household connection for Audi charging systems may only be performed by a qualified electrician. The qualified electrician is thereby responsible for adhering to applicable standards and regulations.
- Make sure that the household socket is grounded and shielded from water.
- If Audi charging systems do not function according to the specifications in the operating manual, they must not be used. Contact an authorized Audi dealer or authorized Audi Service Facility.
- Audi charging systems are intended for use in private and semi-private areas (for example, private property and company parking lots). Depending on the country where the vehicle is operated, charging with a mode 2 charging cable (meaning charging with the Audi charging system) may be prohibited in public areas. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.
- Operate the Audi charging systems in power networks that are properly grounded. It cannot be used with non-grounded power networks (such as IT networks).
- When charging the high-voltage battery using household/industrial sockets, the electrical installation can be used at full capacity. Audi recommends having a qualified electrician regularly inspect the electrical installations that are used for charging.
- If possible, disconnect Audi charging systems from the power network during a thunderstorm.
- Never submerge the Audi charging systems or the connectors in water.
- Audi charging systems must only be cleaned when the control unit is completely discon-

- nected from the power supply and from the vehicle. Use a dry towel to clean.
- Audi charging systems are only intended for use with Audi vehicles. Using the devices on vehicles made by another manufacturer is not authorized.

(!)

Note

- If the vehicle is not being used for long periods of time, the high-voltage battery must be charged after four months at the latest or the vehicle must be continuously connected to a power source (for 50% charging target ⇒ page 119). Otherwise, the high-voltage battery could become damaged.
- Make sure that you always use the correct charging equipment for the country in which it is being used. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.
- On vehicles with only one charging port, there is a cover on the opposite side of the vehicle with no charging components installed underneath it. Do not try to open this cover.



Tips

- Your vehicle can only be charged at charging stations that meet the requirements in the respective country and meet the following standards, at a minimum:
 - GB/T 18487.1 and GB/T 20234 (China)
 - IEC 61851 and IEC 62196 (Europe)
 - SAE J1772 (North America, Japan)
- You can use your Audi charging system if there is a household or industrial connection available at the charging station.



Tips

Applies to: Audi charging systems

- For an uninterrupted charging process, Audi recommends only charging using sockets that are connected to a separately protected circuit.
- Audi recommends using Audi charging systems in the wall mount clip* during operation. If this is not possible, always position

- Audi charging systems on a secure surface during the charging process $\Rightarrow \triangle$.
- To reduce the risk of overheating during operation, do not place Audi charging systems in direct sunlight for long periods of time. If the control unit is overheated, the charging process is automatically paused until the temperature has lowered back within the normal range.

Charging



Fig. 85 Left front side of the vehicle: opening the highvoltage charging port door

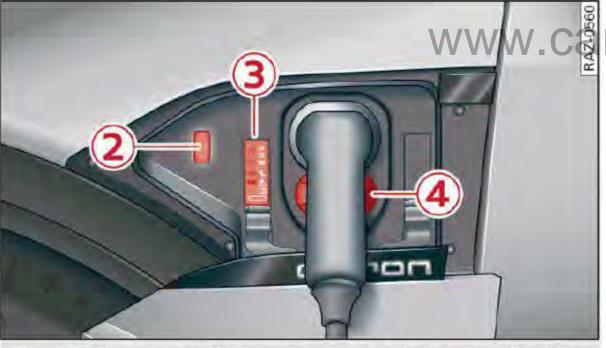


Fig. 86 Charging unit: charging port and charging display

Connecting the charging cable

If you charge your vehicle at a charging station, the following sequence of steps may vary. Follow the manufacturer guidelines and operating instructions for the charging station.

Requirement: the "P" selector lever position must be selected, the parking brake must be set, and drive ready mode must have ended.

- If necessary, remove the charging cable from the vehicle ⇒ page 123, Transport.
- Remove the cap from the charging cable if necessary.

- First connect the charging cable to the power supply, or remove it from the charging station.
- Unwind the charging cable completely.
- Unlock the charging port door by unlocking the vehicle. In vehicles with a convenience key*, the charging port door will be automatically unlocked when the convenience key is near the charger.
- Press the center of the button 1 to open the charging port door on the driver's side or front passenger's side*.
- If you would like to use quick charging at public direct current (DC) charging stations, open the charging port cover (4).
- Plug the charging connector into the vehicle charging port.
- Check if the charging option shown ② (immediate charging/timer charging) is the one you would like to use for charging ⇒ page 118.

Starting to charge automatically (immediate charging)

If charging is not delayed with a timer, the charging process will begin immediately. If necessary, the charging station may need to be activated. Follow the manufacturer guidelines and operating instructions for the charging station.

You can also adjust the charging process to your preferences ⇒ page 119, Setting the charging target, ⇒ page 119, Setting the timer, ⇒ page 120, Advanced charging settings.

Timer charging

With timer charging, the charging process starts and ends based on a timer that is set beforehand.

 To charge by timer, switch on the timer and timer charging before exiting the vehicle
 ⇒ page 119.

If the charging connector is disconnected and reconnected while timer charging is switched on, immediate charging will activate automatically. To continue charging by timer, timer charging must be switched on again.

While charging

The charging display on the charging unit ② will pulse green while charging. It will pulse I in the ▶

instrument cluster. A label on the charging unit ③ informs you about the various displays ⇒ page 118.

The charging connector is locked while charging and cannot be removed.

Depending on the selected view ⇒ page 12, the following information about the charging process is displayed in the instrument cluster:

- ∰: range
- X: remaining charging time until the charging process is complete
- □: current battery charge level
- ①: date and time of when the charging process was completed
- (additional range per hour)
- 4: charging power (depends on the selected power source)

To access the charging process information at a later time, select in the instrument cluster: Vehicle functions tab > \begin{align*} button > Charging.

Ending the charging process

You can interrupt and end the charging process at any time.

- Unlock the vehicle. In vehicles with a convenience key*, the convenience key only needs to be near the charging port door.
- Press the center of the button 1.
- Remove the charging connector. If the charging connector is not removed within 30 seconds, it will automatically lock again and the charging process may resume.
- After removing the charging connector, the charging port door will close automatically; otherwise, press on the center of the button 1 to close the charging port door.
- Disconnect the charging cable from the power supply if necessary or return it securely to the charging station.
- Install the protective caps on the charging cable again.
- If you are transporting the charging cable in the vehicle, store it securely ⇒ page 123.

If the charging connector cannot be disconnected from the vehicle, perform the following steps in

the order listed and try again to disconnect the charging connector:

- Switch the ignition on/off.
- Lock/unlock the vehicle.
- Make sure the auxiliary air conditioning is not activated ⇒ page 90.

If the charging connector still cannot be disconnected, you must unlock it manually ⇒ page 121.

If you cannot disconnect the charging connector from the charging station, authenticate yourself again at the charging station and then try again to disconnect the charging connector. If you still cannot disconnect the charging connector from the charging station, contact the charging station operator.

WARNING

- When closing the charging port door, make sure the area where the door is closing is clear to reduce the risk of injury.
- Do not disconnect the charging cable from the socket or the vehicle charging port while the vehicle is charging. End the charging process before removing the charging cable from the socket in order to reduce the risk of damaging the connector contacts from sparks.
- Never drive with the charging port door open. An open charging port door could hit other road users, which increases the risk of injury.
- If a charging unit is damaged, the vehicle must not be charged at the damaged charging port or at the charging port on the other side* to reduce the risk of injury.
- If the charging unit is damaged or the charging port door cannot close or is missing, drive immediately to an authorized Audi dealer or authorized Audi Service Facility and have the malfunction corrected to reduce the risk of injury.

(!)

Note

If you drive with the charging unit open,
 both the charging port door and the electronics installed behind it could be

- damaged. Check each time after charging if the port door is locked before you start driving the vehicle.
- Applies to: vehicles with charging ports on the driver and front passenger's side: Never attempt to charge the vehicle using both charging ports at the same time, because this could damage the charging equipment.
- Remove ice and snow in the charging unit using a hand brush and solvent-free deicing spray.
- The vehicle reception systems, such as radio reception, may be limited during charging.



Tips

 If the parking brake is set, it could create noises when the charging connector is connected.

Charging display

The charging display is an LED light on the charging unit ② that indicates the charging status. A label on the charging unit ③ ⇒ page 116, fig. 86

informs you about the various displays. The following table explains the displays.

LED on the charging unit		Meaning	
Off		Vehicle charging system is in sleep mode. A timer may be active, but charging has not started yet.	
		Charging process is interrupted. Requirement: the automatic unlocking of the charging connector is activated ⇒ page 120 The charging process has been completed successfully. The charging connector is now unlocked and can be removed.	
White	Pulsating	Connection between the power source and the vehicle is being established.	
Green	Pulsating	The high-voltage battery is charging.	
	Flashing	A timer is active, but charging has not started yet.	
	Illuminated	High-voltage battery charging process is completed.	
Yellow	Illuminated	When using the Audi charging system, make sure the power plug is inserted in the power socket ⇒ page 123. No power supply was recognized even though the charging cable is plugged in. Have the power supply or power supply system inspected. When using the Audi charging system, check the status displays on the unit ⇒ table on page 124. See an authorized Audi dealer or authorized Audi Service Facility for assistance if necessary.	
	Flashing	The vehicle is not secured from rolling away. Check if "P" is selected and the parking brake is set. If the LED continues to flash, see an authorized Audi dealer or authorized Audi Service Facility for assistance.	

LED on the charging unit		Meaning	
Red	Illuminated	The charging connector may not be able to lock correctly in the vehicle charging port. Check if the charging connector is inserted correctly. Disconnect the charging connector, reconnect it to the charging socket, and press it upward lightly for five seconds, or use a different charging station. If the LED stays turned on, there is a malfunction either in the vehicle charging system or at the power source. See an authorized Audi dealer or authorized Audi Service Facility for assistance if necessary.	
		Both charging port doors are open. Try to close one of the charging port doors by hand. If the LED stays turned on, the high-voltage battery may not be charging. See an authorized Audi dealer or authorized Audi Service Facility for assistance.	
		The outside temperature is too low or too high.	



Tips

The charging display modes are also displayed in the instrument cluster .

Setting the charging target

You can set the charging target, meaning you can set the maximum charge level to which the high-voltage battery should be charged. The charging target can be set between 50% and 100%. For daily usage, Audi recommends setting the charging target at 80%. This can help to ensure the optimal the service life of the high-voltage battery. For long trips, Audi recommends setting the charging target to 100% to achieve the highest possible range.

- ► Applies to: MMI: Select on the home screen: VEHICLE > Charging & Efficiency > Charging.
- ► When the timer is displayed, swipe your finger on the display toward the right.
- Press on the right section of the battery charge level display.
- ► Set the desired charging target.

The charging target that is set will be stored and used in all locations where you have not defined specific charging settings. When setting the charging target, if the vehicle is located at an address for which you have already defined advanced charging settings, then the charging target will be changed to match the advanced

charging settings ⇒ page 120, Advanced charging settings.



Tips

If you set the charging target lower than the current battery charge level while charging, then the charging process will be canceled. If you set the charging target above the current battery charge level again, then the charging process will resume. This does not apply if you are charging at a charging station, where you have authenticated yourself manually. If this is the case, authenticate yourself again at the charging station.

Setting the timer

Introduction

By setting a timer, you determine when your vehicle should reach the desired charging target. When the timer is activated, it will be run regularly at the set time. In addition to the charging target, you can also specify if your vehicle should be heated or cooled to the temperature set in the climate control system. You can turn on multiple timers at the same time. The active timer is indicated by the respective number in \bigcirc in the upper section of the display.

- ► Applies to: MMI: Select on the home screen: VEHICLE > Charging & Efficiency > Charging.
- When the charging target is displayed, swipe your finger on the display toward the left.

Configuring the timer

- ➤ To set a timer, select > in the line for the desired timer.
- Select one ore more days of the week and select Next.
- ► Set the desired departure time and select OK.
- ➤ To also activate the climate control with a timer, select .

Switching on the timer and timer charging

The charging process will only follow the timer settings if you have switched on the timer and timer charging.

- ▶ To turn on a timer, select ①.
- ► To switch on timer charging, select ①. A colored bar will turn on in the button.

If the set departure time for the timer is too soon, the desired charging target may not be reached.



Tips

It is not possible to charge using the timer at some charging stations. WWW.Car

Setting the charging connector to unlock automatically

Applies to: vehicles with automatic charging connector unlocking

You can set if the charging connector should automatically unlock when the charging process has ended. This will allow you or others to disconnect the charging connector even when the vehicle is locked. This function is helpful to prevent charging stations from being blocked for long periods of time, or to allow the charging connector to be disconnected without a vehicle key in private locations.

For AC and DC charging, automatic unlocking of the charging connector is already enabled at the factory.

- Before charging, always check if the selected settings are suitable for the current charging session.
- Applies to: MMI: To activate automatic unlocking for DC charging, select on the home screen:
 VEHICLE > Charging & Efficiency > Charging >

- O > DC connector: unlock after charging has ended.
- ▶ Applies to: MMI: To activate automatic unlocking for AC charging, select on the home screen:
 VEHICLE > Charging & Efficiency > Charging >
 ③ > AC connector: unlock after charging has ended.



Note

The function should only be activated if the charging cable is part of the charging station. If you use your own charging cable, there is no anti-theft protection and your charging cable could be stolen.

Advanced charging settings

With the advanced charging settings, you can define addresses (locations) at which certain charging settings should apply (for example, charging target, minimum charge). If your vehicle is in the vicinity of a defined address, the advanced charging settings will be automatically applied. The charging target that is set will be used both for immediate charging and timer charging.

Managing the advanced charging settings

- ▶ Applies to: MMI: Select on the home screen: VEHICLE > Charging & Efficiency > Charging > ⑤ > Advanced charging settings.
- ► To define new settings for a certain address, select +. Follow the instructions in the display.
- To edit existing settings for a certain address, press the respective button.
- ► To delete existing settings for a certain address, select
 _=.

Charging with a preferred charging time

A preferred charging time is only used when timer charging is switched on ⇒ page 120, Switching on the timer and timer charging.

Manual operation

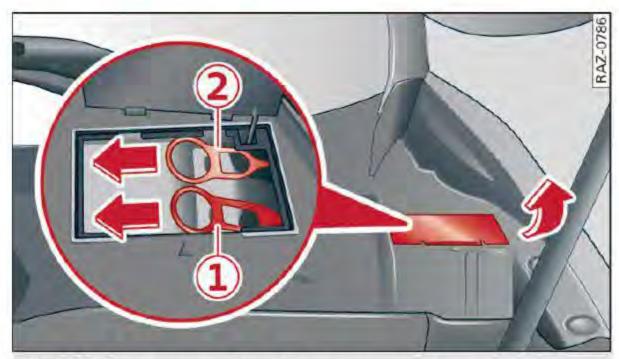


Fig. 87 Front compartment: emergency release

Manually releasing the charging port door

In case of malfunction, you can manually release the charging port door.

- ▶ Open the hood ⇒ page 239.
- ► Open the cover in the front compartment on the side with the affected charging port.
- Loosen the red loop ① ⇒ fig. 87 from the retainer and then pull on the loop carefully ⇒ ①.
- ► If necessary, open the charging port door by hand.
- ► After releasing manually, secure the loop on the retainer and close the cover.
- ➤ Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Manually releasing the charging connector

If you are not able to pull the charging connector out of the vehicle charging port, there may be a malfunction. You must use the emergency release to release the vehicle charging connector.

Requirement: the "P" selector lever position must be selected and the vehicle must be unlocked.

- ► End the charging process ⇒ page 117.
- ▶ Open the hood ⇒ page 239.
- ► Open the cover in the front compartment on the side with the affected charging port.
- Loosen the yellow loop ② ⇒ fig. 87 from the retainer and then pull on the loop carefully ⇒ !.
- ► Remove the charging connector.
- ► After releasing manually, secure the loop on the retainer and close the cover.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

If the charging connector still cannot be removed after using the emergency release, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

(!)

Note

Only pull on the loop until you feel resistance. You will not hear it release. If you continue to pull, you could damage the emergency release mechanism.

Messages

The following messages may appear depending on the vehicle equipment:

If the or indicator light turns on, then the range is low or very low. Charge the high-voltage battery.

Vehicle charging connection: malfunction! See owner's manual

This message appears if the charging port door is open while driving. Stop the vehicle as soon as possible and try to close the charging port door ⇒ page 116, fig. 85. If the charging port door cannot close and/or the message continues to appear, drive to an authorized Audi dealer or authorized Audi Service Facility immediately and have the malfunction corrected ⇒ ⚠ in Charging on page 117; ⇒ ① in Charging on page 117.

Connector lock: malfunction! See owner's manual

This message appears if the charging connector could not be locked correctly in the charging port. Disconnect the charging connector, insert it in the charging port again, and press upward on it lightly for approximately 5 seconds. You can also use another charging station if available. If the message still appears, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

Charging system: malfunction

This message appears if there is a malfunction in the vehicle charging infrastructure or the charging station. Use a different charging station if possible. If this message does not turn off, contact an authorized Audi dealer or authorized Audi Service Facility.

Charging equipment

Introduction

Depending on the vehicle equipment, the Audi etron compact charging system may be available.

Using the charging equipment

Pay attention to the following information for safe handling of the charging equipment:

- Secure the charging equipment against any strain, such as being run over, falling, pulling, bending, and crushing.
- Do not submerge the charging equipment in water and do not cover it with snow or ice.
- When you remove the charging cable from the vehicle and from the power supply, only pull at the connectors and not at the cable/WW.Caro
- Put the cap on after using the charging cable.
- Only operate the Audi charging system in a power supply system with a frequency of 50 Hz/60 Hz.
- Only operate or store the Audi charging system at a humidity level between 5% and 95% (no condensation).
- The Audi charging system is protected against dust and splashing water (IP55 (USA: Enclosure 3)).

Depending on the country, different warnings may be on the charging equipment.

Symbol	Meaning	
-30	Operate or store the Audi charging system at a temperature range of -22 °F (-30 °C) to +122 °F (+50 °C)	
<u>≤4000m</u>	Operate or store the Audi charging system at a maximum elevation of 13,000 feet (4,000 m) above sea level.	

Symbol	Meaning		
<u>≤5000m</u>	Operate or store the Audi charging system at a maximum elevation of 16400 feet (5000 m) above sea level.		
PE	The Audi charging system is not equipped with a connected ground conductor.		
PE	The Audi charging system is equip- ped with a connected ground con- ductor.		
	Do not operate the Audi charging system in power networks that are not grounded (such as IT networks). Only operate the Audi charging system in grounded power networks.		
ATTIME.	Surfaces can become very hot when in direct sunlight.		
A	Incorrect use increases the risk of electric shock.		
4			
<u>\$</u>	December 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1		
	Pay attention to the applicable own- er's manual, particularly the safety precautions.		
X	Pay attention to all applicable disposal regulations when disposing.		
-	Do not use any extensions cords or cable reels.		
=><	Do not use any travel adapters.		
	Do not use any power strips.		
Do not use any charging cables damage to the electronics or to connecting wires. Operate the Audi charging system in single-phase power supplies.			

Grounding instructions

Audi charging systems must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. Audi charging systems are equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Λ

WARNING

Improper connection of the equipmentgrounding conductor is able to result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

(

For the sake of the environment

Batteries and electrical/electronic devices 1000K.COM must be disposed of in an environmentally safe manner.

Transport

Always store the charging equipment securely in the front storage compartment before transporting.

- ▶ Open the hood ⇒ page 239.
- ▶ Open the front storage compartment ⇒ page 81.
- ► Stow the charging equipment in the front storage compartment.
- Close the front storage compartment and the hood.

A

WARNING

If the charging equipment is not secured or positioned correctly, it can slide out of place and endanger vehicle occupants when braking, when changing directions, or in a collision.

- Stow the charging equipment in the front storage compartment only.
- Transporting the charging equipment in the passenger compartment or luggage compartment is not permitted.



Note

Always lift or carry the Audi charging system as one unit and never by the cables.

Audi e-tron compact charging system

Applies to: vehicles with Audi e-tron compact charging system

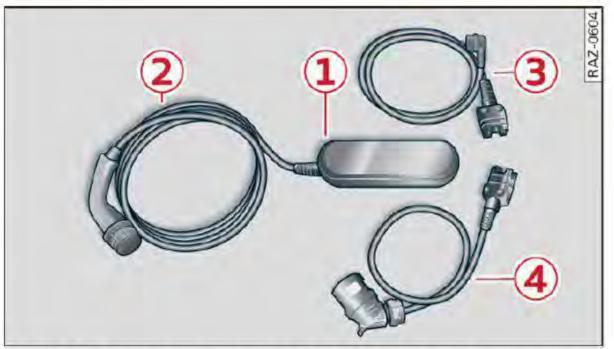


Fig. 88 Audi e-tron compact charging system: components (example)

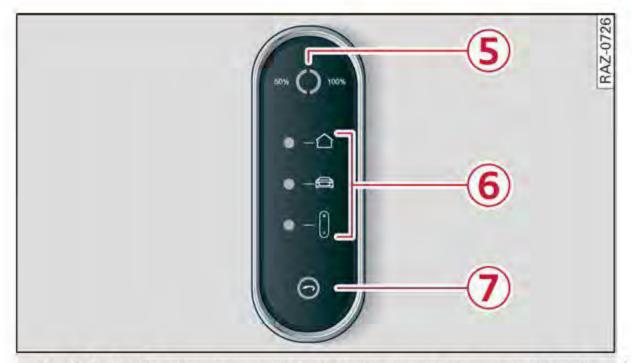


Fig. 89 Audi e-tron compact charging system: control unit

High-voltage system

Observe the safety precautions ⇒ page 114, Important safety precautions.

The Audi e-tron compact charging system can be used for charging with a household or industrial socket. Depending on the country and the vehicle equipment, the following accessories may be available:

- (1) Control unit
- (2) Vehicle cable with vehicle charging connector
- 3 Power cable with power plug for household sockets
- Power cable with power plug for industrial sockets

The vehicle cable is securely connected to the control unit. The power cable is plugged into the upper end of the control unit and can be switched ⇒ page 128.

Control unit overview

(5)	On/Off button (*), charging power le el and LED	
6	Status L	.ED: WWW.Ca
	\triangle	Power supply/household connection
		Vehicle
	0	Control panel
7 Reset		Reset

Charging

Note the instructions for charging \Rightarrow page 116.

Requirement: the correct power plug must be installed ⇒ page 128.

- Insert the plug into the socket.

- Plug the vehicle charging connector into the vehicle charging port.
- The charging process e will start automatically.
- Once the charging process has completed, unlock the vehicle and remove the vehicle charging connector from the vehicle charging port.

Adjusting the charging power level

The control unit automatically recognizes the voltage and the available current strength. You can set whether you would like to charge with full or reduced charging power. The last setting that was selected will be saved and used again the next time the vehicle is charged. If multiple items are connected to the power circuit, the charging current may be reduced when charging at a power outlet. This can help to prevent the electrical equipment from overheating.

The vehicle has a minimum battery charging capacity of 880 W. Therefore, if the network voltage is less than 200 V, charging using a household socket will only be possible if the charging power level is set to 100%. Otherwise, the charging process will not start.

Before charging, always check if the charging power setting that was selected last is still suitable.

 To set the charging power level, press and hold the (*) button (5) ⇒ fig. 89 for at least two seconds.

After the charging power level is set, the status LEDs \bigcirc , \rightleftharpoons and \bigcirc will flash green one time. The selected value (50% or 100%) is displayed on the left or right side of the (•) button.

Control unit: status and malfunction indicators

Indicator lights	Meaning	Solution	
GreenO △ OffO ⊜ OffO ffO ffOff	The charger is ready to charge, but is not charging.	Starting the charging process ⇒ page 116.	

Indicator lights		Meaning	Solution	
	Flashing green Off Off Off Off Off	The vehicle is being charged with the ground conductor monitor activated.		
	Flashing green Yellow Off Off Off	The power cable has overheated. Possible cause of the malfunction: a multi-phase socket is being used in single-phase mode. The charging performance will be reduced.	After the cable cools down, the malfunction will be automatically cleared. Until it cools down, charging performance will be reduced. If the malfunction continues, have the power supply/household connection checked by a qualified electrician	
	Flashing green Off Off Yellow Off	The control unit has overheated. The charging performance will be reduced.	After the control unit cools down, the malfunction will be automatically cleared. Never leave the control panel in direct sunlight for long periods or time. Until it cools down, charging performance will be reduced. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility.	
	Yellow Off Off Off Off	The charger is connected to the vehicle. The high voltage battery is charged and the charging process has ended successfully, or the vehicle is not requesting a charging procedure.	com	
	Red Yellow Off Off Off	The power cable has overheated. The charging process has been interrupted.	After the cable cools down, the malfunction will be automatically cleared and the charging process will resume. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility, or have the power supply/household connection checked by a qualified electrician.	
	Red Off Off Yellow Off	The control unit has overheated. The charging process has been interrupted.	After the control unit cools down, the malfunction will be automatically cleared and the charging process will resume. Never leave the control panel in direct sunlight for long periods or time. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility.	

Indic	ato	lights	Meaning	Solution
() () () () () () () () () () () () () (Red Flashing yellow Off Off Off	The charging infrastructure of the power supply/household connection is restricted. Possible cause of the malfunction: low voltage or poor power frequency. The charging process has been interrupted.	After the power supply/household con- nection stabilizes, the malfunction will be automatically cleared and the charging process will resume. If the malfunction continues, have the power supply/house- hold connection checked by a qualified electrician.
		Red Off Flashing yellow Off Off	There is a malfunction in the vehicle charging system. The charging process has been interrupted.	After the vehicle charging system stabilizes, the malfunction will be automatically cleared and the charging process will resume. If the malfunction continues, have the vehicle checked by an authorized Audi dealer or authorized Audi Service Facility.
0000		Red Off Off Flashing yellow Off	The power cable or vehicle cable is faulty. Possible cause of the malfunction: the coding resistance of the power or vehicle cable is not compatible. The charging process has been interrupted.	Have the power or vehicle cable replaced by an authorized Audi dealer or author- ized Audi Service Facility.
0000		Red Off Red Off Off	There is a malfunction in the vehicle charging system. The charging process has been interrupted.	End the charging process at the vehicle and remove the vehicle cable from the vehicle charging port. Disconnect the charger from the power supply and reconnect it after 60 seconds. Restart the charging process \Rightarrow page 116. If the malfunction continues, have the vehicle checked by an authorized Audi dealer or authorized Audi Service Facility.
() () () () () () ()		Red Flashing red Off Off Off	There is an overvoltage in the charging infrastructure of the power supply/household connection. The charging process has been interrupted.	Disconnect the charger from the power supply and reconnect it after 60 seconds. If the malfunction continues, have the power supply/household connection checked by a qualified electrician.
000000000000000000000000000000000000000		Red Off Off Red Off	The control unit has a technical malfunction. The charging process has been interrupted.	Disconnect the charger from the power supply and reconnect it after 60 seconds. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility.

Indicator lights	Meaning	Solution	
 ∩ Red ○ ☐ Off ○ ☐ Off ● I Flashing red ⊙ Off 	The control unit has a technical malfunction (self-test failed). The charging process has been interrupted.	Disconnect the charger from the power supply and reconnect it after 60 seconds. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility.	
 ○ Red ○ Red ○ Red ○ Red ○ Off ○ Off ○ Off 	The charging infrastructure of the power supply/household connection is insufficient: the ground conductor is interrupted or not present. The ground conductor monitor has interrupted the charging process.	Have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility, and have the power supply/household connection checked by a qualified electrician. Do not use the power supply/household connector until the malfunction is corrected.	
 ○ Red ○ Red ○ Red ○ Red ○ Red ○ Off 	The indicator light in the reset button on the control unit is faulty. The charging process has been interrupted.	Have the control unit replaced by an authorized Audi dealer or authorized Audi Service Facility.	
Red Red Red Red Red Red Red Flashing red	The control unit has detected residual current. The charging process has been interrupted. WWW.Carobook.	Press and hold the button for at least two seconds. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility, and have the power supply/household connection checked by a qualified electrician.	
Red Flashing red Flashing red Flashing red Flashing red Off	The charging infrastructure is wired incorrectly. The charging process has been interrupted.	Disconnect the charger from the power supply. Have the power supply/household connection checked by a qualified electrician.	
Red Red Red Red Red Red Red Red Red	The control unit has a technical malfunction. Possible cause of the malfunction: software error or the load relay has been switched incorrectly. The charging process has been interrupted.	Disconnect the charger from the power supply and reconnect it after 60 seconds. If the malfunction continues, have the control unit checked by an authorized Audi dealer or authorized Audi Service Facility, and have the power supply/house-hold connection checked by a qualified electrician.	
 Flashing red O ☐ Off ☐ Off Red Off 	The control unit has a serious malfunction. The charging process has been interrupted.	Have the control unit replaced by an authorized Audi dealer or authorized Audi Service Facility.	

High-voltage system

Indicator lights	Meaning	Solution	
 () Off ●	The indicator light in the On/Off button on the control unit is faulty. The charging process has been interrupted.	Have the control unit replaced by an authorized Audi dealer or authorized Audi Service Facility.	

Technical Data

The output of the charging system may be different from the charging rate of your vehicle.

Output	9.6 kW	
Current rating	40 A single phase	
System voltage	120 V - 240 V	
Power frequency	50 Hz/60 Hz	
Overvoltage category (IEC 60664)		
Short-time current rating (EN 61439-1)	<10 kA eff.	
Power plug versions NEMA 6-30; NEMA 6-50; NEMA 14-30; NEMA 14-50 5-15		
Integrated residual-current device	AC: 20 mA; DC: 56 mA	
Vehicle charging connector	vvvvlcarobook.com	
Protection class	I VV VV.GGI ODOGIN.GGI II	
IP Code	55 (USA: Enclosure 3)	
Control unit mass	5.3 lbs - 7.7 lbs (2.4 - 3.5 kg)	
Control unit dimensions (height x width x depth)	12.2 in x 4.1 in x 2.8 in (310 mm x 105 mm x 72 mm)	

(i) Tips

- The device runs a self test after power has been restored to the control unit. If a self test is successful, all indicator lights will illuminate green for two seconds.
- The Audi e-tron compact charging system is designed for charging at sockets with a voltage of 120 V/240 V. If your socket has a different voltage, contact and authorized Audi dealer or authorized Audi Service Facility.
- If your Audi e-tron compact charging system has a fixed connection, meaning can be connected directly to the power supply without a power cable, contact a qualified electrician or an authorized Audi dealer or authorized Audi Service Facility.

The system complies with United States FCC regulations and ISED regulations
 ⇒ page 301.

Changing or attaching the cable

Applies to: vehicles with Audi charging system

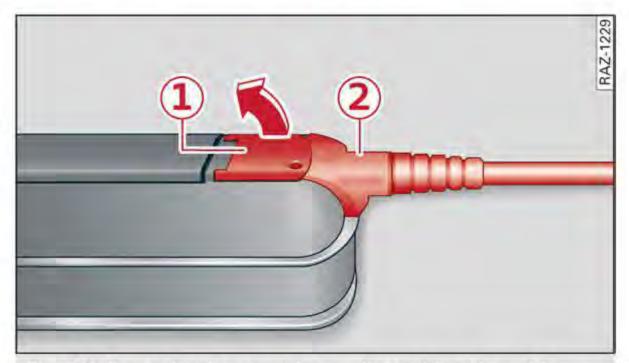


Fig. 90 Control unit: removing and attaching the cable

Requirements:

- ► The charging process for the high-voltage battery must be ended ⇒ page 117.
- ► The vehicle charging connector must be removed from the vehicle charging port.
- ► The power cable must be removed from the socket.

Loosening the cable

- ► Lift the lever 1 all the way up.
- ► Pull the connector ② out just until you feel resistance.
- ► Close the lever 1 until it is resting on the connector 2.
- ► Remove the connector ② completely.

Attaching the cable

- ► Lift the lever 1 up slightly.
- ► Insert the connector ② into the control unit just until you feel resistance.
- ► Lift the lever 1 all the way up.
- ► Insert the connector ② all the way into the control unit.
- ► Close the lever 1.

- charging power of the entire system. Limitations on the ability to transfer power (current capacity) depending on the phase and the number of available phases may affect the available charging power.
- To reduce the risk of theft of the charging equipment and cable, the lever on the control unit can be secured with a bolt to deter theft. For more information on this, contact an authorized Audi dealership.

Wall mount clip

Applies to: vehicles with wall mount clip

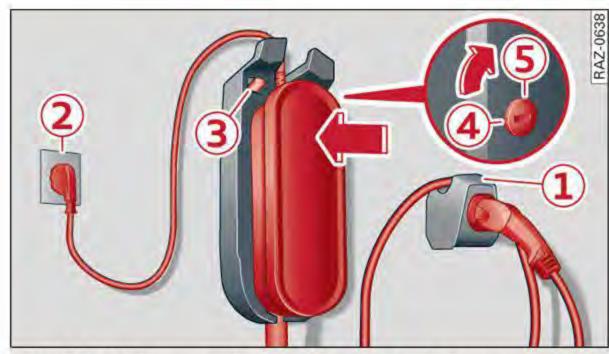


Fig. 91 Wall mount clip: securing the Audi charging sys-

www.carobotek.com

MARNING

- Before switching a cable, always unplug the power cable from the socket.
- Only change cables in a dry environment.
- The Audi charging system may only be used as a complete unit consisting of the power cables, the control unit, and the vehicle cable. Depending on the country, the total length of the power cable, control panel, and vehicle cable may be restricted, for example to 24.6 feet (7.5 m) in the USA. Audi recommends using only cables approved by Audi.

(i) Tips

 The power cable with the power connector for industrial sockets and the Audi charging system control unit are designed to work together. Changing the power cable to another connector type may reduce the available

Securing the Audi charging system

- First insert the control unit in the bottom tabs on the wall mount clip and then into the upper tabs.
- Push the control unit in the direction of the arrow toward the rear ⇒ fig. 91 and let it lock into place.
- ▶ Wrap the excess length of cable around the charging connector mount ① when you are not charging the high-voltage battery.
- ▶ Plug the power cable into the socket ②.
- After charging, you can hook the vehicle charging connector to the charging connector mount 1.

Locking and unlocking the Audi charging system

► Lock or unlock the Audi charging system if necessary using the key provided by turning it to the lock position (4) or the unlock position (5).

Removing the Audi charging system

- ► Remove the power cable connector from the socket ②.
- ► Unwind the cable from the charging connector mount 1.
- ► To loosen the control unit from the bracket, push the locking mechanism ③ upward.



WARNING

Observe the safety precautions in the assembly instructions for the wall mount clip.

www.carobook.com

Trailer towing

Driving with a trailer

General information

Your vehicle is primarily intended for transporting people and luggage. However, if you drive with a trailer, follow the technical requirements, the operation and driving tips, and the legal regulations.

Driving with a trailer affects the vehicle's energy usage, performance, and wear. It also requires greater concentration from the driver.

A retrofitted trailer hitch must be installed according to the instructions provided by the manufacturer \Rightarrow page 134.



WARNING

Do not transport any people in a trailer due to the risk of fatal injury.

Operating instructions

Towing capacity

The permitted towing capacity must not be exceeded under any circumstances ⇒ page 299.

You can drive up larger inclines if you are not using the maximum towing capacity.

Tongue weight

The maximum permitted tongue weight of the trailer drawbar on the trailer hitch ball head must not be exceeded.

For driving safety, Audi recommends always using the maximum permitted tongue weight, but do not exceed this weight. Having the tongue weight too low affects the handling of the vehicle and trailer.

You can determine the tongue weight using a tongue weight scale, a bathroom scale, or a public weigh station, for example. If the tongue weight differs, it can be adjusted by distributing the load in the trailer correctly. If the tongue weight meets the specifications, then the load in the trailer should not be changed.

Load distribution

Poor cargo load and distribution can negatively impact vehicle handling. Load the vehicle and trailer based on the following criteria as much as possible:

- Store objects in the vehicle luggage compartment, if possible. The vehicle should always carry the heaviest possible load and the trailer should have the lightest possible load.
- Distribute the load in the trailer so that the heavy objects are as close to the axle as possible.
- Secure objects so that they do not slide.
- Utilize the maximum permitted tongue weight if possible.

Speed

Adhere to the legal speed limits. Follow the legal regulations that are applicable in the country where you are operating the vehicle.

As the speed increases, the driving stability of the vehicle and trailer decreases. Therefore you should not exceed the maximum legal speed limit when there are unfavorable road, weather, and/or wind conditions. This especially applies when driving downhill.

Hill

www.carob

When you start driving uphill or downhill, the vehicle and trailer may tilt or sway sooner than when driving on a level surface. If small swaying movements have already occurred, you can stabilize the trailer by firmly braking immediately. Never attempt to "straighten out" the vehicle and trailer by accelerating.

reduce the speed and use the recuperation braking effect \Rightarrow page 98 to relieve the brakes \Rightarrow \triangle .

Exterior lighting

Follow the legal regulations for lighting on your trailer that are applicable in the country where you are operating the vehicle. If necessary, contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Before you start driving, check all lighting equipment on the trailer while it is hitched to the vehicle.

The headlight range control automatically adjusts the light range of the headlights.

The turn signals are activated in trailer mode if the indicator light blinks. If a turn signal on the trailer or on the vehicle fails while in trailer mode, the indicator light will **not** blink twice as fast to indicate this.

Outside mirrors

Make sure that you can also observe the traffic area behind the vehicle using the exterior mirrors, and use additional exterior mirrors if necessary. Adjust the additional exterior mirrors so that you have a sufficient visibility behind the vehicle. Follow the local legal regulations for installing additional exterior mirrors.

Tires

Set the tire pressure on your vehicle for a "full load"; see the tire pressure sticker ⇒ page 257. If necessary, also adjust the tire pressure on the trailer according to the manufacturer's specifications.

The trailer and the vehicle should be equipped with winter tires when driving in winter temperatures.

Driver assistance systems

Connecting or disconnecting a trailer/rear carrier system can change the alignment of the sensors/cameras.

To ensure the driver assistance systems can function correctly, switch the ignition off and then back on again each time an object is connected to the trailer hitch or disconnected from it.

Overrun brakes

If your trailer is equipped with an overrun brake, it must be correctly adjusted and function correctly. When using a trailer with overrun brakes, first brake gently then quickly. This reduces the risk of jerking while braking if the trailer wheels lock up.

A

WARNING

Constant braking causes the brakes to overheat and can substantially reduce braking performance, increase braking distance, or cause complete failure of the brake system.



Note

Attachments retrofitted on the vehicle may cause damage, especially on the trailer hitch ball head. In cases of damage, have the function checked by an authorized Audi dealer or authorized Audi Service Facility.



Tips

- Block the wheels with chocks when parking on inclines if the trailer is loaded.
- Audi recommends having the vehicle inspected between the inspection intervals if you tow a trailer frequently.

Air suspension

Applies to: vehicles with air suspension

Requirement: all vehicle doors must be closed. The Audi drive select **comfort** mode \Rightarrow *page 106* is selected before you connect the trailer \Rightarrow ①.

Setting trailer mode

- ▶ Applies to MMI: select on the home screen: VE-HICLE > Settings & Service > Air suspension: trailer.
- Switch trailer mode off again when you are no longer towing a trailer.

For vehicles with a factory-installed trailer hitch, the air suspension trailer mode will automatically switch on if you connect the trailer connector to the socket.

When using rear carrier systems that are mounted directly on the trailer hitch ball head, you can also switch trailer mode off manually.

If you have to drive through difficult road conditions, you can raise the vehicle again after hitching the trailer or after ensuring the tongue weight is correct. To do this, select the Audi drive select **offroad** or **allroad** mode ⇒ page 106, or

select **Raise** to create the maximum ground clearance ⇒ page 107.

(!)

Note

- Never turn off trailer mode while driving when a trailer is hitched, because then the restrictions for controlling the vehicle level will be turned off.
- Driving with a trailer on unpaved roads when the vehicle is raised may change the vehicle handling. Adapt your speed.
- Note that the vehicle will lower automatically at certain speeds if you have lifted the vehicle manually.
- Be sure to adhere to the applicable tongue weight for your vehicle ⇒ page 131. Select the Audi drive select comfort mode before connecting the trailer. The tongue weight and vehicle height must be coordinated with one another.



Tips

Even when lowering manually, the vehicle level will not lower more than the amount specified in the Audi drive select **comfort** mode.

Trailer hitch

Introduction

Only use a trailer hitch with a removable ball hitch mount and ball hitch. The trailer hitch must be permitted for the vehicle, the trailer and the permitted total weight of the trailer being pulled. Above all, it must be securely and safely attached to the vehicle trailer.

Never mount a trailer hitch on the bumper. The trailer hitch must be mounted in a way that does not impair the function of the bumper. Do not make any modifications to the brake system.

Check regularly if the trailer hitch is securely mounted. Always follow the instructions given by the trailer hitch manufacturer.

Λ

WARNING

Never mount a "weight-distributing" or "loadbalancing" trailer coupler as the trailer hitch. The vehicle was not designed for these types of trailer hitches. The trailer hitch can malfunction and the trailer can separate from the vehicle, which increases the risk of an accident.

Using the trailer hitch

Applies to: vehicles with trailer hitch

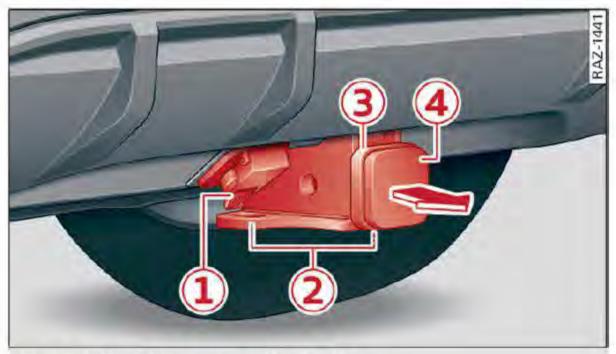


Fig. 92 Rear bumper: trailer hitch

The trailer hitch of your vehicle consists of the receiver (3), the connector (1) (1) or connector retainer, two eyelets (2) for the safety chains, and the receiver cover (4).

The receiver ③ is suitable for securing a removable ball hitch mount with a ball head, for example when towing a trailer ⇒ ⚠.

- ► In order to use the trailer hitch, pull the cover 4 out of the receiver 3 in direction of the arrow.
- ► Check the receiver ③ for dirt and clean it if necessary.
- ▶ When towing a trailer, use the trailer connector¹⁾ 1 and secure the safety chains using the eyelets 2.
- ► To prevent dirt from entering the receiver ③, close it with the cover ④ after using it.

⁴KE012721BH

¹⁾ In certain countries.

Λ

WARNING

- For your own safety, read the installation instructions provided by the ball hitch mount manufacturer.
- There is a risk of an accident if the ball hitch mount is installed incorrectly. The ball hitch mount must be secured in the receiver 3 correctly. The same applies to accessories that are secured in the receiver.
- Only use a ball hitch mount with ball head suitable for your vehicle and your trailer.
- To reduce the risk of injury, always remove the ball hitch mount if no trailer is mounted.
- To reduce the risk of an accident, contaminants on the trailer hitch must be removed because otherwise the ball hitch mount might not be secured correctly in the receiver.



Tips

- No ball hitch mount or ball head is provided with the trailer hitch. You can purchase these at specialty stores.
- The eyelets on the trailer hitch are only intended for securing the trailer safety chains.

Driving with a trailer

Trailer brakes

If the trailer has its own brake system, then follow the manufacturer specifications. However, the brake system on the trailer must never be connected to the vehicle brake system.

Safety chains

Make sure the safety chains are correctly applied when pulling a trailer. The chains should hang enough so that the trailer can drive around curves. However, they must not touch the ground.



WARNING

If the trailer is equipped with electronic brakes, these brakes cannot be activated by a factory-installed control system, which increases the risk of an accident.

Retrofit installation

You can find out if your vehicle is equipped with a retrofitted trailer hitch at an authorized Audi dealer or authorized Audi Service Facility.

An authorized Audi dealer or authorized Audi Service Facility knows the specifications for retrofitting a trailer hitch and any necessary technical requirements.



WARNING

- Only have the additional trailer hitch installed by an authorized Audi dealer or authorized Audi Service Facility.
- There is a risk of an accident if the trailer hitch is installed incorrectly.
- For your own safety, read the assembly instructions provided by the trailer hitch manufacturer.



Note

Connecting the socket incorrectly could cause damage to the vehicle electrical system.

robook.com

Assist systems

General information

Safety precautions

Λ

WARNING

- As the driver, you are always completely responsible for all driving tasks. The assist systems cannot replace the driver's attention. Give your full attention to driving the vehicle, and be ready to intervene in the traffic situation at all times.
- Activate the assist systems only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- For the assist systems to be able to react correctly, the function of the sensors and cameras must not be restricted. Note the information on sensors and cameras
 ⇒ page 136.

i

Tips

- Pay attention to applicable local regulations relating to driving tasks, leaving space for emergency vehicles, vehicle distance, speed, parking location, wheel placement, etc. The driver is always responsible for following the laws that are applicable in the location where the vehicle is being operated.
- You can cancel a steering or braking intervention by the system by braking or accelerating noticeably, steering, or deactivating the respective assist system.
- Always check the assist systems settings before driving. The settings could have been changed, for example by other drivers or by using another user.

System limitations

Λ

WARNING

- The use of an assist system cannot overcome the natural laws of physics. A collision cannot be prevented in certain circumstances.
- Warnings, messages, or indicator lights may not be displayed or initiated on time or correctly, for example, if vehicles are approaching very fast.
- Corrective interventions by the assist systems, such as steering or braking interventions, may not be sufficient or they may not occur. Always be ready to intervene.

i

Tips

- Due to the system limitations when detecting the surrounding area, the systems may warn or intervene unexpectedly or too late in certain situations. The assist systems may also interpret a driving maneuver incorrectly and then warn the driver unexpectedly.
- O he systems may not function as expected in unusual driving situations, such as driving offroad, on unpaved roads, on loose ground, on inclines, or on grooves in the road.
 - The systems may not function correctly in unclear traffic situations, such as turning lanes, exit ramps, construction zones, rises or dips that obstruct visibility, intersections, toll stations, or city traffic.
 - The detection of the surrounding area can be limited, for example by vehicles driving ahead or by rain, snow, heavy spray, or light shining into the camera.
 - In trailer mode, some assist systems may be limited, may not react as usual, or may be unavailable. Please refer to the instructions for towing a trailer located in ⇒ page 131.
 - The steering wheel touch recognition may be limited when you wear gloves. Steering intervention requests from the steering assist systems may occur more frequently.
 - If accessories have been mounted on the steering wheel, the steering assist systems may be limited. The frequency of steering

intervention requests from the steering assist systems may vary as well.

General messages

Driver assistance systems: currently limited. Affected systems will be continuously updated in message memory

If this message appears, one or more driver assist systems is limited or unavailable. To display more information, select the second tab for messages with the multifunction steering wheel \Rightarrow page 12. Take note of the information and adapt your driving style accordingly.

Surrounding area detection

Sensor and camera coverage areas

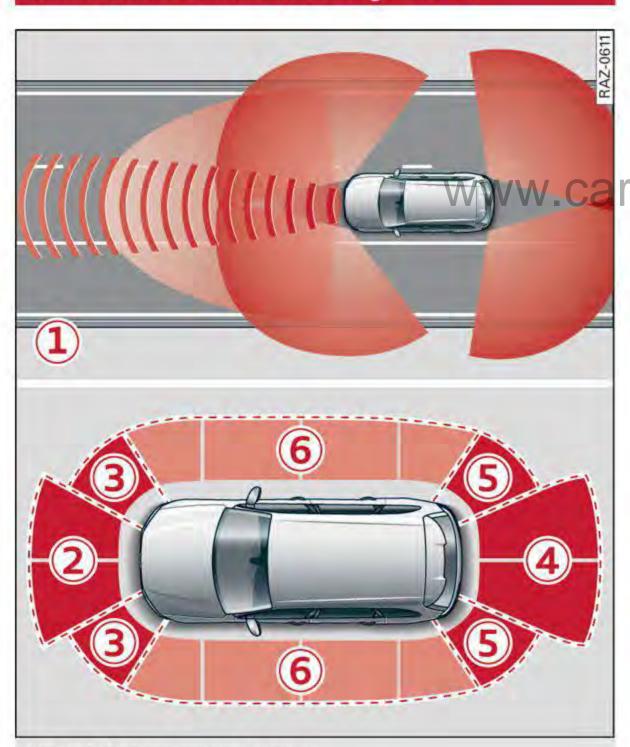


Fig. 93 Sensor coverage area

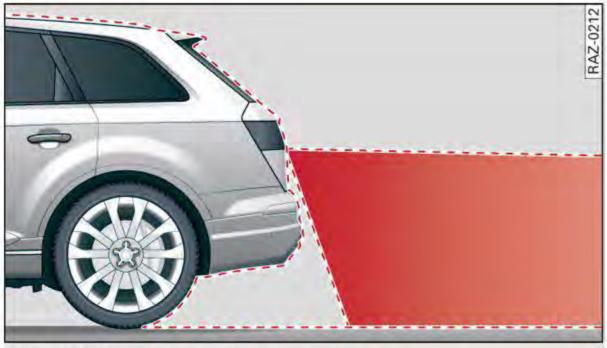


Fig. 94 Rearview camera coverage area

The assist systems analyze the data from various sensors and cameras installed in the vehicle. Do not use any assist systems if there is damage in there area of the sensors and cameras or on the vehicle underbody. Damage can impair the function of the sensors and cameras or cause malfunctions. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Radar sensors

The wheel sensors on the rear corners of the vehicle are positioned so that the adjacent lanes to the left and right are detected on roads with a normal lane width.

Ultrasonic sensors

Depending on vehicle equipment, various areas may be displayed in the MMI using the ultrasonic sensors ⇒ fig. 93.

The range of the displays depends on the location of the ultrasonic sensors:

- 2 Approximately 4 feet (1.20 m)
- 3 Approximately 3 feet (0.90 m)
- Approximately 5.2 feet (1.60 m)
- (5) Approximately 3 feet (0.90 m)
- 6 Approximately 3 feet (0.90 m)

The side area (6) is detected and evaluated when passing. There may have been changes to the surrounding area after switching the ignition off and on again, after opening the doors, or if the vehicle is left stationary for a period of time. In this

case, the area will appear black until the area has been detected and evaluated.

Cameras

Use the camera image on the display to assist you only if it shows a good, clear picture. Keep in mind that the image in the display is enlarged and distorted. Under certain circumstances, objects may appear different and unclear on the display.

The rearview camera can only detect the area marked in red \Rightarrow fig. 94. Only this area is displayed on the upper display $\Rightarrow \triangle$.

A

WARNING

Sensors and cameras have spots in which the surrounding area cannot be detected. Objects, animals, and people may only be detected with limitations may not be detected at all. Always monitor the traffic and the vehicle's surroundings directly and do not become distracted.

1

Note

www.caro

- Obstacles may disappear from the measurement range when approaching them, even if they were already detected.
- In some situations, the ability of the sensors and cameras to detect and display certain objects may be limited.
 - Objects located above the coverage area, such as bumpers on parked cars, garage doors that are partially open, or objects that are hanging
 - Low obstacles
 - Narrow objects, such as barrier chains, foliage, poles, or fences
 - Projecting objects, such as trailer draw bars
 - Objects with certain surfaces and structures, such as fabric

(i)

Tips

– The sensors and cameras and the areas around them must not be obstructed because this can impair the function of the systems that depend on them. Make sure

- that the sensors and cameras are free of snow, ice, and other deposits. Do not use any accessories, stickers, or other objects that extend into the range of the sensors and cameras.
- On vehicles that have factory-installed license plate brackets on the front of the vehicle, the brackets may only be replaced with ones that are the same size and made of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.
- The function of the sensors and cameras may be limited when light and visibility conditions are poor, for example when driving into a tunnel, when there is glare, or when there are reflective objects.
- External ultrasonic sensors, such as those in other vehicles, can interfere with the sensors.
- The coverage areas of the sensors ⇒ fig. 93 and cameras ⇒ fig. 94 are diagrams and do not represent a true-to-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Locations of the sensors and cameras

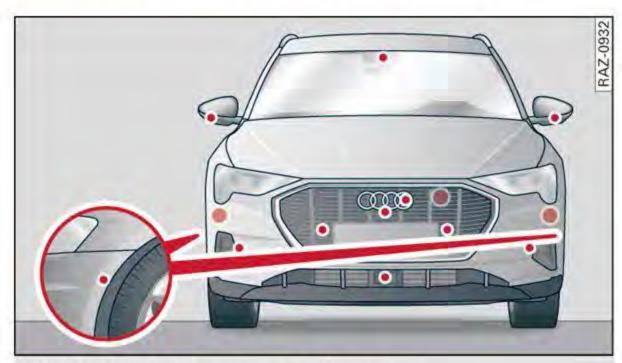


Fig. 95 Front area: sensors and cameras

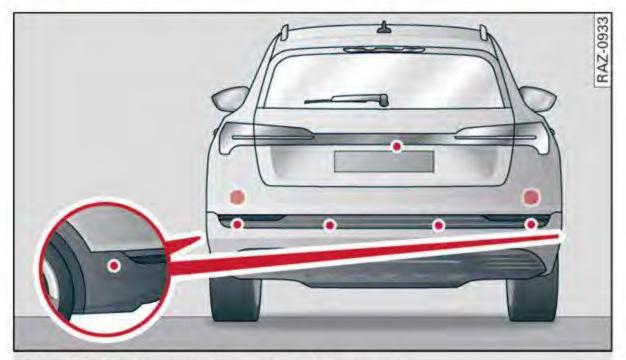


Fig. 96 Rear area: sensors and cameras

Front area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Laser scanner in the front of the bumper $\Rightarrow \Lambda$.
- Camera behind the windshield
- Peripheral cameras on the exterior mirrors
- Front peripheral camera in the radiator grille
- Night vision camera in the radiator grille
- Front and side ultrasonic sensors
- Radar sensors at the front corners of the vehicle
- Radar sensor in the front in the radiator grille

Rear area

Depending on the vehicle equipment, the following sensors and cameras may be installed:

- Rearview camera in the luggage compartment lid
- Radar sensors at the rear corners of the vehicle
- Rear and side ultrasonic sensors

A

WARNING

Applies to: vehicles with laser scanner

- The surface of the laser scanner can become hot during operation, which increases the risk of burns.
- The laser scanner contains a class 1 laser in accordance with IEC 60825-1:2014. When used according to regulations, the laser is not dangerous. Opening the laser module and removing covers is not permitted. Doing so could cause permanent injuries to the eyes.
- Any repair work on the laser module must be performed by an authorized Audi dealer or authorized Audi Service Facility; otherwise the vehicle's operating license may be voided. Incorrect repairs may cause limited functionality and eye damage.



Tips

Applies to: vehicles with laser scanner

- The possible emissions are below the threshold for class 1 lasers.
- Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.



Tips

- The locations of the sensors may differ slightly depending on vehicle equipment.
- Some sensors are installed under vehicle components and cannot be seen from the outside.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Switching assist systems on and off

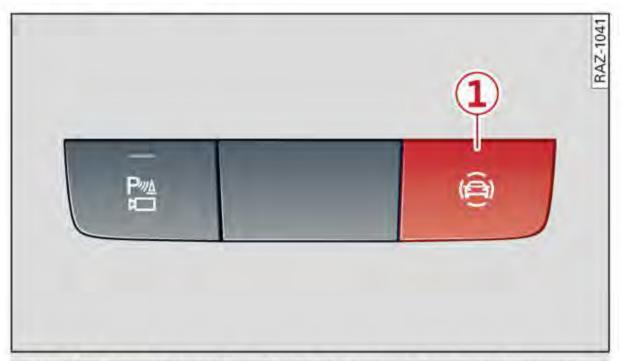


Fig. 97 Center console: driver assistance systems button

Description

You can switch some assist systems on and off in the MMI. Depending on the equipment, it may be in the profile selection or the standard display.

- ► Press the ⊕ button 1, or
- ► Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance.

Profile selection

Applies to: vehicles with profile selection www.carobook.com

- ► To select a profile, press the profile name on the upper display or press the 🗐 button 🕦 repeatedly until the profile is active.
- ► To list systems included in a profile, select 🗏 on the upper display.

The following profiles can be selected:

- Maximum All available systems are switched on in this profile.
- Basic or All off Only the basic systems are switched on in this profile. If no basic system is available, the profile is named All off.
- Individual You can switch the systems on and off individually in this profile. To switch individual systems on and off in the Individual profile, select and for the desired systems.

Standard display

Applies to: vehicles with standard display

desired system.

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Driving information

Speed warning system

Description

Applies to: vehicles with speed warning system

The speed warning system helps the driver to stay below a specified maximum speed. A warning threshold can be set in the MMI for this purpose.

Once the speed slightly exceeds the stored threshold, the speed warning system will alert the driver with an indicator in the instrument cluster and a warning tone. Once the speed drops below the stored maximum speed, the indicator will turn off.

Setting a threshold is recommended if you would like to be reminded when you reach a certain maximum speed. Situations where you may want to do so include driving in a country with a general speed limit or if there is a specified maximum speed for winter tires.



Tips

www.caro

Regardless of the speed warning system, you should always monitor your speed using the speedometer and make sure you are following the legal speed limit.

Setting the warning threshold

Applies to: vehicles with speed warning system

► Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (۞) > Speed warning.

Messages

Applies to: vehicles with speed warning system

The following messages may appear depending on the vehicle equipment:

Manually set XX mph (km/h) speed limit warning threshold exceeded

The stored speed was exceeded.

Camera-based traffic sign recognition

Description

Applies to: vehicles with camera-based traffic sign recognition



Fig. 98 Instrument cluster: traffic sign recognition

The traffic sign recognition shows the traffic signs detected by the front camera in the instrument cluster display and in the head-up display*. Data from the navigation system is also included in the display. Up to three traffic signs can be displayed in the instrument cluster at once. The speed limit that is currently applicable is displayed in the status line. If necessary, it will be hidden if the system detects that turning right is prohibited at a red light. The display in the head-up display* can be switched off \Rightarrow page 25.

Within the limits of the system and depending on the market, speed limit restrictions 1 in school zones, highways, construction zones, or at night may be displayed.

Limitations

The traffic sign recognition is subject to certain system limitations and may be unavailable or only partially available in the following situations:

- When visibility is poor, such as in snow, rain, fog, or heavy spray
- When there is glare, for example from oncoming traffic or the sun
- At high speeds
- If the camera's visual field ⇒ page 136 is covered, for example by dirt or stickers. For information on cleaning, see ⇒ page 270.

- If the traffic signs are completely or partially covered, for example by trees, snow, dirt, or other vehicles
- If traffic signs do not conform to the standard format
- If traffic signs are damaged or bent
- If traffic signs are displayed on sign holders with electronic signs
- If the traffic signs or the roadways have changed, and the navigation data is no longer up-to-date

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Under some circumstances, traffic sign recognition may not detect traffic signs correctly or detect them at all. As a result, the system may not display the correct speed limit or any speed limit.



Tips

- Traffic sign recognition does not adapt your vehicle's speed to match the speed limit.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, a display of 50 in the instrument cluster can mean either mph or km/h, depending on the country.

Operation

Applies to: vehicles with camera-based traffic sign recognition

Accessing traffic sign recognition

Select in the instrument cluster: vehicle functions tab > Traffic signs.

Setting a traffic sign based speed warning

► Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (⑥) > Speed warning.

You can select a warning threshold. If you exceed this, then the current detected speed limit will be shown in the display with an exclamation point for the duration that it is exceeded and it will blink for a short time.

Messages

Applies to: vehicles with camera-based traffic sign recognition

The following messages may appear depending on the vehicle equipment:

Traffic sign recognition: currently unavailable. Camera view limited due to surroundings

The camera's visual field is covered. Clean the windshield.

Traffic sign recognition: currently limited. See owner's manual

This message appears if navigation system data is not available, for example on newly-constructed roads. The speed limit display will be temporarily limited, which increases the risk of an incorrect display. If this message continues to appear, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

No traffic sign information available

Depending on the area, there is no valid navigation data and no speed limits were detected. This may also appear if there is a recommended speed, but no speed limit (for example when driving on and off the expressway).

Malfunction! See owner's manual

The system may not function correctly so it has been switched off. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Function currently unavailable. See owner's manual

If this message appears on vehicles without camera-based traffic sign recognition, then the traffic light information function is currently unavailable. See ⇒ page 143.

Traffic light information

Description

Applies to: vehicles with traffic light information

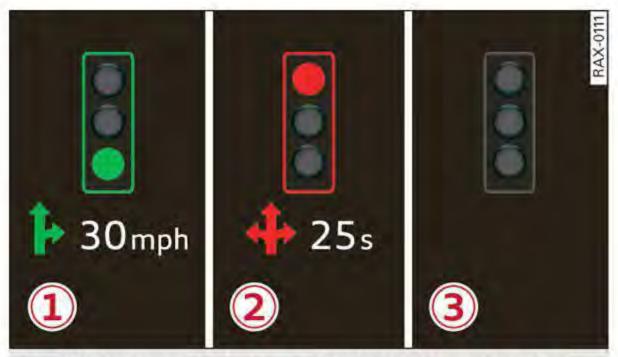


Fig. 99 Instrument cluster: traffic light information display

The traffic light information gives you a speed recommendation in order to reach the next traffic light when it is green ①, or it informs you of the wait time at the next red light ②. Once traffic light data is received, the traffic light information will be displayed in the instrument cluster and in the head-up display*. If the vehicle is in an area with traffic light information but cannot receive a traffic light signal, then a gray traffic light symbol will be displayed ③.

General information

The traffic light information is subject to system limitations and may be unavailable or only partially available in the following situations:

- If the permitted speed limit is exceeded
- If driving below a certain speed limit
- If the next traffic light is less than approximately 100 feet (30 m) away
- If the estimated wait time at a red light is less than four seconds
- If there is no traffic light data available
- If emergency response vehicles or public transit systems are active
- If traffic lights are in construction zones or being serviced
- If there are warnings from the camera-based traffic sign recognition*
- If the camera-based traffic sign recognition* is malfunctioning or not available
- If the data connection has been interrupted

- If data transmission is deactivated in the privacy settings
- If the subscription has expired

If this is the case, the menu item will be grayedout or it will not be possible to select it.

Λ

WARNING

- When traffic light information is shown, also always pay attention to the traffic situation, the distance to other vehicles, and the area around the vehicle. The driver is always responsible for assessing the traffic situation.
- Always adapt your speed to the current weather, road and traffic conditions. The displayed information must never cause you to ignore legal traffic regulations and pose a safety risk.
- Regardless of the traffic light information, you should always monitor your speed using the speedometer and make sure you are adhering to the legal speed limit.
- The traffic light information does not adjust your vehicle's speed to the speed recommendation shown in the display.
- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

- Traffic light information was only available in select cities at the time this manual was printed.
- Traffic light information is not available nationwide.
- The functions depend on the navigation data* being up-to-date and correct identification by the traffic sign recognition*.
- Incorrect values from the camera-based traffic sign recognition* or outdated navigation system* map data can result in missing or incorrect display images.
- Certain traffic lights can automatically adjust to the current traffic situation. If this occurs, the display of traffic light information can change suddenly.

- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Units of measurement and language settings are displayed based on how they were set in the MMI system settings ⇒ page 233.

Operation

Applies to: vehicles with traffic light information

Switching traffic light information on and off

The system can be switched on and off in the MMI \Rightarrow page 139.

Accessing traffic light information

Select in the instrument cluster: vehicle functions tab > Traffic signs.



Tips

If another tab or another function is selected in the instrument cluster, the traffic light information will appear in the status bar on the instrument cluster.

Messages

Applies to: vehicles with traffic light information

The following messages may appear depending on the vehicle equipment:

Malfunction! See owner's manual

The system could not be configured, for example due to a network malfunction. Switch the ignition off and shut down the vehicle to restart the system. Wait several minutes until the vehicle has shut down completely and then switch the ignition back on.

Function currently unavailable. See owner's manual

There is a temporary system malfunction. Check if one or more of the following situations applies and correct the issue if necessary:

- Traffic light information is switched off
- Data transmission is deactivated

- The vehicle is not equipped with traffic sign recognition.
- There is no valid license
- Traffic light information is not available in that area

Lap timer

Introduction

Applies to: vehicles with lap timer

You can record and evaluate lap times with the lap timer. You can operate the lap timer using the multifunction steering wheel ⇒ page 12.

Opening the lap timer

► Select in the instrument cluster: Vehicle functions tab > is button > Lap times.

An additional indicator will appear in the head-up display*.



WARNING

Your focus should always be on driving your vehicle safely. As the driver, you have complete responsibility for safety in traffic. To reduce the risk of an accident, only use the lap timer functions in such a way that you always maintain complete control over your vehicle in all traffic situations.



Tips

You can retrieve information from the trip computer while the lap timer stopwatch is running.

Lap times and timing

Applies to: vehicles with lap timer

Requirement: the lap timer must be open ⇒ page 143.

Timing laps

- ► To start timing manually, select **Start lap 1** in the menu.
- ➤ To start timing automatically as soon as you begin to drive, select Start lap 1 by driving off or Start by driving off in the menu.

➤ To start timing a new lap after driving a lap, select **New lap** in the menu. This starts timing the next lap at the same time.

After completing a lap, the difference between the last lap and the previous best lap time will be indicated with a "-" or "+".

Pausing timing and displaying a split time

- ► To insert a pause 📆 , select Pause in the menu.
- ► To resume timing, select **Resume** in the menu.
- ➤ To display a split time, select **Split time** in the menu. The split time appears for approximately ten seconds in the instrument cluster. The current lap timing will continue running.

Canceling lap timing

The timing of the current lap will stop. The lap time will be erased and will not be included in the statistics.

► Select Cancel lap in the menu.

Resetting the time

► Select Reset lap times in the menu.



Tips

- A maximum of 99 lap times can be measured.
- If timing is paused, you can continue it later even if you switch the ignition off.
- Saved lap times cannot be individually deleted from the total results.
- The saved lap timer values will remain after switching the ignition off.

Lap statistics

Applies to: vehicles with lap timer

Displaying lap statistics

You can display the number of laps driven , the fastest lap "+", the slowest lap "-", and the average time "Ø" in the instrument cluster.

- ► Select in the instrument cluster: Vehicle functions tab > button > Lap statistics.
- Turn the thumbwheel down or up to display the individual lap times.
- ➤ To return to the lap timing that was started, select the I button > Lap times.

Resetting lap statistics

Requirement: the lap statistics menu must be displayed.

► To reset the lap statistics, press and hold the left thumbwheel until the message No lap times have been recorded yet. appears.



Tips

The lap statistics list the lap times for the last 30 laps. The fastest and slowest lap times out of up to 99 measured laps are also displayed.

Night vision assist

Description

Applies to: vehicles with night vision assist

Night vision assist helps you when it is dark by using an infrared camera to monitor the area in front of your vehicle, within the limits of the system. It can display objects up to a distance of approximately 1,000 feet (300 m).

Pedestrian and wild animals are detected by measuring the temperature difference between the object and the background. Pedestrians and wild animals will not be detected if the temperature difference is too small. The pedestrian and wild animal marking feature is deactivated at temperatures above approximately 77 °F (25 °C) and when it is light outside.

The thermal image detected by the camera is displayed in the instrument cluster. Warm areas generally appear lighter and cold areas appear darker.

The camera for the night vision assist is located in the vehicle's radiator grille \Rightarrow page 138. Make sure the night vision camera is not covered by stickers, deposits, or any other obstructions because this can impair the night vision assist function. Follow the information about cleaning \Rightarrow page 270.



WARNING

 Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

- Night vision assist can only detect pedestrians and wild animals located within the range of the infrared camera.
- Night vision assist cannot detect pedestrians or wild animals and mark them if:
 - They are not in an upright position, for example if they are sitting or lying down and/or
 - The silhouette in the display appears incomplete or interrupted, for example because the pedestrian is partially behind a vehicle or an animal is partially covered by tall grass.
- Never attempt to swerve around animals if doing so would endanger you or other road users.

i

Tips

- Even though the system evaluates the shape and heat given off by all detected objects, there are limits to the system. There may be false warnings.
- For technical reasons, the image pauses in split second intervals.

Switching on and off

Applies to: vehicles with night vision assist

The system can be switched on and off in the MMI \Rightarrow page 139.

- ► The AUTO light function must be selected for the night vision assist to automatically activate when it is dark.
- ➤ Switch on the low beams manually to activate night vision assist immediately. To do so, press ① on the light switch module and select ⑤.

When activated, the ment cluster.

► Select in the instrument cluster: 5/1 tab



Tips

When the night vision assist tab is selected in the instrument cluster and the low beams are switched off, the thermal image display disappears only after you have exited the tab.

Marking and warning

Applies to: vehicles with night vision assist

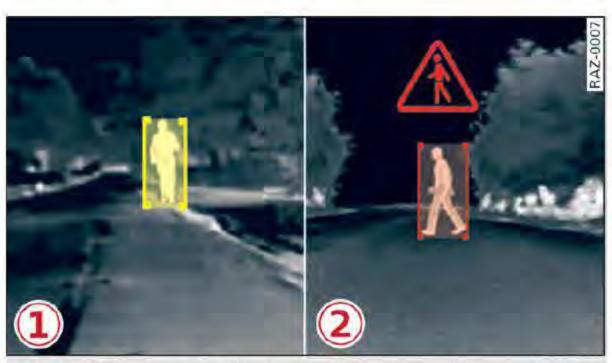


Fig. 100 Instrument cluster: pedestrian marking and warning

Highlighting detected pedestrians and wild animals

Within the limits of the system, the night vision assist can detect pedestrians and wild animals that are between approximately 32 feet (10 m) and 295 feet (90 m) in front of the vehicle and within the detection zone. Animal recognition is not active within highly developed areas. The system only detects large wild animals such as deer. When it is dark outside and the low beams are switched on, detected objects are marked in yellow 1, within the limits of the system.

Pedestrian and wild animal warning

This system limits are based on the vehicle speed and steering angle. Pedestrian and wild animal warning encourages you to pay more attention.

If there are pedestrians or wild animals in front of your vehicle that could pose a danger, the system will direct your attention to this.

- Pedestrians or wild animals are highlighted in red in the instrument cluster (2) and the () or symbol turns on (2).
- When the head-up display* is switched on, the additional indicator or appears.
- A chime will sound if something is detected.
- If the night vision assist thermal image is replaced by another display (such as the on-board computer), the red or indicator light will appear if there is a pedestrian or wild animal warning.

Driving information

The SM symbol will appear when pedestrian and wild animal detection is not available.

Marking light*

To direct the driver's attention to a pedestrian, the headlights can flash on the pedestrian when there is a pedestrian warning.

This occurs at speeds above approximately 35 mph (60 km/h) if you are outside of illuminated areas and no detected vehicles are shown. The marking light is not used for wild animals. The high beam assistant* controls the marking light*⇒ page 51.

Adjusting the contrast

Applies to: vehicles with night vision assist

Requirement: the night vision assist must be switched on and the 5/1 tab must be displayed.

- ▶ Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (⑤) > Night vision assist.
- ► To set the desired contrast, move the slider.

To use the ITM in toll zones, you must register and activate it.

Registration

- ▶ Applies to: MMI: Select on the home screen: VEHICLE > Settings & Service > Integrated Toll Module.
- ► Note the Integrated Toll Module ID.
- To register the ITM, go to the displayed web address and follow the instructions.

Activation

► To activate the ITM, press in the MMI.

Entering the number of passengers

Depending on the number of passengers and the region, a lower toll fee may be charged. You must either enter the number of passengers or deactivate the ITM based on the laws applicable in the area where you are driving.

- ► To enter the number of passengers, select the appropriate button in the MMI.
- ► To deactivate the ITM, press in the MMI.

www.caro

Messages

Applies to: vehicles with night vision assist

The following messages may appear depending on the vehicle equipment:

Night vision assist: currently unavailable. See owner's manual

The system is not functioning correctly at the time, so it has been switched off. If the malfunction persists, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Integrated Toll Module

Description

Applies to: vehicles with Integrated Toll Module

Depending on the region, you can pay toll fees in certain countries using the Integrated Toll Module (ITM). It replaces a separate transponder for detecting toll fees. The system electronics are integrated in the rearview mirror housing.

Tips Tips

- The driver is responsible for specifying the correct number of passengers and activating or deactivating the ITM.
- Malfunctions can occur when detecting tolls if both the ITM and transponder are activated. Deactivate the system not being used or remove it as necessary.
- If a rearview mirror is replaced, you must register the new ITM and remove the old ITM from the account.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Display

Applies to: vehicles with Integrated Toll Module

The selected number of passengers is displayed in the MMI status bar \Rightarrow page 21.

The notification in the MMI will indicate if there is a faulty connection between the ITM and the MMI or if

the ITM is faulty. If the connection interference continues or the ITM is faulty, drive immediately to an authorized Audi dealer or authorized Audi Service Facility.

www.carobook.com

Driver assistance

Cruise control system

Description

Applies to: vehicles with cruise control system

The cruise control system assists the driver in maintaining a constant speed above approximately 15 mph (20 km/h). The system maintains the desired speed by braking and accelerating.

A

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The cruise control system is only an assist system, and the driver is still responsible for controlling the vehicle. The driver is especially responsible for braking, controlling the speed, and maintaining the distance to other vehicles.
- Switch the cruise control off temporarily when driving in turning lanes, highway exits, or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.



Note

Before driving downhill a long distance on a steep hill, decrease your speed and use the braking effect of recuperation ⇒ page 98. This reduces the load on the brakes.

Display overview

Applies to: vehicles with cruise control system

Indicator lights and messages in the speedometer inform you about the driving situation and the settings. The displays depend on the country and equipment.

Indicator lights

CRUISE / - the cruise control system is switched on and actively controls the set speed.

An additional indicator will appear in the head-up display*.

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Switching the system on

Applies to: vehicles with cruise control system



Fig. 101 Operating lever: switching the system on

Requirement: the ignition must be switched on.

➤ To switch the system on, pull the lever toward you to position ②.

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- If the brakes are malfunctioning (for example, overheating) while the cruise control system is switched on, the regulating functions may shut off automatically.

Preselecting or activating a cruise control speed

Applies to: vehicles with cruise control system

When the vehicle is stationary, you can preselect the speed to be maintained, or you can select the speed while driving.

Requirement: the system must be switched on.

- ► To preselect a cruise control speed when the vehicle is stationary, tap the lever toward ⊕/⊙
 ⇒ page 148, fig. 101.
- ► To activate the cruise control speed, pull the lever toward position ② while driving.

► To set the current driving speed as the cruise control speed, press the button ① on the lever.

Changing the cruise control speed

Applies to: vehicles with cruise control system

Requirement: the system must be switched on.

- ► To increase or decrease the cruise control speed in small increments, tap the lever up to the first level toward (+)/(-) \int page 148, fig. 101.
- ➤ To increase or decrease the cruise control speed in larger increments, tap the lever up to the second level toward (+)/(-).
- ► To increase or decrease the cruise control speed continuously, tap and hold the lever at the first or second level toward (+)/(-).

Overriding or deactivating the cruise control speed

Applies to: vehicles with cruise control system

You can override or deactivate the cruise control system. When you deactivate the system, your cruise control speed will be stored and you can resume that speed.

Requirement: the system must be switched on and the regulated speed must be activated.

Overriding

- ➤ To temporarily override the cruise control speed, press the accelerator pedal.
- ➤ To resume the stored regulated speed, remove your foot from the accelerator pedal.

If you override the cruise control system for a long period of time, the cruise control system will be deactivated.

Deactivating

- ► To deactivate the cruise control speed, press the lever to position ③ (not locked into place) ⇒ page 148, fig. 101, or
- ▶ Press the brake pedal.

A

WARNING

Resting your foot on the accelerator pedal could override the cruise control. Braking in-

terventions and corrective actions by the system may not occur.

Switching the system off

Applies to: vehicles with cruise control system

If you do not want to use the cruise control system for a longer period of time, you can switch it off.

► To switch the system off, press the lever toward (locked into place) ⇒ page 148, fig. 101.

The indicator light will turn off and the set speed will be cleared.

Messages

Applies to: vehicles with cruise control system

If CRUSE or is displayed when there is a malfunction, the cruise control system functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Efficiency assist

Description

Applies to: vehicles with efficiency assist

Efficiency assist can assist the driver with predictive information in order to reduce fuel consumption. Depending on vehicle equipment, the system may access data from the navigation system, the camera behind the windshield, and the radar sensors.

If you have switched on automatic recuperation in the MMI and you remove your foot from the accelerator pedal, Efficiency assist will regulate the recuperation and coasting phases based on the situation.

Adjusting the efficiency assist

You can adjust efficiency assist functions individually. The settings depend on the vehicle equipment.

- Recuperation ⇒ page 98.
- Predictive messages ⇒ page 151.
- Predictive control ⇒ page 160, Adjusting the adaptive cruise assist.

Situation symbols

Depending on vehicle equipment, the following symbols may be shown. The symbols indicate the situation to which the efficiency assist is responding.

Some symbols only appear if **Predictive messages** are switched on, and some symbols only appear if **Predictive control** is switched on and adaptive cruise assist* is active.

Symbol	Description	
*	Slow down (predictive messages only)	
50	Speed limit (example) WWW.Ca	
0	Speed limit removed	
17	Curve or Exit ahead	
	Intersection ahead	
	Traffic circle ahead	
%	Steep grade (predictive messages only)	
	Vehicle driving ahead (predictive messages only)	
₹ 7	(predictive control only) If the indicator light turns on in green and red, it is indicating that there is a difference between the speed limit and the set speed.	

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- In certain situations, the recuperation may brake proactively. However, the recuperation braking effect is limited. Always be ready to brake to reduce the risk of an accident.

i

Tips

- The functions depend on the navigation data* being up-to-date and correct identification by the traffic sign recognition*.
- The system only detects traffic signs that specify a speed limit.
- The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, a display of 50 in the instrument cluster can mean either mph or km/h, depending on the country.
- Except for the road network, which is recorded in the navigation system's map information, certain functions may not be available.

Predictive messages

Applies to: vehicles with efficiency assist

The symbol appears in the instrument cluster display if efficiency assist recommends removing your foot from the accelerator pedal.

Additional symbols that indicate the situation to which the efficiency assist is reacting are shown in the **Driver assistance** display \Rightarrow page 150.

Requirements

- The cruise control system* or the adaptive cruise assist* controls must not be active.
- The vehicle speed must be at least 20 mph (30 km/h).
- The remaining distance until the situation is reached must be large enough to allow the system to react to the situation.

Switching Predictive messages on or off

You can switch predictive messages on or off. The possible settings depend on the vehicle equipment.

Applies to: MMI: Select on the home screen: Vehicle > Charging & Efficiency > Efficiency assist > Predictive messages.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Pay attention to traffic and the area around your vehicle when efficiency assist is switched on. The driver is always responsible for assessing the traffic situation.

(i)

Tips

- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- When a route is planned using the navigation system*, then system displays messages based on an assumed route. Without route guidance, the system displays messages based on an assumed route.
- The wording of the message may vary depending on the Audi drive select* mode and the selector lever position that are selected. No messages are displayed when in the "S" driving program.
- Additional messages are displayed when in the efficiency* Audi drive select mode or in Range mode.

Adaptive cruise assist

General information

Applies to: vehicles with adaptive cruise assist

Depending on the vehicle equipment, the adaptive cruise assist may consist of the following functions:

Within the limits of the system, the adaptive speed assist assists the driver in controlling the

speed and the set distance to the vehicle driving ahead. If the system detects a vehicle driving ahead, the adaptive speed assist can brake and accelerate your vehicle within the limits of the system. On open roads with no traffic, it functions like a cruise control system. The stored speed is maintained. When approaching a vehicle driving ahead, the adaptive speed assist automatically brakes to match that vehicle's speed and then maintains the set distance as much as possible. Once the system does not detect a vehicle driving ahead, adaptive speed assist will accelerate up to the set speed.

The additional **lane guidance** assists the driver with corrective steering in order to stay in the lane. You can adjust if the adaptive cruise assist will provide support with lane guidance ⇒ page 155, Switching lane guidance on and off.

In stop-and-go traffic and in traffic jams, the vehicle may brake to a full stop and then may also start driving again automatically under certain conditions.

Applies to: vehicles with traffic jam assist: In **traf**-**fic jams or in stop-and-go traffic**, the **traffic jam assist** can assist the driver to stay within the lane
detected by the system \Rightarrow page 155, Overview of
displays and lane guidance limitations.

Applies to: vehicles with efficiency assist: **Predictive control** can adjust the speed based on traffic and road conditions ⇒ page 156, Predictive control.



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

The system complies with United States FCC regulations and ISED regulations ⇒ page 300.

Limitations

Applies to: vehicles with adaptive cruise assist

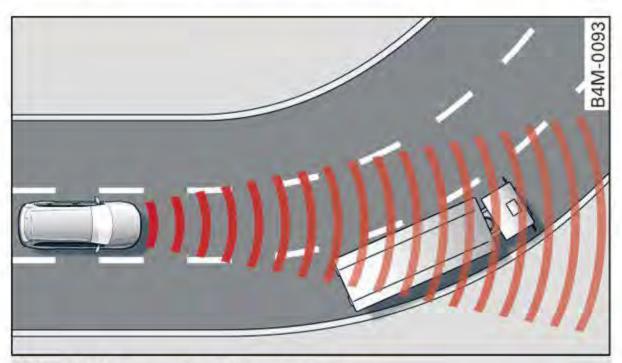


Fig. 102 Example: driving into a curve

In some situations, the adaptive cruise assist function is limited and you must assume control of the vehicle when necessary, for example by applying the brakes.

- When driving into a curve ⇒ fig. 102 and out of a curve, the system may react to a vehicle in the neighboring lane and apply the brakes. You can override the system by pressing the accelerator pedal briefly.
- The system works with the various sensors and cameras in the vehicle. Vehicles can only be detected once they are within the area and range covered by the sensors ⇒ page 136, fig. 93.
- When driving around tight curves, a vehicle driving ahead that was previously detected may no longer be detected, and the adaptive cruise assist may accelerate unexpectedly.
- The system does not react to a stationary vehicle in the same lane if it expects that you can easily drive around the stationary vehicle by turning the steering wheel.
- The system cannot react to stationary objects, such as vehicles at the end of a traffic jam, especially when traveling at high speeds.
- The system has a limited ability to detect vehicles that are a short distance ahead, off to the side of your vehicle, or moving into your lane.
- Objects that are difficult to detect, such as motorcycles, vehicles with high ground clearance, or vehicles with an overhanging load, may be detected late or not detected at all.

 The system does not respond to people, animals, or objects that are crossing or approaching from the opposite direction.

Λ

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Display overview

Applies to: vehicles with adaptive cruise assist



Fig. 103 Instrument cluster: display in speedometer

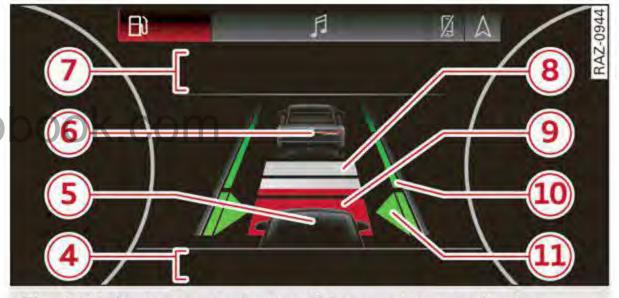


Fig. 104 Instrument cluster: driver assistance display

Indicator lights and messages in the speedometer ① - ③ inform you about the driving situation and the settings. In the **Driver assistance** display ④ - ①, you can find more detailed information about the system. The displays depend on the country and equipment.

Display in the speedometer

The display in the speedometer is not available in all layouts*.

- Marking for the set speed
- 2 Current vehicle speed
- 3 Available speed range for adaptive cruise assist (example)

Image in the Driver assistance display

The display only appears when the **Driver assistance** display is open in the trip computer ⇒ page 14.

- Messages and settings
- (5) Your vehicle
- 6 Detected vehicle driving ahead
- Messages and settings
- 8 Set target distance
- If you fall below the set distance, the distance bars turn red from the bottom upward.
- 10 Lane departure warning availability
- Availability of lane guidance for adaptive cruise assist

Indicator lights

- The speed/distance control is active. No vehicles were detected ahead. The stored speed is maintained.
- The speed/distance control is active. A vehicle was detected ahead. The system controls the speed and distance from the vehicle driving ahead, and accelerates and brakes/automatically.

Applies to: vehicles with traffic jam assist

- Traffic jam assist with improved lane guidance is active. A vehicle was detected ahead. The system controls the speed and distance from the vehicle driving ahead, and accelerates and brakes automatically. Traffic jam assist is available at speeds below 40 mph (60 km/h).
- The speed/distance control is active but the vehicle is not ready to drive. A vehicle was detected ahead. Your vehicle is stationary and will not start driving automatically.
- The speed/distance control is active but the vehicle is not ready to drive. No vehicles were detected ahead. Your vehicle is stationary and will not start driving automatically.
- The automatic braking is not enough to maintain a sufficient distance from a vehicle driving ahead. You must intervene ⇒ page 160, Driver intervention request.
- Lane guidance is active.

- Lane guidance is switched on but not active.
- The limits of the system have been reached.
 Take over steering.

<u>∧</u> w

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Using adaptive cruise assist

Applies to: vehicles with adaptive cruise assist



Fig. 105 Lever: using adaptive cruise assist



Fig. 106 Operating lever: changing the speed

Switching on

► To switch on the adaptive cruise assist, pull the lever up to position ① until it engages.

Storing the speed and activating regulation

If you have switched the system on, you can set the current speed as the "regulated speed" and activate regulation:

- Press the SET button ②. The set speed is indicated with a marking in the speedometer ①
 ⇒ page 152, fig. 103 and shown in the instrument cluster ⇒ ⚠.
- ➤ To save the speed while the vehicle is stationary, also hold the brake pedal down.

You can set any speed between 15 mph (20 km/h) and the maximum possible speed range ③ ⇒ page 152, fig. 103.

Pausing cruise control

The control can be stopped at any time:

- While driving or when the vehicle is stationary: Press the lever away from you in the direction of the arrow. Or
- ► While driving: Press the brake pedal.

The 💄 indicator light turns off.

Resuming regulation

The previously set speed can be resumed at any time after a pause.

- ► To resume cruise control while driving, pull the lever toward you in the direction of the arrow.
- ➤ To resume cruise control when stationary, pull the lever toward you in the direction of the arrow while pressing the brake pedal.

Changing the speed

- ➤ To increase or decrease the set speed in smaller increments, briefly tap the lever toward → or → to the first level.
- ▶ To increase or decrease the set speed in larger increments, briefly tap the lever toward → or oto the second level.
- To increase or decrease the set speed continuously, hold the lever toward ⊕ or ⊙ until the marking in the speedometer ① ⇒ page 152, fig. 103 has reached the desired speed.

Applies to: vehicles with predictive control: **Predictive control** can automatically adjust the set speed based on traffic and road conditions ⇒ page 156.

Preselecting a speed

You can also preselect the speed when adaptive cruise assist is not active by moving the lever in

the desired direction \bigcirc / \bigcirc . Activate the previously selected speed by pulling the lever toward you in the direction of the arrow.

Switching off

If you do not want to use the adaptive cruise assist for a longer period of time, you can switch it off.

► Push the lever away from you into position ① until it clicks into place.

The indicator light and the set speed will turn off.

\triangle

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The adaptive cruise assist is only an assist system, and the driver is still responsible for controlling the vehicle. The driver is especially responsible for braking, steering, starting to drive, and controlling the speed and the distance from other vehicles.
- Turn on the adaptive cruise assist only if the surrounding conditions permit it. Always adapt your driving style to the current visual, weather, road, and traffic conditions.
- Switch the adaptive cruise assist off temporarily when driving in turning lanes or highway exits. This prevents the vehicle from accelerating to the stored speed when in these situations.
- If you press the SET button ② when driving at speeds below 15 mph (20 km/h), the minimum possible speed that the system can maintain will be set. If no vehicle is detected ahead of you, the vehicle will accelerate up to that speed.



Tips

 Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.

4KE012721BH

- If you switch the ignition or the adaptive cruise assist off, the stored speed is erased for safety reasons.
- When the adaptive cruise assist is switched on, the ESC and the ASR are switched on automatically.
- The system cannot be switched off or it may be interrupted if the road exceeds the maximum possible grade for safe operation.

Switching lane guidance on and off

Applies to: vehicles with adaptive cruise assist and lane guidance



Fig. 107 Turn signal lever: button for lane guidance and lane departure warning WWW.Caro

Within the limits of the system, lane guidance provides corrective steering to assist the driver with keeping the vehicle in the center of the lane as much as possible. This feature can be deactivated.

In a traffic jam, lane guidance also helps with leaving a space for emergency vehicles ¹⁾ by steering your vehicle as close to the edge of your lane as possible.

Switching lane guidance on and off

Requirement: lane guidance must be preselected in the MMI ⇒ page 160.

► To activate or deactivate the availability of the lane guidance, press the button ① on the turn signal lever.

The system will assist the driver by providing corrective steering only when adaptive cruise assist is actively regulating and availability is switched on.

Overview of displays and lane guidance limitations

The availability of lane guidance is shown with indicator lights and with arrows ① ⇒ page 152, fig. 104 in the **Driver assistance** display.

- Lane guidance is active.
- This indicator light turns on if the limits of the system have been reached (for example, the system's steering force is not sufficient to handle tight curves). Take over steering.

If turns white, lane guidance is switched on but is not active. This may occur due to the following system limits or situations:

- The necessary lane marker lines have not been detected (for example, in a construction zone or because the lines are obstructed by snow, dirt, water, or lighting)
- The lane is too narrow or too wide
- The curve is too narrow
- Visibility is obstructed by a rise or dip.
- The driver's hands are not on the steering wheel

OThe turn signal was activated.

Applies to: vehicles with traffic jam assist

— Traffic jam assist with improved lane guidance is active. A vehicle was detected ahead. The system controls the speed and distance from the vehicle driving ahead, and accelerates and brakes automatically. Traffic jam assist is available at speeds below 40 mph (60 km/h).

Steering intervention request

If no steering activity is detected or the limits of the system are reached, the driver steering intervention request will alert the driver using audio and visual signals, such as or . Take over the steering and keep your hands on the steering wheel so that you will be ready to steer at any time. The system will become inactive after a short time and will only be active again later.

If the driver does not take over steering, adaptive cruise assist will be canceled. If the vehicle is equipped with emergency assist and it is ready to

¹⁾ In certain countries.

function, it will be activated if possible ⇒ page 171.



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- Audi recommends only switching on lane guidance on well-constructed roads.
- The ⇒ fig. 107 button switches lane guidance availability and the lane departure warning on or off simultaneously, if lane guidance is preset in the adaptive cruise assist settings.

Predictive control

Applies to: vehicles with adaptive cruise assist and efficiency assist



Fig. 108 Instrument cluster: speedometer: predictive control display

With predictive control, efficiency assist adapts the set speed in adaptive cruise control 1 based on detected speed limits and the upcoming route. Once the system no longer detects any incidents, adaptive cruise control will accelerate back up to the last speed that the driver set. After switching on the ignition, the availability of predictive control is indicated by a message when the adaptive cruise assist is first activated.

Incident symbols indicate the situation to which predictive control is reacting ⇒ page 150, Situation symbols.

Requirements

- Predictive control is switched on in the MMI
 ⇒ page 160.
- The adaptive cruise assist must be actively regulating ⇒ page 153.
- The system can only react to speed limits that are 15 mph (20 km/h) or higher.

Display in the speedometer

The display depends on vehicle equipment and is not available in all layouts*.

- The marking shows the set speed (regulated speed that was set by the driver or by predictive control).
- The red band shows the difference between the speed limit and the set speed that is set.
- The marked band shows if the vehicle speed is planned to drop below the set speed due to the road layout.

Overriding control

The driver can override the predictive control at any time by pressing the accelerator pedal. If the system changes the vehicle speed to adapt to speed limits, you can change the speed using the lever ⇒ page 153, fig. 106.

Messages

If and a message with Adaptive cruise assist:

Predictive control is displayed when there is a malfunction, the efficiency assist functions are unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

A

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Pay attention to traffic and the area around your vehicle when predictive control is switched on. The driver is always responsible for assessing the traffic situation.
- The system does not consider "right of way" rules and does not respond to traffic lights, so lack of driver attention in these situations can increase the risk of an accident.
- The speed when driving through curves may be different from what you as a driver would do or may not be suitable for the weather and road conditions. If necessary, apply the brakes and reduce the selected speed to be maintained in the Adjustment to curves along route setting to reduce the risk of an accident.
- i

Tips

- Predictive control can exceed or drop below the maximum permitted speed. The driver is responsible for adhering to the permitted speed limit.
- The traffic signs on the road always take priority over the display. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- If a speed limit is detected, the marking ①
 of the set speed limit will be adjusted even
 if the adaptive cruise assist is not actively
 regulating.
- You may temporarily fall below or exceed the set speed due to recuperation.
- Control by the system depends on which adaptive cruise assist driving program is set or on the selected Audi drive select* mode.
- After switching on the ignition and first driving onto a freeway or similar road without a speed limit, the system will regulate the speed to 80 mph (130 km/h)¹⁾. Then

- the system adjusts to the last speed set by the driver.
- There is no adaptation to speed limits when driving through highway interchanges and when driving on or off the expressway.
- The system can fail to provide control or the control may be faulty if the values from the camera-based traffic sign recognition* are incorrect or the navigation system map data is outdated.
- When route guidance is switched on, the system adapts to the route provided by the navigation system. Driving without route guidance or leaving a route can result in faulty control.

Setting the distance

Applies to: vehicles with adaptive cruise assist



Fig. 109 Operating lever: setting the distance

When approaching a vehicle driving ahead, the adaptive cruise assist brakes to the set speed and then maintains the set distance. If the vehicle driving ahead accelerates, then the adaptive cruise assist will also accelerate up to the speed that you have set.

- ▶ Tap the rocker switch to display the distance that is currently set.
- ► To increase or decrease the distance in increments, tap the switch again toward ① or ②.

The newly-set distance will be shown briefly, for example with the 🚆 indicator light.

If you adjust the speed, you must also change the time gap to the vehicle driving ahead. The higher

4KE012721BH

¹⁾

¹⁾ In certain countries.

the speed, the greater the distance that is needed. The following distances can be set:

Sym- bol	Time distance	Distance at 62 mph (100 km/h)
	Approximately 1 second	92 feet (28 m)
	Approximately 1.3 seconds	118 feet (36 m)
	Approximately 1.8 seconds (the setting corresponds to a distance that is "half of the vehicle speed")	164 feet (50 m)
	Approximately 2.4 seconds	219 feet (67 m)
	Approximately 3.6 seconds	328 feet (100 m)

A

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

- When setting the distance, the driver is responsible for adhering to any applicable legal regulations.
- In the Driver assistance display, a graphic display is shown instead of the indicator lights (8) ⇒ page 152, fig. 104. The display matches the functions of the indicator lights.
- Depending on the selected driving program and distance, driving behavior when accelerating may vary from moderate to sporty
 ⇒ page 160, Adjusting the adaptive cruise assist.
- The distances provided are specified values. Depending on the driving situation and how the vehicle ahead is driving, the actual distance may be more or less than these target distances.

Overriding control

Applies to: vehicles with adaptive cruise assist



Fig. 110 Lever: overriding the control

Requirement: the adaptive cruise assist must be switched on.

Overriding control

You can completely override the control, for example when passing or if you would like to accelerate more quickly.

- ➤ To accelerate manually, pull the lever toward you in the direction of the arrow and hold it there, or press the accelerator pedal.
- lever or remove your foot from the accelerator pedal.

When you are in the **Driver assistance** display, the message **Overridden** will appear.

Decreasing the distance

The function decreases the set distance and provides assistance, for example when merging when a lane is ending.

- ► To further reduce the distance to the vehicle ahead temporarily, pull the lever toward yourself in the direction of the arrow and hold it in that position.
- To resume the system control, release the lever.

The adaptive cruise assist reduces the distance and, if necessary, accelerates the vehicle above the set speed. When you are in the **Driver assistance** display, the message **Overridden** will appear.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Resting your foot on the accelerator pedal could override the cruise control. Braking interventions and corrective actions by the system may not occur.

Driving in stop-and-go traffic

Applies to: vehicles with adaptive cruise assist



Fig. 111 Instrument cluster: safe start monitor

Stopping with adaptive cruise assist

The adaptive cruise assist also assists you in stopand-go traffic. Within the limits of the system, your vehicle may brake and remain at a stop if a vehicle driving ahead stops.

Starting to drive with adaptive cruise assist 1)

As long as the message **ready to drive** and **s** is displayed, your vehicle will begin driving when the vehicle ahead starts to move ⇒ Λ.

The touching of the steering wheel will be evaluated in stop-and-go traffic. If the driver has at least one hand on the steering wheel, the driver will be considered ready for driving, and the "ready to drive" status can be extended.

If your vehicle is stopped for too long, it will no longer drive autonomously for safety reasons, and the message will turn off.

➤ To extend **ready to drive** for a brief time or reactivate it, pull the lever briefly toward you in the direction of the arrow ⇒ page 158, fig. 110.

► To resume manual control of the vehicle, tap the accelerator pedal.

Safe start monitor

The vehicle can still start to drive even if certain obstacles are detected when starting to drive ⇒ ⚠. If the surrounding area detection detects an obstacle, you will be alerted to the danger by the ☐ indicator light.

If you are in the **Driver assistance** display, the display \bigcirc \Rightarrow fig. 111 and the message **Warning!** will also appear. An audio signal will also sound. Your vehicle will drive more slowly when starting. This may also occur in some situations when there is no apparent obstacle.

Press the brake pedal to slow your vehicle if necessary.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- If the message **ready to drive** 1) appears, your vehicle will start driving even if there is an obstacle between your vehicle and the vehicle ahead. To reduce the risk of an accident, always make sure there are no obstacles between your vehicle and the vehicle driving ahead.



Tips

For safety reasons, adaptive cruise assist only starts driving actively if:

- The driver's safety belt is fastened
- All doors and the hood are closed
- The vehicle has not been stationary for a long period of time

⁴KE012721BH

¹⁾ This is not available in some countries.

Driver intervention request

Applies to: vehicles with adaptive cruise assist



Fig. 112 Instrument cluster: request for driver intervention

The request for driver intervention instructs you to resume manual control of the vehicle if the adaptive cruise assist braking function is not able to maintain a sufficient distance to the vehicle ahead. The system will warn you of the hazard with the indicator light and the message **Distance!** An audio signal will also sound.

The display ① only appears when the **Driver assistance** display is open in the trip computer ⇒ page 14.



WARNING

cameras ⇒ page 135.

Observe the safety precautions and note the limits of the assist systems, sensors, and

Adjusting the adaptive cruise assist

Applies to: vehicles with adaptive cruise assist

You can adjust the adaptive cruise assist to your own preferences. The settings depend on the vehicle equipment.

▶ Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (⑤) > Adaptive cruise assist.

Possible settings:

Lane guidance – If lane guidance is also active when adaptive cruise assist control is active, you can switch it on or off.

Driving program – Depending on the driving program and the distance that are set, the vehicle handling will be adjusted from **Sport** to **Comfort**

and the lane guidance haptic feedback will be adjusted.

Store last distance - The last distance that was set will be stored after the ignition is switched off. If the distance is not stored, distance (time distance of approximately 1.8 seconds) is automatically preset every time the ignition is switched on.

Predictive control > Set speed limit - adaptation to speed limits can be switched On or Off. Regulation With tolerance can also be selected, if desired. In this scenario, you may fall below or exceed the set speed in favor of increased efficiency.

Predictive control > Adjustment to curves along route – regulation based on the road ahead can be switched Off or set from Slow to Fast based on your preference. The setting influences vehicle handling with predictive control, for example the speed for driving through curves.



Tips

www.ca

hicle handling and the adaptive cruise assist

haptic feedback are also affected. It may not

be possible to adjust the **Driving program**.

Messages

Applies to: vehicles with adaptive cruise assist

If or is displayed when there is a malfunction, the adaptive cruise assist functions or traffic jam assist* functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

The following messages may appear depending on the vehicle equipment:

Narrow area

Depending on vehicle equipment, this message appears in the **Driver assistance** display if the adaptive cruise assist is adjusting the speed in a narrow area, for example a construction zone.

Adaptive cruise assist: Please take over!

Adaptive cruise assist was ended, for example because the vehicle rolled backwards when starting on a slight incline even though the system was active. You must take over further control of the vehicle.


Adaptive cruise assist: limited availability. See owner's manual

This message appears when the sensor view is limited, for example, when weather conditions are too poor or a sensor is covered. You can switch on the adaptive cruise assist, but certain functions such as assistance in narrow areas will not be available. Under certain circumstances, some objects may be detected late or may not be detected at all. Be especially careful. Cleaning the area in front of the sensors page 138 may correct the malfunction.

Distance warning

Description

Applies to: vehicles with distance warning

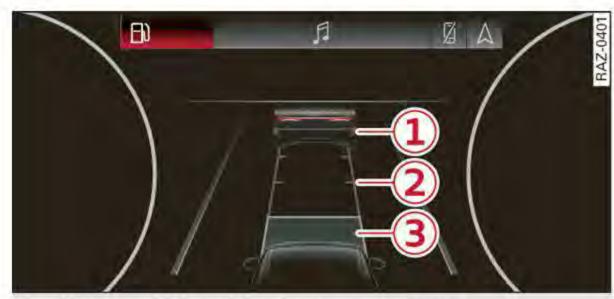

Applies to: vehicles with adaptive cruise assist

Fig. 113 Instrument cluster: display of the current distance



Applies to: vehicles with adaptive cruise assist: Fig. 114 Instrument cluster: distance warning

General information

At speeds above approximately 40 mph (65 km/h), this function measures the distance to the vehicle ahead as time. If the distance falls below the warning threshold and remains there, the system will warn you of the hazard with the indicator light.

Image in the Driver assistance display

Applies to: vehicles with adaptive cruise assist

The display only appears if the **Driver assistance** display is selected on the on-board computer ⇒ page 14 and the adaptive cruise assist is not actively controlling the vehicle.

- 1 Detected vehicle driving ahead
- Use the markings to help you estimate the distance to an obstacle. Each marking represents approximately one second.
- Set warning threshold. Depending on the settings, the display will be colored in from the bottom to the top.
- The actual distance is smaller than the set distance and you will be informed about the danger.

Adjusting the distance warning

You can switch the system on and off in the MMI ⇒ page 139.

You can adjust the distance warning to your preferences. The settings depend on the vehicle equipment.

Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (③) > Distance warning

Possible settings:

Warning threshold

Messages

If so or is displayed when there is a malfunction, the distance warning functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

- The driver is always responsible for adhering to the regulations applicable in the country a where the vehicle is being operated.
- You may fall below the warning threshold briefly when passing or when quickly approaching a vehicle driving ahead. There is no warning in this scenario. A warning is given only if you fall below the warning threshold for an extended period of time.

Lane departure warning

General information

Applies to: vehicles with lane departure warning

The lane departure warning can detect lane marker lines within the limits of the system. If you are approaching a detected lane marker and it appears likely that you will leave the lane, the system can warn you with corrective steering and a steering wheel vibration, if necessary.

The system functions in the speed range of approximately 40 mph - 155 mph (65 km/h - 250 km/h).

A

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Description

Applies to: vehicles with lane departure warning

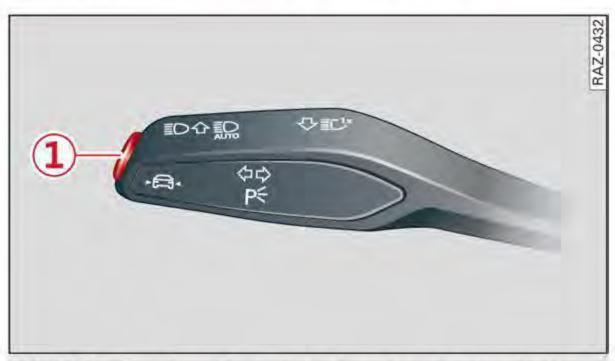


Fig. 115 Turn signal lever: lane departure warning button

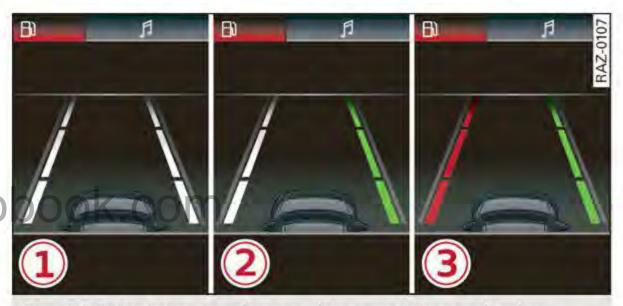


Fig. 116 Instrument cluster: driver assistance display

Switching the lane departure warning on and off

➤ To switch the system on or off, press the button ① ⇒ fig. 115 on the turn signal lever. The respective indicator light in the instrument cluster will turn off or on.

Display and warning

The availability and readiness to provide warnings will be indicated with the 1/1/1 indicator lights. You can also open the **Driver assistance** display in the on-board computer \Rightarrow page 14. The displays \Rightarrow fig. 116 match the functions of the indicator lights.

White lines: the lane departure warning is switched on but not ready to provide warnings.

4KE012721BH

- ② Green line: the lane departure warning is ready to provide warnings on the respective side.

The lane departure warning is ready to provide warnings if an object is detected on at least one side of the individual lane.

If the / indicator light turns on, the lane departure warning is not ready to provide warnings.

This may occur due to the following system limits or situations:

- The necessary lane marker lines have not been detected (for example, in a construction zone or because the lines are obstructed by snow, dirt, water, or lighting)
- The speed is below the activation speed
- The lane is too narrow or too wide
- The curve is too narrow
- The driver's hands are not on the steering wheel
- Visibility is obstructed by a rise or dip.

Steering intervention request

If the lane departure warning intervenes multiple times when no steering activity is detected, the steering intervention request will provide a warning using audio and visual signals, such as .

Take over the steering and keep your hands on the steering wheel so that you will be ready to steer at any time. The system may no longer be ready to provide warnings after a short time, and it will only become active again later.

If the driver does not take over steering, the lane departure warning will no longer be ready to provide warnings. If the vehicle is equipped with emergency assist and it is ready to function, it will be activated \Rightarrow page 171.

Behavior when a turn signal is active

Applies to: vehicles with side assist: The system will not warn you if you activate a turn signal be-

fore crossing the lane marker line. In this case, it assumes that you are changing lanes intentionally.

Applies to: vehicles with side assist: If the turn signal is activated, the lane departure warning is ready, and a lane change has been classified as critical by the lane departure warning due to vehicles traveling beside you or due to approaching vehicles, then a noticeable corrective steering movement will occur shortly before exiting the lane. This will attempt to keep your vehicle in the lane.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The system warns the driver that the vehicle is leaving the lane using corrective steering.
 The driver is always responsible for keeping the vehicle within the lane.
- Corrective steering may not occur at all in certain situations, such as during heavy
 braking: Always be ready to intervene.



Tips

- Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.
- The system does not provide any corrective steering or steering wheel vibrations if it detects that you are passing another vehicle.

Adjusting the lane departure warning

Applies to: vehicles with lane departure warning

You can adjust the lane departure warning to your preferences. The settings depend on the vehicle equipment.

 Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (②) > Lane departure warning

Possible settings:

- Vibration warning

Messages

Applies to: vehicles with lane departure warning

If or is displayed when there is a malfunction, the lane departure warning and lane guidance functions of the adaptive cruise functions may be unavailable or limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or the camera may be covered. Clean the area in front of the camera page 138 and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Audi pre sense

Function overview

Applies to: vehicles with Audi pre sense

www.caro

Within the limits of the system, the Audi pre sense functions can initiate measures in certain driving situations to protect the vehicle occupants and other road users. Depending on the vehicle equipment, various Audi pre sense systems may be installed:

- Audi pre sense basic can react during emergency and dangerous braking maneuvers and unstable driving situations (such as oversteering or understeering).
- Audi pre sense front can detect an impending frontal impact and react with warnings, braking interventions, and preemptive safety measures for the vehicle occupants.
- Audi pre sense rear monitors the rear traffic behind your vehicle and can react to an impending rear impact.
- Audi pre sense side can detect an impending side impact from cross-traffic and vehicles coming from the side, and can initiate preemptive safety measures.

- The swerve assist can help you to steer the vehicle around an obstacle during an evasive maneuver that is detected as critical.
- The turn assist can detect vehicles in the opposite lane as critical during a turning maneuver and react with braking maneuvers.

Audi pre sense preemptive safety measures

Applies to: vehicles with Audi pre sense

Depending on the vehicle speed and the vehicle equipment, the following functions may be initiated in certain situations:

- Visual and audio warnings
- Reversible tensioning of safety belts
- Closing the windows and panoramic glass roof
- Adjusting the seats
- Other preemptive safety measures by individual systems



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras page 135.



Tips

- Depending on the risk situation that is detected and the selected Audi drive select*
 mode, not all preemptive safety measures
 may be initiated under certain circumstances. Certain functions can be adjusted or
 skipped if necessary.
- Audi pre sense may be restricted or unavailable under certain circumstances, for example if:
 - There are passengers with unfastened safety belts
 - After turning on the ignition, as long as the indicator light is on.
 - When driving in reverse.
 - There is an airbag control module malfunction
 - System functions may not be available if the ESC is limited or switched off, or if there is a malfunction.

Audi pre sense basic

Applies to: vehicles with Audi pre sense basic

Audi pre sense basic is automatically active at speeds of approximately 20 mph (30 km/h) and higher. Audi pre sense basic can trigger preemptive safety measures during emergency braking and dangerous braking maneuvers as well as in unstable driving situations, such as oversteering or understeering ⇒ page 164, Audi pre sense preemptive safety measures.

The message **Audi pre sense** will warn you about the danger.



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Audi pre sense front

Applies to: vehicles with Audi pre sense front

Within the limits of the system, Audi pre sense front can warn about an impending front end collision and brake the vehicle strongly, if necessary. The system uses the camera behind the windshield and is available at speeds above approximately 6 mph (10 km/h).

Driving situations

The situations to which the system reacts depends on the vehicle speed.

Up to speeds of approximately 52 mph (85 km/h), the system may react to the following situations:

- Pedestrians and cyclists in your lane

Up to speeds of approximately 155 mph (250 km/h), the system may react to the following situations:

- A vehicle driving ahead clearly applies the brakes
- When approaching a vehicle ahead that is clearly traveling more slowly
- When approaching a stationary vehicle

Prewarning

To warn about detected dangers, Audi pre sense will appear in the instrument cluster and an audio signal will sound.

A brief application of the brakes

If a collision is imminent, there may be an acute warning using a brief application of the brakes. You will also be warned about the danger by an indicator in the instrument cluster display. You may only be able to avoid a collision by swerving or braking strongly.

Automatic braking force increase

If there is an impending collision and you are not applying the brakes enough, the braking force may be increased, depending on the situation.

Automatic braking

If you do not react to the acute warning, the system may apply the brakes with strong braking force within the limits of the system in order to reduce the speed of impact in the event of a collision.

If the brakes were applied until the vehicle stopped, Please take over! will appear in the instrument cluster and you must take over control of the vehicle.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Audi pre sense front cannot overcome natural physical laws. It is a system designed to assist and it cannot prevent a collision in every circumstance. The driver must always intervene. The driver is always responsible for braking at the correct time. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
- Audi pre sense front does not react to certain objects, such as animals, crossing or oncoming vehicles, bars, railings, or railcars.
- Audi pre sense front may be limited or unavailable when driving in curves.

- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- In trailer mode, the braking behavior of the vehicle and trailer may be different than usual during automatic braking. If there is a high trailer tongue weight, the reaction from Audi pre sense front may be limited or the system may be unavailable.



Tips

Certain pre sense front functions are switched off when the hill descent assist is actively controlling the vehicle.

Audi pre sense rear

Applies to: vehicles with Audi pre sense rear

Within the limits of the system, Audi pre sense rear uses data from radar sensors at the rear corners of the vehicle and calculates the probability of a rear-end collision with the vehicle behind you.

Audi pre sense preemptive safety measures can be initiated if the risk of a collision with the vehicle behind you is detected.



WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Audi pre sense rear does not react to pedestrians, animals, crossing objects, and objects not detected as vehicles.



Tips

- Audi pre sense rear functions switch off when trailer mode is detected. There is no guarantee the functions will switch off when using a retrofitted trailer hitch.
- Audi pre sense rear functions may also switch off if there is a malfunction in the side assist system.

Audi pre sense side

Applies to: vehicles with Audi pre sense side

Within the limits of the system, Audi pre sense can warn about impending collisions with cross-traffic and vehicles approaching from the side, and trigger Audi pre sense preemptive safety measures.

The system uses additional sensors in the front and rear areas and is active at speeds up to approximately 35 mph (60 km/h).



WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Audi pre sense side does not react to pedestrians, animals, and objects not detected as vehicles.



Tips

- The Audi pre sense side functions are limited when trailer mode is detected.
- The Audi pre sense side functions may also switch off if there is a malfunction in the intersection assistant*.

Swerve assist

Applies to: vehicles with swerve assist

The swerve assist can help you to steer the vehicle around an obstacle detected in a critical area. If you avoid an obstacle after the acute warning, then the swerve assist assists you by applying slight steering adjustment to correct your steering wheel angle as long as you are actively steering. The swerve assist is available at speeds between approximately 30 mph and 90 mph (50 km/h - 150 km/h).



WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Swerve assist does not react to pedestrians, animals, crossing objects, and objects not detected as vehicles.



Tips

- System functions may not be available if the ESC is limited or switched off, or if there is a malfunction.
- An indicator in the instrument cluster will inform you when there is an intervention.

Turn assist

Applies to: vehicles with turn assist

When turning left, turn assist can help to reduce the risk of a collision with an oncoming vehicle by using braking action to keep your vehicle in its lane. The function is only available when the turn signal is turned on and at speeds up to maximum of 6 mph (10 km/h).



WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The turn assist does not react to pedestrians, animals, crossing objects, and objects not detected as vehicles.



Tips

- System functions may not be available if the ESC is limited or switched off, or if there is a malfunction.
- An indicator in the instrument cluster will inform you when there is an intervention.

Adjusting Audi pre sense

Applies to: vehicles with Audi pre sense

You can switch the system on and off in the MMI ⇒ page 139.

You can adjust Audi pre sense and the associated systems according to your preferences. The settings depend on the vehicle equipment.

► Applies to MMI: Select on the home screen: VE-HICLE > Driver assistance > (⑤) > Audi pre sense.

Possible settings:

1) In certain countries.

Setting the prewarning

You can adjust the warning time for the prewarning 1) to your preference (**Early/Medium/Late**) or switch the prewarning off.

Set the warning time for the early warning to **Early** at first. If you feel that the prewarnings appear too early, then set the warning time to **Medium**. The **Late** warning time should only be set in special circumstances.

i

Tips

- If the system is switched off, it will switch on again automatically once the ignition is switched on again.
- Switch Audi pre sense off when you are not using public streets, when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can help to prevent an undesired intervention from the Audi pre sense system.

Messages

Applies to: vehicles with Audi pre sense

If is displayed when there is a malfunction, the Audi pre sense functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Bring the vehicle to a full stop, switch the ignition off, and clean the area in front of the sensors \Rightarrow page 138.

If the message still appears after switching the ignition on again, have an authorized repair facility correct the malfunction as soon as possible.

Side assist

Description

Applies to: vehicles with side assist

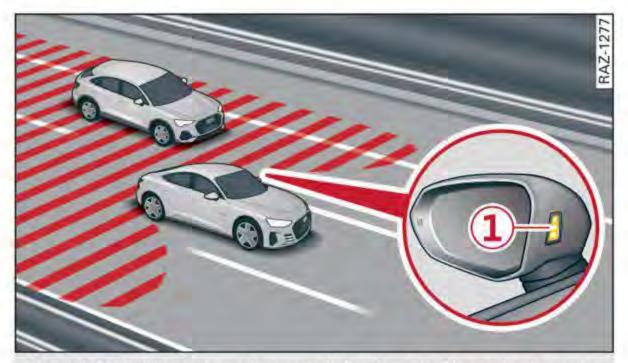


Fig. 117 Driving situations and displays in the exterior mirror

General information

Side assist monitors the blind spot and traffic behind your vehicle in the adjacent lanes and provides assistance when you are changing lanes and when turning 1). If the system detects an object approaching and classifies it as critical, the display in the exterior mirror 1 on that side of the vehicle will turn on,

Driving situations

The side assist warning is active at speeds that are approximately equal to walking speed, and can help in situations such as the following:

- Your vehicle is being passed. The faster another vehicle approaches from behind, the sooner the display in the exterior mirror will turn on.
- There are vehicles traveling in the same direction as you in a lane adjacent to yours. The display in the exterior mirror will turn on when the detected object is in the "blind spot", at the latest.
- You are slowly passing another vehicle. If the difference in speed between the two vehicles is less than 9 mph (15 km/h), the display in the exterior mirror will turn on.
- You are turning at low speeds 1).

Information stage

If you still have not activated a turn signal, the system will inform you about objects classified as

critical at speeds above approximately 6 mph (10 km/h).

This is even possible when your vehicle is stationary and the turn signal is turned on ¹⁾, so that the system can also assist you when turning.

The system informs you about objects classified as critical by turning on the display in the exterior mirror on that side of the vehicle (1).

The display remains dim in the information stage so that you are not distracted while looking forward.

Warning stage

Once you activate a turn signal, the system will inform you about objects classified as critical by turning on the display in the respective exterior mirror.

If other driver assistance systems (depending on vehicle equipment) detect that your vehicle is about to leave the lane, the display will blink even if the turn signal lever is not activated to warn you about objects that are classified as critical. You can also be warned with corrective steering page 162, Lane departure warning.

System limitations

The system uses the data from the radar sensors at the rear corners of the vehicle ⇒ page 138, fig. 96. They are designed to detect the left and right adjacent lanes when the road lanes are the normal width. In some situations, the system may react to vehicles in your own lane or lanes that are not directly adjacent to yours, or to objects on the side of the road. In this case, the display will turn on even though there is no vehicle in the critical area. These situations may include:

- Driving on the edge of your own lane
- Narrow lanes
- Curves
- High barriers on the side of the road

¹⁾ This function is not available in every vehicle.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The display may not appear at all or it may not appear on time when vehicles are approaching or being passed very quickly.

(i)

Tips

- If the window glass in the driver's door or front passenger's door has been tinted, the display in the exterior mirror may be incorrect.
- These systems are not available in trailer towing mode. There is no guarantee the systems will switch off when using a retrofitted trailer hitch. Do not use these functions when towing a trailer.
- The coverage areas of the sensors ⇒ fig. 117
 are diagrams and do not represent a trueto-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Adjusting side assist

Applies to: vehicles with side assist

You can switch the system on and off in the MMI ⇒ page 139.

You can adjust the side assist to your preferences. The settings depend on the vehicle equipment.

► Applies to MMI: select on the home screen: VE-HICLE > Driver assistance > (②) > Side assist

Possible settings:

Brightness – Change the brightness only when side assist is switched on, so that the selected setting can be checked in the exterior mirror displays. Adjust the brightness to a level where the display in the information stage will not disrupt your view ahead. Because the display brightness automatically adapts to the ambient light, it may have already been adjusted to the highest or lowest setting during the automatic adaptation.



Tips

If the system is activated, the displays will turn on briefly when the ignition is switched on.

Messages

Applies to: vehicles with side assist

If or or is displayed when there is a malfunction, the side assist and exit warning system functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the sensor area at the rear corners of the vehicle \Rightarrow page 138, fig. 96 and try to turn the systems on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

w.carob Exit warning

Description

Applies to: vehicles with exit warning system



Fig. 118 Approaching traffic detected

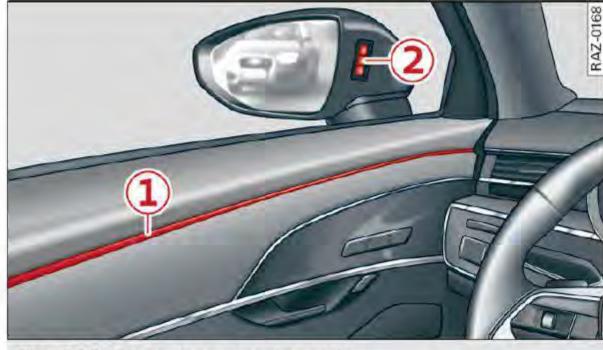


Fig. 119 Front door: warning strip

General information

Within system limits, the exit warning system can detect traffic approaching from behind such as vehicles, and provide assistance based on this information when you are exiting the vehicle ⇒ fig. 118. The system uses the data from the radar sensors at the rear corners of the vehicle.

Displays and warnings

If you pull a door handle while the vehicle is stationary and an object classified as critical is approaching, the warning strip 1 and the display on the exterior mirror 2 will light up on the corresponding side of the vehicle. The opening of the door will also be slowed briefly.

If the door is opened, the displays on that side will flash. If another road user that is classified as critical is approaching while a door is already open, the displays on that door will turn on.

The same messages apply for the exit warning system and side assist \Rightarrow page 169.

Switching the exit warning on and off

 You can switch the system on and off in the MMI ⇒ page 139.

/ WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Always pay attention to traffic and to the area around your vehicle. The exit warning system does not replace the attention of the vehicle occupants. The vehicle occupants are always responsible for opening the doors and exiting the vehicle.
- The exit warning system does not respond to people and cannot warn you about every type of approaching objects, such as cyclists.
 Always monitor the traffic as well as the vehicle's surroundings with direct eye contact.
- The display may not appear in time when vehicles are approaching very quickly.
- The exit warning system does not react to stationary objects or pedestrians.
- The exit warning system will not provide alerts if your vehicle is pulled too far into

the parking space so that it is hidden by adjacent vehicles.

(i)

Tips

- The exit warning system can be available for up to approximately three minutes after unlocking the vehicle and opening the door as well as after switching off the ignition. Then the displays flash briefly and the system switches off.
- The system is not available when towing a trailer. There is no guarantee the system will switch off when using a retrofitted trailer hitch. Do not use these functions when towing a trailer.
- The coverage areas of the sensors ⇒ fig. 118
 are diagrams and do not represent a trueto-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Intersection assistant

Description

Applies to: vehicles with intersection assistant

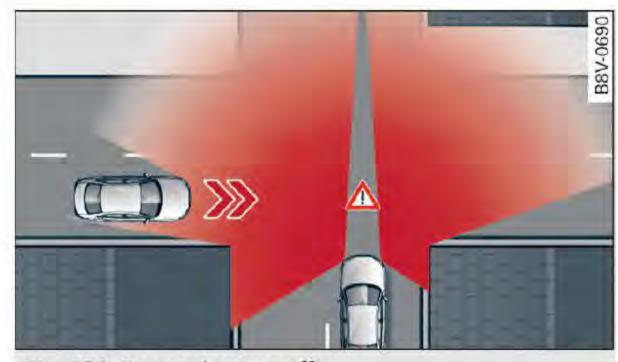


Fig. 120 Detected cross-traffic



Fig. 121 Instrument cluster: directional display from the intersection assistant

General information

The **intersection assistant** can warn the driver of approaching cross traffic in complex intersections \Rightarrow fig. 120.

The system monitors intersections and exit ramps using the sensors installed in the vehicle that detect the front and side areas around the vehicle. Moving objects that are approaching from behind, such as cars, are detected within the limits of the system ⇔ ⚠. The system can also warn the driver of a potential collision with detected approaching cross traffic in intersections and exit ramps with poor visibility.

Requirements for using the intersection assistant:

- The speed must not be higher than approximately 18 mph (30 km/h).
- The "D" selector lever position is selected.

Displays, warnings, and braking

- Display: the red arrow ① can indicate the direction from which the cross traffic is approaching. The indicator in the upper display only appears when the parking aid is activated. For vehicles with peripheral cameras only in the Front and Front corner camera views. The display only appears in the instrument cluster ⇒ fig. 121 when the Driver assistance display is open in the on-board computer ⇒ page 14.
- Warnings: the message Cross traffic! (can warn about critical cross-traffic when driving forward. There may also be an audible signal.
- Automatic brake activation: if you do not react to a warning, a brief braking by the system can warn you of a potential collision with an approaching object when driving forward at speeds up to approximately 6 mph (10 km/h).

Switching the intersection assistant on and off

 You can switch the system on and off in the MMI ⇒ page 139.

Messages

If or is displayed when there is a malfunction, the intersection assistant functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The intersection assistant will not provide alerts about people and cannot warn you about every type of approaching objects, such as cyclists. Always monitor the traffic as well as the vehicle's surroundings with direct eye contact.
- The system may not react at all or it may not react on time when vehicles are approaching very quickly.



Tips

- The coverage areas of the sensors ⇒ fig. 120
 are diagrams and do not represent a trueto-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Emergency assist

Description

Applies to: vehicles with emergency assist

General information

Within the limits of the system, emergency assist can detect inactivity from the driver. In these instances, the system will warn the driver, assume control of the vehicle if necessary, and bring the vehicle automatically to a stop in the lane.

Regardless of the speed, the emergency assist is automatically available when the adaptive cruise assist* is activated. When the adaptive cruise

assist* is deactivated, the system is only available at speeds above approximately 40 mph (65 km/h).

Emergency assist functions

Measures may be initiated in stages. The vehicle can be controlled with the limits of the system. The measures depend on the dangerous situation and the vehicle equipment:

- Visual and audio warnings
- Vehicle control
- Reduction of vehicle speed in stages
- Lowers the volume of the Infotainment system
- Tugs on the safety belt
- Activates the brakes
- The emergency flashers are activated
- Audi pre sense preemptive safety measures are triggered ⇒ page 164
- The brakes are applied until the vehicle is stationary

As soon as the vehicle comes to a full stop, the vehicle prepares for the vehicle passengers to be rescued. The parking brake is set, the "P" selector lever position is engaged, the doors are vintocked. To and the interior lighting is activated. The emergency call¹⁾ will be started if necessary once the vehicle has been stationary for several seconds.

Display

If / is displayed for example, the emergency assist is active.

Overriding the emergency assist

- Move the steering wheel. Or
- Press the brake pedal. Or
- Press the accelerator pedal distinctly.

When stationary, you can end the emergency assist by shifting out of the "P" position or releasing the parking brake ⇒ page 101.

Switching the emergency assist on and off

The system can be switched on and off in the MMI \Rightarrow page 139.

Messages

If a or is displayed when there is a malfunction, the emergency assist functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn the system on again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Λ

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The emergency assist is an assist system that should only be used in cases of emergency to take over control of the vehicle and bring it to a stop.



Tips

- Depending on the severity of the detected situation, not all safety measures will be initiated. Certain functions can be adjusted or skipped if necessary.
- If the emergency assist was triggered, it will only be available again after a brief period.

This function is not available in every market and on all vehicle equipment levels.

Parking and maneuvering

Introduction

Depending on the vehicle equipment, various parking aids will help you when parking and maneuvering.

Parking aid

The **parking aid plus** assists you while parking using audio and visual signals to warn you about objects detected in front of, behind, and next to the vehicle ⇒ page 173.

The **rearview camera** shows the area behind the vehicle in the MMI display. The lines in the rearview camera image help you to park and maneuver ⇒ page 175.

The **peripheral cameras** are an addition to the rearview camera and help you to see various areas around the vehicle while parking and maneuvering ⇒ page 175.

The **rear cross-traffic assist** can warn you of approaching cross traffic when driving in reverse or exiting a parking space ⇒ page 180.

Possible settings

You can adjust parking aid functions according to your preferences. The possible settings depend on the vehicle equipment.

- Automatic activation ⇒ page 173
- Front and rear volume ⇒ page 174
- Entertainment fader ⇒ page 174.
- Clean rearview camera ⇒ page 176
- Trailer view ⇒ page 177
- View ⇒ page 178
- Rear cross-traffic assist ⇒ page 180

\triangle

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Tips

Audi recommends practicing parking in a traffic-free location or parking lot to become familiar with the systems. Practice parking in good light and weather conditions.

Parking aid plus

Activating and deactivating

Applies to: vehicles with parking aid plus

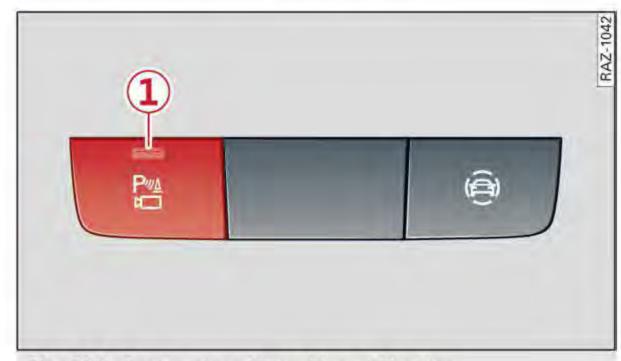


Fig. 122 Center console: parking aid button

General information

The parking aid assists when parking and maneuvering by providing warnings about obstacles. If the ultrasonic sensors on the vehicle ⇒ page 136, fig. 93 detect an obstacle, the system will provide audio and visual warnings.

Activating and deactivating

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

▶ Press the P[™] or [™] button ① in the center console.

Automatic activation

- ► The system activates automatically when reverse gear is engaged while the drive system is active.
- ▶ If Automatic activation is switched on in the MMI and if the vehicle approaches an obstacle when driving forward at speeds below approximately 6 mph (10 km/h), the parking aid will activate automatically. Audible signals will sound once the obstacle is within the sensor detection area.
- ▶ Applies to: MMI: To switch Automatic activation on or off, select on the home screen: VEHI-CLE > Parking aid > Automatic activation.

Automatic deactivation

The distance indicator for the parking aid plus will deactivate automatically when driving forward faster than approximately 6 mph (10 km/h).

A

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.



Note

Keep enough distance from the curb to avoid damage to the rims.



Tips

- If the parking aid is deactivated, it can only be reactivated automatically when one of the following conditions is met:
 - The vehicle speed exceeds 6 mph
 (10 km/h)
 - The ignition is switched off and back on again
 - The parking brake is set and then released
 - The "P" selector lever position is engaged and released again

Warnings

Applies to: vehicles with parking aid plus

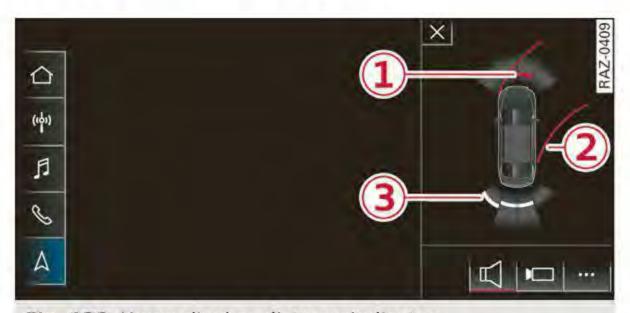


Fig. 123 Upper display: distance indicator

If the sensors detect an obstacle, audible and visual signals will warn you.

Visual warnings

The visual warnings in the upper display help you to detect the critical vehicle area and to estimate the distance to an obstacle.

Red segments ① show detected obstacles that are in your vehicle's path. The red lines ② mark the expected direction of travel based on the steering angle. A white segment ③ indicates a detected obstacle that is outside of the vehicle's path. The closer your vehicle comes to the obstacle, the closer the segments will move to the vehicle. The collision area has been reached when the next to last segment is displayed. Obstacles in the collision area, including those outside of the vehicle's path, are shown in red. Do not continue driving farther.

Audio signals

The closer your vehicle gets to a detected obstacle, the shorter the time between the audible signals. A continuous tone sounds when an obstacle is less than approximately 1 foot (0.30 m) away from the front or rear of the vehicle. A continuous tone sounds when an obstacle is less than approximately 0.7 feet (0.20 m) away from the sides of the vehicle. Do not continue driving forward or in reverse ⇒ ①.

To deactivate audio signals when parking or exiting a parking space, press in the upper display. The audio signals will be automatically activated again the next time the parking aid is activated.

Adjusting the volume

You can adjust the volume to your preferences. The settings depend on the vehicle equipment.

- ▶ Applies to MMI: Select on the home screen: VE-HICLE > Parking aid. Or
- ▶ Press in the upper display when the parking system is active.

Possible settings:

Front volume - Volume for the front and side area.

Rear volume - Volume for the rear area.

Entertainment fader – The volume of the audio/video source is lowered when the parking aid is activated.

Error messages

If Mappears, the sensor in the respective area or the speaker is faulty. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

If ♠ is displayed in the MMI, the ultrasonic sensor indicated is icy or dirty. Clean the area in front of the sensors ⇒ page 138.

If or is displayed when there is a malfunction, the parking aid functions may be unavailable or may be limited.

A message that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the area in front of the sensors \Rightarrow page 138 and try to turn on the systems again later.

If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

MARNING

www.caro

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Sensors and cameras have spots in which the surrounding area cannot be detected.
 Objects, animals, and people may only be detected with limitations may not be detected at all. Always monitor the traffic and the vehicle's surroundings directly and do not become distracted.



Note

Keep enough distance from the curb to avoid damage to the rims.



Tips

- The segments in the side area ⇒ page 136, fig. 93 are detected and analyzed when passing. There may have been changes to the surrounding area after switching the ignition off and on again, after opening the doors, or if the vehicle is left stationary for a period of time. In this case, the area will ap-

- pear black until the area has been detected and evaluated.
- If the distance to an obstacle remains constant, the volume of the distance warning gradually lowers after a few seconds until it is muted (this does not apply to the continuous tone). If the obstacle comes closer than it was before the sound was muted, the tone will sound again. If the obstacle becomes farther away than it was before the sound was muted, no tone will sound. Pay attention to the vehicle's surroundings when you start to drive.
- There is no distance warning for the rear and the sides when trailer towing mode is detected. The front sensors remain activated. There is no guarantee the functions will be deactivated when using a retrofitted trailer hitch.

Rearview camera and peripheral cameras

Introduction

Applies to: Vehicles with rearview camera/peripheral cameras

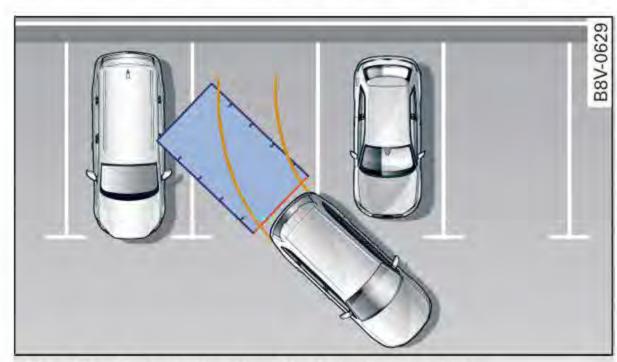


Fig. 124 Orientation line display when parking

Depending on the vehicle equipment, a rearview camera or multiple peripheral cameras may be available.

The **rearview camera** helps you to park or maneuver using the orientation lines.

The **peripheral cameras** expand the vehicle overview to include various views around the vehicle that can be selected.

Λ

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Activating and deactivating

Applies to: vehicles with rearview camera/peripheral cameras

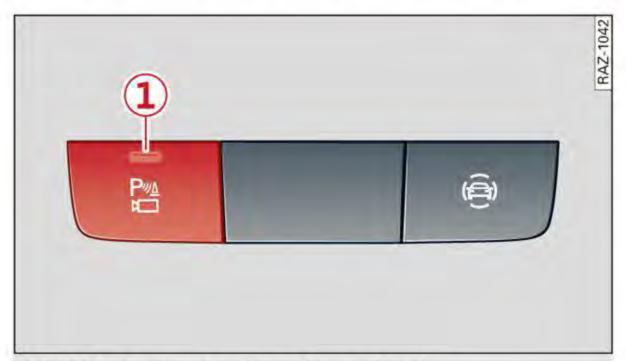


Fig. 125 Center console: parking aid button

Activating and deactivating

- ▶ Press the 🛗 button 🕦 in the center console. Or
- Press Image in the upper display if the visual distance indicator is shown ⇒ page 174, fig. 123.

The system can be activated at low speeds, such when maneuvering.

Automatic activation

The system activates automatically when reverse gear is engaged while the drive system is active.

Automatic deactivation

The system will deactivate automatically once the vehicle exceeds a certain speed while driving forward.



WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Clean rearview camera

Applies to: vehicles with rearview camera/peripheral cameras

You can manually start the cleaning of the rearview camera. The settings depend on the vehicle equipment.

- ► Select : > Clean rearview camera in the upper display when the parking aid is active. Or
- ► Move the window wiper lever \heartsuit into the position for cleaning the rear window \heartsuit \Rightarrow page 56.

Λ

WARNING

Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.

Warnings

Applies to: vehicles with rearview camera/peripheral cameras


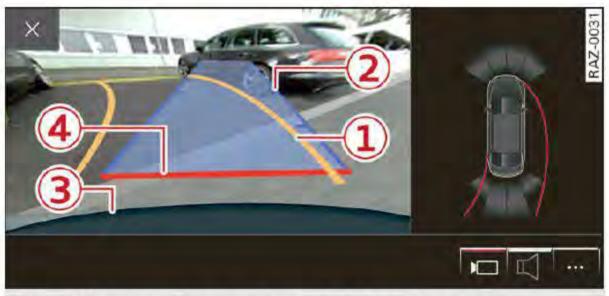


Fig. 126 Upper display: aiming at a parking space

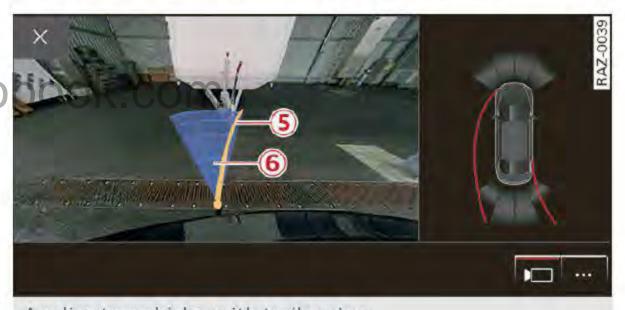

Applies to: vehicles with trailer view Fig. 127 Upper display: trailer view

When parking with the rearview camera or peripheral camera, the parking system plus audio and visual warnings* will also assist you ⇒ page 174.

Visual orientation lines

- The orange orientation lines show the vehicle's direction of travel ⇒ ①. Turn the steering wheel until the orange orientation lines align with the parking space.
- You can use the horizontal blue markings to help you estimate the distance to an obstacle. Each marking represents approximately 3 feet (1 meter). The blue surface is a static display and represents an extension of the vehicle perimeter to the rear.

- You can recognize the rear bumper in the lower display.
- You should stop driving in reverse when the red orientation line touches the edge of an object, at the latest.

Trailer view

Applies to: vehicles with trailer view

Requirement: the rearview camera or peripheral cameras are activated.

- Applies to: vehicles with peripheral cameras:
 Switch to the Rear view ⇒ page 178, fig. 128.
- Select : > Trailer view in the upper display when the parking aid is active.

The trailer view \Rightarrow *fig. 127* assists you in positioning the vehicle in front of a trailer. The orange orientation line $\textcircled{5} \Rightarrow$ *fig. 127* indicates the expected path toward the trailer hitch. Use the blue markings 6 to help you estimate the distance to the trailer hitch. Each marking represents approximately 1 foot (0.30 meters). The width of the blue surface represents the maximum steering wheel angle.

Symbols

Applies to: vehicles with peripheral cameras

If $\bigcirc /\bigcirc /\bigcirc$ is displayed and the display area represented by that symbol is not available, then the camera on the that side is not available. The power exterior mirrors may have been folded in or a door or the luggage compartment lid may have been opened.

If $\normalfont{\normalfont{\normalfont{\normalfont Majorith}{\normalfont{\normalfont Majorith}{\normalfont{$

If ♠ is displayed, the respective ultrasonic sensor is icy or dirty. Clean the area in front of the sensors ⇒ page 138.

If one of the symbols continues to be displayed, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

A

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- Sensors and cameras have spots in which the surrounding area cannot be detected.
 Objects, animals, and people may only be detected with limitations may not be detected ed at all. Always monitor the traffic and the vehicle's surroundings directly and do not become distracted.

(!)

Note

- The orange orientation lines ① show the direction the rear of the vehicle will be traveling, based on the steering wheel angle. The front of the vehicle swings out more than the rear of the vehicle. Maintain plenty of distance so that an exterior mirror or a corner of the vehicle does not collide with any obstacles.
- Keep enough distance from the curb to avoid damage to the rims.
- www.caroboo only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.



Tips

- Applies to: vehicles with air suspension: The accuracy of the orientation lines and blue surfaces on the camera display decreases when the vehicle is raised or lowered with the air suspension.
- There is no distance warning for the rear and the sides when trailer towing mode is detected. The front sensors remain activated. The visual display switches to trailer mode. There is no guarantee the functions will be deactivated when using a retrofitted trailer hitch.

Operating the peripheral cameras

Applies to: vehicles with peripheral cameras

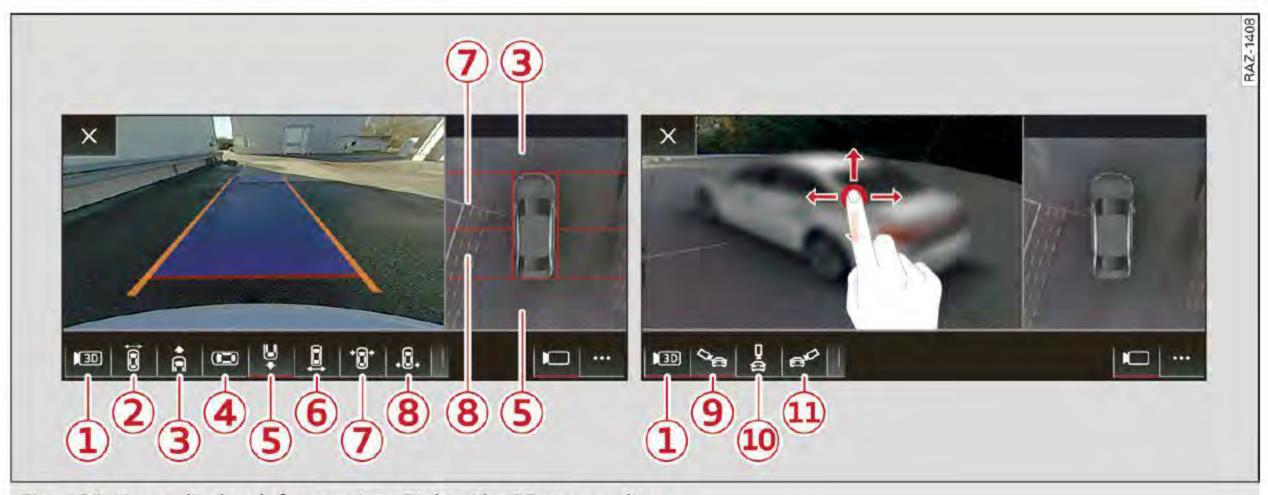


Fig. 128 Upper display: left: rear view. Right side: 3D surroundings.

On vehicles with peripheral cameras, you can select among different views.

The camera views can be controlled with the touch display. In certain views, you can zoom in or out on the displayed area, and move, tilt, or rotate the **3D surroundings**.

Selecting the views

- ► To display the entire selection bar, tap the current view ② or swipe at the edge of the selection bar from left to right.
- ► To select a view, press 2 8 or tap in an area to show the vehicle in the side view 1).
- ➤ To select a **3D surroundings** view, press the ▶₃ symbol 1. Then select the desired **3D surroundings** view 9 11.

Zooming in and out on the views

Applies to: 3D surroundings view

► To zoom in or out on an area, place two fingers on that area and push them apart or pull them together ⇒ fig. 128, left side.

Moving the view

Applies to: 3D surroundings view

- ➤ To move the view, press and pull it in any direction using one finger.
- ► To re-center the **3D surroundings**, tap the camera image twice.

WWW.Caro Ditting or Cotating the views
Applies to: 3D surroundings view

- ► To tilt or rotate the **3D surroundings**, use your finger to drag it in any direction ⇒ *fig. 128*, on the right side.
- ► To re-center the **3D surroundings** behind the vehicle, tap the camera image twice.

Selecting a view in the side area

The vehicle surroundings are shown in the side area of the display. You can switch between a visual display (**Graphic**) and the vehicle surroundings (**Camera**).

▶ Select : > View in the upper display when the parking system is active.

Requirement: The vehicle surroundings (Camera) must be selected in the View in the side area.

A

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras
 ⇒ page 135.
- The Surroundings and 3D surroundings are created from the individual camera images.
 The vehicle image is shown by the system.
 Objects and obstacles above the camera are not displayed.

1

Note

Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.

i

Tips

 Depending on the selected gear, it will automatically switch between the Front and

- Rear views. If you switch the view manually, the automatic front/rear camera change will be temporarily deactivated.
- When first activated while a forward gear is engaged, the Front corner is displayed.

Rear cross-traffic assist

Description

Applies to: vehicles with rear cross-traffic assist

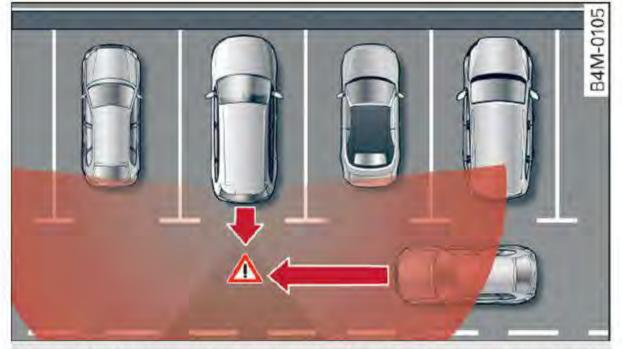


Fig. 129 Sensor detection range for rear cross-traffic assist



Fig. 130 Upper display: rear cross-traffic assist display

General information

The rear cross-traffic assist monitors the area behind and next to the vehicle using radar sensors at the rear corners of the vehicle. The system can detect moving objects that are approaching, such as vehicles ⇒ fig. 129. A display in the MMI (1) and various warnings provide assistance when exiting a parking space.

Requirements for using the rear cross-traffic assist:

- The parking system is switched on ⇒ page 173.
- The speed while driving backwards is not higher than approximately 6 mph (10 km/h).

Displays, warnings, and braking

- Display: the display (1) appears only when the parking aid is active. In vehicles with peripheral cameras, the display only appears in the Rear and Rear corner camera views. Arrows show the direction from which the cross traffic is approaching.

- Audible warnings: an audio signal may sound as an additional warning when driving in reverse.
- Automatic brake activation: if you do not react to a warning, a brief braking by the system can warn you of a potential collision with an approaching object.

The audible warning signal and the automatic brake activation occur only when driving in reverse.

Switching the rear cross-traffic assist on and off

- Applies to MMI: Select on the home screen: VE-HICLE > Parking aid > Rear cross-traffic assist. Or
- Select : > Rear cross-traffic assist in the upper display when the parking aid is active.

Messages

If \mathbb{Q} , or \mathbb{Z} is displayed when there is a malfunction, the rear cross traffic assist functions may be unavailable or may be limited.

WWW.Caro Amessage that indicates the cause and possible solution may appear with some displays. The weather conditions may be too poor or a sensor may be covered. Clean the sensor area in the vehicle rear and try to turn the system on again later.

> If the malfunction remains, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

- Observe the safety precautions and note the limits of the assist systems, sensors, and cameras ⇒ page 135.
- The rear cross-traffic assist will not provide alerts about people and cannot warn you about every type of approaching objects, such as cyclists. Always monitor the traffic as well as the vehicle's surroundings with direct eye contact.
- The system may not react at all or it may not react on time when objects are approaching very quickly.

– The rear cross-traffic assist will not provide alerts if your vehicle is parallel parked or if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.

(i)

Tips

- Once an automatic brake activation occurs, the system cannot initiate another activation for several seconds.
- System functions may not be available if the ESC is limited or switched off, or if there is a malfunction.
- If there is an audio warning signal from the rear cross-traffic assist, then the parking aid may not be able to provide audio warnings about detected obstacles under certain circumstances.
- The system is not available when the vehicle detects that you are towing a trailer. There is no guarantee the functions will switch off when using a retrofitted trailer hitch. Do not use these functions when towing a trailer.
- The coverage areas of the sensors rigo 129 000 k. COM are diagrams and do not represent a true-to-scale image of the sensor ranges.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Telephone

Introduction

Applies to: vehicles with telephone

You can operate various telephone functions easily through the MMI in your vehicle.

Depending on the country and the vehicle equipment, the following options may be available:

- Connecting a cell phone with Bluetooth
- Using two telephones
- Using the Audi phone box

Λ

WARNING

- Medical experts warn that mobile devices can interfere with the function of pacemakers. Always maintain a minimum distance of about 7.9 inches (20 cm) between the mobile device antennas and the pacemaker.
 - Do not carry the mobile device in a pocket directly over the pacemaker when the phone is switched on.
 - Switch the mobile device off immediately if you suspect it may be interfering with the pacemaker.
- Do not use the voice recognition system*
 ⇒ page 26 in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.
- Switch your mobile device off in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally switch your engine/motor off.
- The demands of traffic require your full attention. Always read the chapter ⇒ page 18,
 Traffic safety information.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section ⇒ page 193.



Tips

- The Bluetooth connection range is limited to inside the vehicle.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at www.audi.com/bluetooth.

Setup

Connecting a mobile phone via Bluetooth

Applies to: vehicles with telephone

Requirement: the vehicle must be stationary and the ignition must be switched on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device. The MMI must only be connected to one mobile device.

- ► Enable the Bluetooth function and visibility on the MMI ⇒ page 234 and the mobile phone.
- ▶ Applies to: MMI: Select on the home screen: PHONE.
- ► Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- Press on the desired mobile device in the list of displayed Bluetooth devices.
- ► To update the list, press 🗘.

A PIN for a secure Bluetooth connection will be generated.

- ► Confirm the PIN on your mobile device.
- ► Follow the system instructions.
- ► Pay attention to any other system prompts on the MMI and on your cell phone.

After connecting successfully

The cell phone contacts are automatically loaded in the MMI. This process can take several minutes, depending on the number of contacts.

Depending on your cell phone and the connection type, you can use the following functions:

Using the hands-free system

Requirement: your cell phone must be connected to the MMI via a Bluetooth Hands Free Profile (Bluetooth HFP).

You can use the hands-free system. You can make calls using the antenna on your mobile device.

Sending and receiving messages

See ⇒ page 191.



Tips

- Pay attention to any system prompts displayed on your mobile device or the MMI, for example if the system should connect automatically in the future. Depending on the mobile device, you may need to download contacts and confirm access to your messages separately.
- You can also search for the MMI on your mobile device using the Bluetooth device search.
- You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the MMI when the Bluetooth function is switched on, when they are within range, and when the ignition is switched on. The last connected mobile device is given first priority.
- You can manage additional settings for connected mobile devices in the Connected devices menu ⇒ page 235.
- When leaving the vehicle, the Bluetooth connection to the mobile device will automatically disconnect. Depending on your mobile device, phone calls in progress may be automatically redirected from the MMI to your mobile device so that you can continue the call on your phone.

Using two telephones

Applies to: vehicles with telephone, and Audi phone box

You can connect two mobile phones to the MMI at the same time using the Bluetooth HFP, for example a business phone and a private phone. You can be reached in your vehicle through both mobile phones.

Applies to: mobile devices with Bluetooth Message Access Profile (MAP): You can send and receive messages with both mobile devices

⇒ page 191.

Connecting another mobile device

Requirement: a mobile device must be connected to the MMI. The vehicle must be stationary and the ignition must be switched on. The Bluetooth settings must be open on your mobile device during the connection setup. The mobile device to be connected must not be actively connected to any other Bluetooth device.

- ► Enable the Bluetooth function and visibility on the MMI ⇒ page 234 and the mobile phone.
- ► Applies to: MMI: Select on the home screen: **PHONE** > □, or
- ▶ Applies to: MMI: Select on the home screen: SETTINGS > Connected devices > Telephone 1 or Telephone 2 > New connection.
- ► Follow the system instructions. The available Bluetooth devices will be displayed after several seconds.
- Press on the desired mobile device in the list of displayed Bluetooth devices.
- ► To update the list, press 🗘.

A PIN for a secure Bluetooth connection will be generated.

- Confirm the PIN on your mobile device.
- ► Follow the system instructions.
- Pay attention to any other system prompts on the MMI and on your cell phone.

After connecting successfully

See ⇒ page 182, After connecting successfully.

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

► Applies to: MMI: Select on the home screen: **PHONE** > ♣.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

⇒ page 193.

Disconnecting a mobile device

Applies to: vehicles with telephone

► To disconnect a Bluetooth device from the MMI, use the Connected devices menu ⇒ page 235.

Using the Audi phone box

General information

Applies to: vehicles with Audi phone box

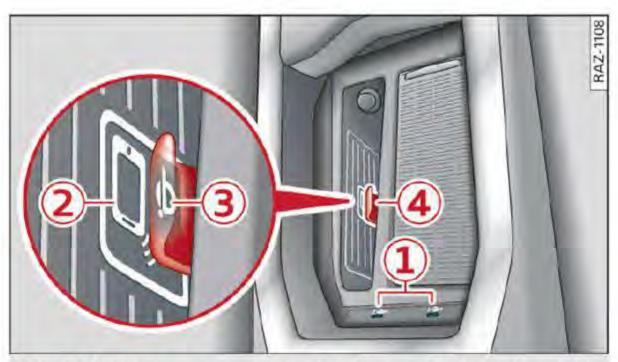


Fig. 131 Storage compartment in the center console: Audi phone box with holder and connections

Depending on vehicle equipment, you may be able to use the following functions with the Audi CO phone box:

- Make phone calls using the vehicle's exterior antenna
- Charge a mobile device using the USB input
- Charge a mobile device wirelessly
- Reminder signal

Limitations

In some situations, the functions of the Audi phone box may be limited or temporarily unavailable. For example, this may happen if

- There is one more than mobile device in the Audi phone box
- The mobile device is located in a bag or a protective case
- There are objects between the Audi phone box and the mobile device
- The mobile device is not positioned in the center of the Audi phone box

Λ

WARNING

Loose objects can be thrown around the vehicle interior during sudden driving or brak-

- ing maneuvers, which increases the risk of an accident. Store objects securely while driving.
- Do not allow the visual or audio signals from a mobile device to distract you from traffic, because this increases the risk of an accident. Operate the mobile device only via the MMI.



Note

Applicable to U.S.A.

Operation of the Audi phone box is subject to the following requirements of the Federal Communications Commission:

- This is a CONSUMER device.
- BEFORE USE, you MUST REGISTER THIS DE-VICE with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your service provider.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST be installed at least 20 cm (8 inches) from any person.
- You MUST cease operating this device immediately if requested by the FCC or a licensed wireless service provider.
- WARNING: E911 location information may not be provided or may be inaccurate for calls served by using this device.



Applicable to Canada

Note

In Canada, operation of a Zone Enhancer, such as an Audi phone box, is subject to the following requirements of the Innovation, Science and Economic Development Canada (ISED):

- This is a CONSUMER device.
- BEFORE USE, you MUST meet all requirements set out in CPC-2-1-05. At the time of printing this user manual, the CPC-2-1-05 client procedures circular of ISED Canada was available at the following web page:

- http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08942.html.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST NOT be installed within 20 cm of any person.
- You MUST cease operating this device immediately if requested by ISED or a licensed wireless service provider.
- WARNING: E911 location information may not be provided or may be inaccurate for calls served by using this device.



Tips

The system complies with United States FCC regulations and ISED regulations ⇒ page 300.

Making phone calls using the exterior antenna

Applies to: vehicles with Audi phone box

With the Audi phone box, you can make calls using the exterior antenna on the vehicle. Using the exterior antenna helps when there is a low signal and also provides better reception/quality. Caro

Requirement: the ignition must be switched on.

- ► Open the holder ④ ⇒ page 184, fig. 131 in the Audi phone box.
- ► To make phone calls through the vehicle's exterior antenna using your mobile device, lay your device with the rear side against the phone symbol ② in the center of the Audi phone box and holder ④.

Charging the battery using the USB input

Applies to: vehicles with Audi phone box

You can charge your mobile device using a special USB adapter with the Audi phone box ⇒ page 222.

Requirement: the ignition must be switched on.

► To charge your mobile device via USB, connect it to the USB input ① ⇒ page 184, fig. 131.



Tips

- You can purchase a USB adapter from an authorized Audi dealer or authorized Audi
 Service Facility, or at specialty stores.
- Audi recommends using Audi Genuine Accessories. Audi has verified their reliability, safety, and suitability.

Charging a mobile device wirelessly

Applies to: vehicles with Audi phone box

You can charge your mobile device wirelessly using the Audi phone box.

Requirement: the ignition must be switched on. Your mobile device must meet the Qi standard.

- Make sure that the wireless charging function is switched on:
- Applies to: MMI: Select on the home screen: SETTINGS > General > Reminder signal and mobile device charging.
- Switch the Mobile device wireless charging function on.
- Popen the holder (4) ⇒ page 184, fig. 131 in the Audi phone box.
- ► To charge your mobile device wirelessly, lay your device with the rear side against the **Φ** symbol **3** between the Audi phone box and holder **4**.

\triangle

WARNING

- The mobile device may become hot during wireless charging. Pay attention to the temperature of your mobile device and be careful when removing it from the Audi phone box.
- An alternating magnetic field is used for wireless charging. Maintain a minimum distance of approximately 2.4 inches (6 cm) to the Audi phone box charging plate. The thresholds for prolonged exposure at this distance comply with ICNIRP1998. Therefore, interactions such as irritation of sensory organs, malfunctions of active implants (such as pacemakers, infusion pumps, or neurostimulators) or effects on passive implants (such as prosthetic limbs) is highly unlikely. If you have an implant, consult a

medical specialist if you have any questions. You can also switch the function for wireless charging in the Audi phone box on and off. You can continue to charge your mobile device using a cable connection.



Tips

- The maximum charging output is 5 W.
- The charging time and temperature will vary depending on the mobile device being used.

Mobile device reminder signal

Applies to: vehicles with Audi phone box

When the device reminder signal is switched on, you will be notified that your mobile device is still in the Audi phone box when you leave the vehicle.

Requirement: your mobile device must be located in the Audi phone box (if Qi-capable) or connected to the Audi music interface with a USB adapter, and the Audi smartphone interface must be active or your iPhone must be connected to the MMI via Bluetooth and charging using a USB adapter connected to the Audi music interface.

Applies to: MMI: Select on the home screen: SETTINGS > General > Reminder signal and mobile device charging.

The following settings may be available, depending on vehicle equipment:

- Signal tone
- Off

Spoken cue

this setting is switched on at the factory.

Mobile device notes: reminder, charge level

When this function is switched on, the charge status of your mobile device is displayed. You will also be reminded not to forget your mobile device when leaving the vehicle.

Using the telephone

Accessing the telephone functions

Applies to: vehicles with telephone



Fig. 132 Upper display: selection menu

Requirement: a mobile device must be connected to the MMI.

Applies to: MMI: Select on the home screen: PHONE.

Possible telephone functions:

 1 Search

 2 Call list
 186

 3 Favorites
 187

 4 Contacts
 187

 5 Voicemail
 188

 6 Dial phone number
 188

 7 Switch telephones
 190

Managing call lists

Applies to: vehicles with telephone



Fig. 133 Upper display: call list

Opening call lists using the MMI

► Applies to: MMI: Select on the home screen: PHONE > Call list.

Opening call lists using the multifunction steering wheel

➤ Select in the instrument cluster: Telephone tab
> □ button > Call list.

Possible call list symbols:

- (1) Missed calls
- 2 Dialed numbers
- 3 Accepted calls
- 4 Editing a telephone number
- 6 Number of interactions with a contact

If more than one interaction with a contact or number has taken place, the last one is displayed in the form of an arrow (1), (2), or (3).

Call list options

Press and hold a contact or a phone number in the list until the **Options** menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- Save as a shortcut ⇒ page 22, Shortcuts.
- Store as favorite ⇒ page 187.
- Send text message ⇒ page 191.
- Send e-mail ⇒ page 191.

WWW.Caroboehone Contacts.

Edit number

Edit a phone number before dialing it.

Show history

Requirement: you must have had more than one interaction with a contact.

All interactions with a contact or a number are displayed.

Managing favorites

Applies to: vehicles with telephone

You can store contacts for all connected mobile devices as shortcuts in the favorites list.

Selecting favorites using the MMI

▶ Applies to: MMI: Select on the home screen: PHONE > Favorites.

Opening favorites using the multifunction steering wheel

➤ Select in the instrument cluster: Telephone tab
> □ button > Favorites.

Storing favorites

- ▶ Press ☆ ⇒ page 188 in the business card, or
- Press Store as favorite in the options ⇒ page 186.

Deleting favorites

- ▶ Press ★ ⇒ page 188 in the business card, or
- ► Select: Favorites > /= > one or multiple favorites or Select all > Delete > (Done).

(i)

Tips

The favorites can only be edited via the MMI.

Managing the directory

Applies to: vehicles with telephone

You can manage up to four directories in the MMI.

Requirement: a mobile device must be connected to the MMI.

Opening the directory

► Applies to: MMI: Select on the home screen:

The contacts will be displayed. You can change the sort order ⇒ page 190, **Sort order**.

Deleting imported contacts

Requirement: you must have imported at least one contact ⇒ page 190.

Select: Contacts > √_≡ > one or more text messages > Delete > (Done). The imported contacts are deleted.

Directory options

Press and hold a contact in the directory until the Options menu appears.

Depending on the vehicle equipment and your mobile phone, the following options may be available:

- Store as favorite ⇒ page 187.
- Send contact: you can select Text message or
 E-mail ⇒ page 191.
- Send text message ⇒ page 191.
- Send e-mail ⇒ page 191.

– Save as a shortcut ⇒ page 22, Shortcuts.



Tips

- Pay attention to any synchronization prompts on your mobile device when downloading contacts.
- The contacts from the mobile device may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
- Only the contacts from the active connected mobile device are displayed.
- The contacts in the local MMI memory are always visible and can be accessed by other users.
- After switching off the ignition and exiting the vehicle, the mobile device directory will be updated when the MMI is started again if the mobile device is within range and the Bluetooth function is switched on in the mobile device and the MMI.
- Only the contacts in the local MMI memory can be deleted.

Opening business cards

Applies to: vehicles with telephone

The business card shows you details about a contact.

- ► To open a business card, press on a contact in the directory, or
- ▶ Press ① in the call list ⑤ ⇒ page 186, fig. 133.

Possible options in the business card:

- ► Call: press on a phone number.
- ► Storing a favorite: press ☆.
- ▶ Deleting a favorite: press ★.
- ► Sending a text message: press ...
- ► Starting navigation: press on an address.
- ► Sending an e-mail: press on an e-mail address.
- ► Send contact: you can select Text message or E-mail ⇒ page 191.
- ► Save as a shortcut ⇒ page 22, Shortcuts.

Listening to voicemail

Applies to: vehicles with telephone

Calling voicemail

Applies to: MMI: Select on the home screen: PHONE > Voicemail.

Entering the voicemail number

Requirement: there must be no voicemail number stored.

- ► Enter the desired number.
- ► Press OK.

Dialing the voicemail number

Requirement: a voicemail number must be stored.

▶ Press Voicemail. The call begins immediately.



Tips

This service must be set up and activated by the mobile phone service provider.

Dialing a telephone number

Applies to: vehicles with telephone

Depending on the vehicle equipment, you may have the following options for dialing a phone number:

- Using text input in the MMI ⇒ page 23.
- Using voice operation ⇒ page 26.

Call options

Applies to: vehicles with telephone

To accept or end a call, press the ℰ button on the multifunction steering wheel. Operating ⇒ page 12 and ⇒ page 29.

Depending on your mobile device, the following options may be available in the MMI when there is an incoming call:

- Answer
- Decline
- Message

If you exit the vehicle during a phone call, the Bluetooth connection will be disconnected. Depending on your mobile device, phone calls in

progress may be automatically transferred from the MMI to your mobile device.



Tips

The radio or media playback is muted during a phone call.

During a phone call

Applies to: vehicles with telephone

Depending on your mobile device and the type of connection, the following options may be available during a call:

- End call
- Mute

Sending a tone sequence

Press **Numbers**. You can enter tone sequences (DTMF) and send them to the other party on the call.

Hold

Puts the current call on hold. To resume the call, press **Resume**.

Answering an incoming call

One of these options will be available, depending on the mobile phone service provider:

- Answer: the current phone call will be put on hold. The incoming call will be answered.
- Replace: the active call will be replaced with the incoming call.

Declining an incoming call

If you select **Decline**, the incoming call will be declined.

Conference

Requirement: two phone calls must be in progress.

Depending on your mobile phone service provider, you can add a call on hold and up to five active callers to a conference call.

Swap call

Requirement: two phone calls must be in progress.

You can alternate between two phone calls.

Additional call options

Press More.

Depending on the mobile device being used and the type of connection, the following options may be available:

Transfer call to mobile device

Transfer the current call to your mobile device or Bluetooth headset*.

Switch to hands-free

Transfer the current call from your mobile device to the MMI.

Add call

You can start a new call. The current call will be put on hold.

Remove conference member

You can remove conference call members individually when a conference call is active.

WWW.Carob Microph Cinput

You can adjust the input level of the microphone using the slider.



Tips

The call waiting function must be activated in your mobile device to be alerted about an incoming call during an active call.

Making an emergency call

Applies to: vehicles with telephone

Requirement: a mobile device must be connected to the MMI.

► Applies to: MMI: Select on the home screen: PHONE > Dial phone number > the local emergency call number (for example, 911) > Dial.



WARNING

 Because your phone works with radio signals, a connection cannot be guaranteed under all circumstances. Do not rely on only your phone when it comes to essential communication (such as during a medical emergency).

 Always follow the instructions given by the emergency personnel during an emergency call and only end the call when they instruct you to do so.

Settings

Telephone settings

Applies to: vehicles with telephone

▶ Applies to: MMI: Select on the home screen: PHONE > ⑤.

The following options may be possible, depending on your mobile device:

- Decline with text message
- Edit voicemail number

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

Switch telephones: the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

Ringtone and volume settings

- Ringtone and message volume: you can adjust the volume using the slider.
- Ringtone: select a ringtone from the list.
- Microphone input level: you can adjust the input level of the microphone using the slider.

Data module serial number (IMEI)

Applies to: vehicles with data module

The serial number (IMEI) will be displayed.

Contact settings

Applies to: vehicles with telephone

► Applies to: MMI: Select on the home screen: PHONE > Contacts > ②.

Switching between two mobile devices

Requirement: phone 1 and phone 2 must be connected to the MMI.

Switch telephones: the device name of the available mobile device is displayed. You can switch the phone by pressing the button.

The directory for the selected phone will be displayed.

Hide grayed-out contacts

When this function is switched on, contacts that have no phone numbers stored for them will be hidden.

Sort order

You can sort the contacts by **Last name** or **First name**.

Download contacts

Requirement: a mobile device must be connected to the MMI.

To update the contacts in the MMI, you can manually download your mobile device contacts. Depending on the mobile device, you may need to disconnect and reconnect the Bluetooth connection to update the contacts.

Importing and exporting contacts

Requirement: a USB storage device must be connected to the Audi music interface ⇒ page 222.

Contacts in vCard format (.vcf) can be imported or exported from the MMI.

- Importing contacts from a storage device: Requirement: the USB storage device must contain contacts in the vCard format. They must not be located in sub-folders. Select: > Search for import data > USB device 1/USB device 2 > desired contacts or Select all > Start import.
- Exporting contacts to a storage medium: Requirement: you must have a contact imported.
 Select: > Find exporting source > USB device
 1/USB device 2 > desired contacts or Select all
 > Start export.

(i)

Tips

- The imported contacts are stored in the local MMI memory.
- There should be no other files or folders on the storage medium containing the contacts to be imported.

- Contacts that were downloaded from a mobile device cannot be exported.
- Apple devices and MTP devices (such as smartphones) are not recognized as USB storage devices.

Messages

Text messages

Applies to: vehicles with telephone

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

► Applies to: MMI: Select on the home screen: MESSAGES > (♥) > e-mail (phone 1)/e-mail (phone 2)*.

The following functions are available:

- New text message*
- Inbox
- Sent
- Outbox*
- Drafts*
- Deleted

WWW.Carobothe following functions are available:

User defined*

If necessary, user-defined folders will be copied to your mobile device.

Message options

Press on a text message.

Depending on the country, the following options may be available:

- Read out
- Reply
- Forward
- More

To switch between messages, press < or >.

Press More. Depending on your mobile device and the selected mailbox, additional options may be available:

- Call
- Forward
- Navigate
- Extract numbers

- Send again

Settings

Press .

New text message notification

When the function is switched on, an envelope \ in the MMI status bar will indicate when there is a new text message.



Tips

Only new received messages may be displayed depending on your mobile device.

E-mail

Applies to: vehicles with telephone and e-mail

Requirement: your mobile device must be connected to the MMI via Bluetooth Message Access Profile (Bluetooth MAP).

► Applies to: MMI: Select on the home screen: MESSAGES > (□) > e-mail (phone 1)/e-mail (phone 2)*.

- New e-mail
- Inbox
- Sent
- Outbox
- Drafts*
- Deleted*

User defined*

If necessary, user-defined folders will be copied to your mobile device.

Message options

Press on an e-mail.

Depending on the country, the following options may be available:

- Read out
- Reply
- Reply all
- Forward
- More

To switch between messages, press or .

Telephone

Press **More**. Depending on your mobile device and the selected mailbox, additional options may be available:

- Call
- Forward
- Extract e-mail
- Navigate
- Extract numbers
- Show all recipients
- Send again

Settings

Press .

Troubleshooting

Applies to: vehicles with telephone

The information that follows lists some troubleshooting options. They depend on the equipment.

New e-mail notification

When the function is switched on, an envelope in the MMI status bar will indicate when there is a new e-mail.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

⇒ page 193.

Problem	Solution
Pairing the mobile device to the MMI failed.	Make sure the requirements for connecting a mobile phone have been met ⇒ page 182, or make sure you did not accidentally decline the PIN for establishing a connection on your mobile phone. If necessary, repeat the pairing process ⇒ page 182.
After pairing, not all contacts or no contacts have been loaded into the MMI.	Avoid using special characters in names. Avoid using contact groups on your mobile device. Check for prompts on your mobile device when connecting via Bluetooth.
Certain telephone functions are grayed out or not available.	The telephone functions depend on the mobile device service provider and the mobile device you are using.
Some telephone functions may be switched off or not available, even though the mobile device is supported.	Check if the Bluetooth settings on your cell phone are limited or individual Bluetooth settings are deactivated. This may be the case with business cell phones.
The MESSAGES menu is not available.	Make sure your mobile device has an option to show messages option and that it is enabled.
Wireless cell phone charging is not working or is interrupted.	Check if wireless charging with the Audi phone box is switched on. Check if your mobile device is Qi-capable. Make sure your mobile device is positioned correctly in the Audi phone box ⇒ page 184 and that there are no objects located between the phone box and the phone.

Audi connect

General information

Applies to: vehicles with Audi connect

Depending on the country and the vehicle equipment, the following functions may be available:

- Audi connect Infotainment
- Audi connect vehicle control

Λ

WARNING

- To reduce the risk of an accident, only use
 Audi connect services and the Wi-Fi hotspot only if the traffic situation permits it. Read and follow the guidelines provided in
 ⇒ page 18, Traffic safety information.
- It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving. Also read the warnings in the chapter ⇒ page 70.

1

Note

- The connection costs of Audi connect Infotainment services are included in the price of Audi connect Infotainment during the subscription period with some exceptions. Please note that there may be additional charges when using some services. For example, this applies to online radio/podcasts, additional online data, or for Internet connections and services that use the Wi-Fi hotspot. Depending on the country, data plans may need to be purchased for these Internet connections and services
 ⇒ page 197. For additional information, see my.audi.com.
- In certain situations, the Wi-Fi hotspot data connection may be established as a replacement for the SIM card on your Wi-Fi device. This feature depends on the configuration of your Wi-Fi device and operating system. This could result in fees depending on your cell phone service provider, especially if you are using this feature while abroad. A flat

- rate data plan is strongly recommended. For more information, contact your cell phone service provider or refer to the owner's manual for your Wi-Fi device.
- You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used, for example, to access the Internet through the Wi-Fi hotspot.
- In areas with poor GPS reception or outside the coverage range of the respective cell phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.

(i)

Tips

- The availability of services depends on the subscription.
- Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content and availability of these services.
- Use of the most up-to-date mobile network standard is not available in every country.
 Contact an authorized Audi dealer or authorized Audi Service Facility or your cell phone service provider for additional information.
- Availability, scope, providers, screen display, and costs of services may vary depending on the country, model, model year, end device and rates.
- All services/apps can be modified, activated/deactivated, renamed, and enhanced without further notification.
- Depending on the country and model there may be an app other than the "myAudi app" available for your vehicle. For additional information, see my.audi.com.

Audi connect Infotainment

Description

Applies to: vehicles with Audi connect Infotainment

With Audi connect Infotainment services, online information is transmitted directly to the vehicle.

An Internet connection is required to use Audi connect Infotainment. The Internet connection is established using the embedded SIM card (eSIM).



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.



Note

Always follow the information found in \Rightarrow ① in General information on page 193.

Embedded SIM card

Applies to: vehicles with Audi connect Infotainment and an embedded SIM card

The data connection for Audi connect Infotain Call ment services is made through an embedded SIM card (eSIM card) that is installed in the vehicle. You can use the Audi connect Infotainment services immediately.



Note

Always follow the information found in \Rightarrow ① in General information on page 193.

Using a Wi-Fi hotspot

Applies to: vehicles with Wi-Fi hotspot

You can connect up to eight Wi-Fi devices (such as smartphones) with the MMI Wi-Fi hotspot. If the MMI is connected to the Internet ⇒ page 194, the connected Wi-Fi devices can also use the MMI's Internet connection.

Requirement: the ignition must be switched on. A data plan must be available ⇒ page 197.

➤ Applies to: MMI: Select on the home screen: SETTINGS > Connection settings > Wi-Fi Switch on the Wi-Fi hotspot.

- ▶ Applies to: MMI: Select on the home screen: SETTINGS > Connection settings > Wi-Fi > Wi-Fi hotspot settings. The access data for the Wi-Fi hotspot is displayed.
- Switch the Wi-Fi function on in your mobile device and connect it to the MMI Wi-Fi hotspot using the authentication data that is shown.
- Follow any additional system prompts on your Wi-Fi device if necessary.

Your device is successfully connected with the MMI's Wi-Fi hotspot.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.



Note

Always follow the information found in ⇒ ① in General information on page 193.



Tips

The system complies with United States FCC regulations and ISED regulations ⇒ page 300.

Audi connect Infotainment services

Configuration

Applies to: vehicles with Audi connect Infotainment

Some Audi connect Infotainment services must be configured through your personal myAudi account at my.audi.com before using them for the first time.



Tips

- A myAudi user must be logged in for some Audi connect Infotainment services.
- Some Audi connect Infotainment services must be activated at my.audi.com.
- Depending on the country, you may be able to use an Audi app or my.audi.com.
- For detailed information on configuration, visit my.audi.com.

Services

Applies to: vehicles with Audi connect Infotainment

Depending on the country and the vehicle equipment, the following services may be available:

Weather information

Applies to: MMI

▶ Press WEATHER on the home screen.

Editing settings: Select: WEATHER > :::

- ► To display the weather for a location, press on a location in the list.
- ➤ To display the weather for your current location, press on the location that is marked with the crosshairs.

Requirement: route guidance must be active.

► To display the weather at your destination, press on the location that is marked with the flag ²⁰.

Adding a location: select: WEATHER > \text{\text{\text{H}}} > \text{In a new city} > a location.

Removing a location: select: WEATHER > : > /= > one or more locations or Select all > Delete.

Online news

► Applies to: MMI: Select on the home screen: **NEWS**.

Access to the calendar

Requirement: the myAudi app must be installed and open on your mobile device. Access to your calendar must be enabled on your mobile device. You must be logged into the myAudi app with your myAudi login data and you must have selected your vehicle. The Wi-Fi function on your mobile device and the MMI must be enabled and your mobile device must be paired to the MMI Wi-Fi hotspot \Rightarrow page 196, Wi-Fi.

You can display the your mobile device calendar on the MMI.

► Applies to: MMI: Select on the home screen: CALENDAR.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.

Note

Always follow the information found in \Rightarrow ① in General information on page 193.

Functions on demand

Displaying purchased functions

Applies to: vehicles with functions on demand

Depending on the country and vehicle equipment, you can purchase functions on demand through a myAudi account in the myAudi app at any time.

The following options are available for displaying purchased functions in the vehicle.

Applies to: MMI: Select on the home screen: PURCHASES.



Tips

- Equipment installed at the factory may be displayed as purchased functions.
- The availability of functions in the myAudi
 app varies depending on the country.
- Depending on the country and model there may be an app other than the "myAudi app" available for your vehicle. For additional information, see my.audi.com.
- At the time this manual was printed, functions on demand was a planned function.
 Functions on demand may not be available in your vehicle.

Messages

Applies to: vehicles with functions on demand

If a message about a function that requires a license is displayed, the function may no longer be available. Check the MMI Purchases menu to see if you have a license for this function or if the license has expired. Purchase the function if necessary using functions on demand.

Audi connect vehicle control services

Services

Applies to: vehicles with Audi connect vehicle control

Using Audi connect vehicle control services, you can perform tasks such as viewing data about your vehicle or control vehicle functions remotely.

You can view and use services available for your vehicle at my.audi.com or through the myAudi app.

Information about the services and the corresponding app was accurate at the time this manual was printed. The scope of services depends on the country and equipment. There may be changes over the service life of the vehicle.

Λ

WARNING

- Driver messages, text messages, and illuminated warning and indicator lights in the vehicle always take priority over information from the Audi connect services. The information displayed by the Audi connect services should not cause you to take safety risks. This can result in the vehicle breaking down in traffic and to serious injuries or accidents.
- Applies to: vehicles with electric drive: Only perform the Audi connect climate control functions if your vehicle was shut off correctly and the ignition is switched off.
- Applies to: vehicles with electric drive: Only perform charging functions on the highvoltage battery if the vehicle is shut off correctly, is connected to a suitable socket, and if the ignition is switched off.

(i)

Tips

Accessing specific data or controlling functions remotely depends on the charge level of the vehicle battery. Therefore, these functions only have limited availability after switching off the ignition.

– An eSIM card establishes the Internet connection for Audi connect vehicle control services. The costs for this are included in the price of Audi connect vehicle control services. The mobile phone network, for example, must be available to use these services.

Setup

Applies to: vehicles with Audi connect vehicle control

Create a myAudi account by registering in the myAudi app or at my.audi.com, depending on your country.

- ► Set the key user ⇒ page 30.
- Install the myAudi app on your mobile device and log in with your access information.



Tips

Some services require you to enter a 4-digit PIN that you set up during registration.

Settings

Wi-Fik.COM

Applies to: vehicles with Wi-Fi hotspot

Requirement: the ignition must be switched on.

► Applies to: MMI: Select on the home screen: SETTINGS > Connection settings > Wi-Fi

Depending on the country and the vehicle equipment, the following functions may be available:

Wi-Fi

When the function is switched on, the MMI's Wi-Fi hotspot is active and Wi-Fi devices can be connected to the hotspot.

Wi-Fi hotspot settings

The Wi-Fi connection between the MMI and your Wi-Fi device is encrypted. You can change the following information if needed.

- Access point (SSID): name of the Wi-Fi hotspot.
- Password: an initial password was set at the factory in the MMI. Audi recommends changing the initial password. Only use secure passwords

that conform to the general guidelines for secure passwords. For more information, refer to reputable and current sources on password security.

Allow data connection through Wi-Fi

When the function is switched on, mobile devices can use the Internet connection through the Wi-Fi hotspot. A data plan is needed to do this.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.



Note

Always follow the information found in \Rightarrow ① in General information on page 193.



Tips

The name of the Wi-Fi hotspot and the Bluetooth name are automatically compared when there are changes. You can purchase data plans at my.audi.com.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.



Note

Always follow the information found in ⇒ ① in General information on page 193.



Tips

- Depending on the country, you may be able to use the myAudi app or my.audi.com.
- Depending on the country, there may be restrictions on the use of data plans (such as mobile phone service providers) when driving in other countries.
- If selling your vehicle, you should delete the vehicle from the customer portal for the cell phone service provider to avoid being charged for additional purchases.

Data plans¹⁾

www.carobook.com

Applies to: vehicles with Audi connect

Data plans must be purchased in order to use certain services ⇒ ① in General information on page 193.

Troubleshooting

Applies to: vehicles with Audi connect Infotainment

The information that follows lists some troubleshooting options. They depend on the equipment.

Problem	Solution
Audi connect Infotainment serv- ices: individual Audi connect Info- tainment services are grayed out or not available.	Some Audi connect Infotainment services must be activated or configured through your personal myAudi account before using them for the first time. You can find detailed information online at my.audi.com.
Wi-Fi hotspot : it is not possible to connect through Wi-Fi.	Check if Wi-Fi is activated in the MMI ⇒ page 196. Delete all existing Wi-Fi connections on your mobile device and restart it.

Not available in every market.

Emergency call

Overview

Applies to: vehicles with emergency call function

An emergency call is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information, such as the vehicle and position data, to the emergency call center.

Depending on the country and the vehicle equipment, the following functions may be available:

With the **emergency call**, you can call for help in dangerous situations as quickly as possible. Use this function when emergency help is needed ⇒ page 198.

 Audi connect emergency call (TPS emergency call). This eCall system uses emergency call centers operated by third party providers.

With **online roadside assistance**, you can request assistance if there is a breakdown or a minor accident ⇒ page 199.

Λ

WARNING

www.carob

In areas with poor GPS reception or outside the coverage range of the respective cell phone service provider, some functions and/or services may not be available, it may not be possible to send or receive data, or functionality may be limited.



Tips

To see which data can be transmitted, visit your Audi country or sales region website at www.audi.com.

Emergency call

Operation

Applies to: vehicles with emergency call function

The services are provided through a SIM card installed in the vehicle. Services are provided assuming that the mobile phone network required for the installed SIM card is functioning and available for use. The services made availably by Audi are only available within the mobile phone net-

work coverage area for the mobile phone service provider selected by Audi.



Tips

- The emergency call function cannot be deactivated in the Infotainment system settings.
- The availability of the TPS emergency call is limited to certain times.
- The costs for call and data connections for TPS emergency calls is included in the price of the services.

Functions

Applies to: vehicles with emergency call function

A TPS emergency call can be made manually or automatically ⇒ page 198.

Making an emergency call

Applies to: vehicles with emergency call function

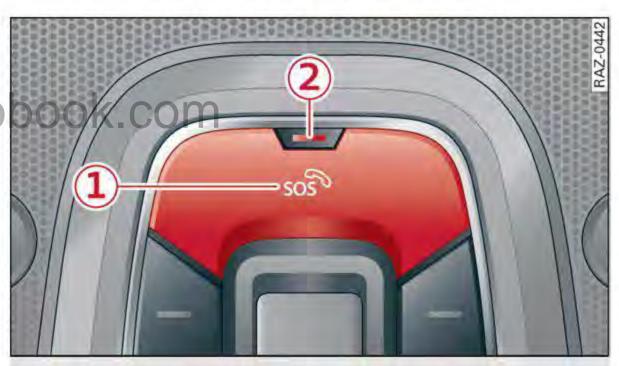


Fig. 134 Front headliner: cover for the emergency call button

Manual emergency call

Requirement: the ignition must be switched on.

- ► Tap the cover 1 to open it.
- ▶ Press and hold the emergency call button until the LED ② blinks. The emergency call will be made.
- ▶ If the emergency call button is pressed by mistake, then press it again immediately and hold it until the LED stays on. The emergency call will be canceled.

Automatic emergency call

The vehicle electrical system initiates an automatic emergency call under certain

circumstances, for example if an airbag deploys. The LED in the emergency call button ② will blink. The emergency call will be made. The emergency call cannot be canceled.

LED status

- Green The emergency call function is available.
- Red There is a malfunction in the emergency call function. Contact an authorized Audi dealer or authorized Audi Service Facility. Note the messages about the availability of the emergency function ⇒ page 199.
- Off The emergency call function is not available, perhaps because no network is available.

Warnings

If there is a critical system failure in the emergency call systems, the vehicle occupants will receive the following warning: see ⇒ page 199, LED status and ⇒ page 199, Messages.



Tips

If the emergency call is canceled due to a poor connection, then the system automatically tries to connect again.

Messages

Applies to: vehicles with emergency call function

Emergency call function: malfunction! Limited availability. Please contact Service

If this indicator light turns on and this message appears, the emergency call function is restricted. For example, you cannot call the emergency call center, but data may still be transmitted under certain circumstances. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Emergency call function: malfunction! Function unavailable. Please contact Service

If this indicator light turns on and this message appears, you cannot make an emergency call. Drive to an authorized Audi dealer or authorized

Audi Service Facility immediately to have the malfunction corrected.

Online roadside assistance

Description

Applies to: vehicles with online roadside assistance

An online roadside assistance call ¹⁾ is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information to the Audi service center, such as the vehicle and position data.

Calling online roadside assistance

Applies to: vehicles with online roadside assistance

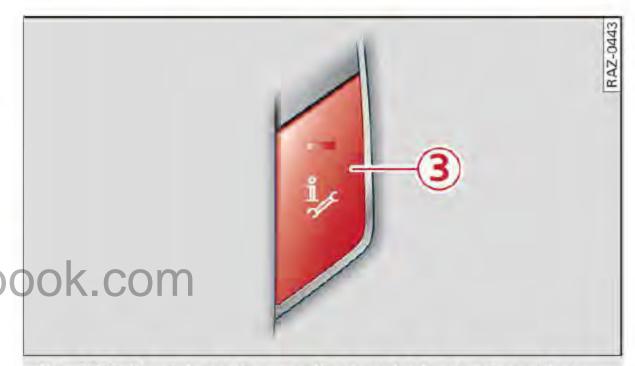


Fig. 135 Front headliner: online roadside assistance button

Calling online roadside assistance

- ► Press the button ③. The LED in the button turns red. The online roadside assistance call will be made.
- ► If you press the button ③ by mistake, then press it again.

Audi incident assistance

A minor accident may be detected by the vehicle electrical system. You are able to select between online roadside assistance and an emergency call in the MMI.

The availability of the services offered depends on the country and may change in the future.



Tips

If the roadside assistance call is canceled due to a poor connection, then the call must be made again.

www.carobook.com

Navigation

Opening navigation

Applies to: vehicles with navigation system



Fig. 136 Route guidance not started

The navigation system directs you to your destination, around traffic incidents, and on alternative routes, if desired.

Opening navigation

► Applies to: MMI: Press **NAVIGATION** on the home screen.

After accessing the navigation for the first time, the map is displayed.

Opening navigation using the multifunction steering wheel WWW.Care

- Select the Navigation tab in the instrument cluster.
- ► To display navigation when route guidance has started, select in the instrument cluster: the button > Map.

The following functions are available in the MMI:

- Select destination ⇒ page 203, fig. 137.
- ② Intelligent search ⇒ page 202.
- Switch between the map and the menu: press \(\triangle \) repeatedly until the desired function is displayed.

You can find additional information about the map update at ⇒ page 207, Map operation.

Λ

WARNING

- The demands of traffic require your full attention. Always read the chapter ⇒ page 18,
 Traffic safety information.
- The route calculated by the navigation system is a driving recommendation. Follow the traffic regulations that are applicable in

the country where you are operating the vehicle. In the event that the driving directions contradict traffic regulations, always follow the traffic regulations applicable in the country where you are operating the vehicle to reduce the risk of an accident.

(!)

Note

Read the information about Audi connect, and be sure to note the connectivity costs section

⇒ ① in General information on page 193.

(i)

Tips

- Snow and objects on the GPS antenna or trees and large buildings can impair satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can interrupt GPS reception.
- Because street names sometimes change,
 the names stored in the MMI may in rare
 cases differ from the actual street name.
- Applies to: multifunction steering wheel:
 Depending on the selected function, operation through the MMI may be required.
- Applies to: vehicles with Audi connect Infotainment: Depending on the country and vehicle equipment, additional services may be available.
- An additional indicator will appear in the head-up display.

myAudi navigation

Applies to: vehicles with myAudi navigation

MMI navigation works seamlessly with the myAudi app.

Your destinations (favorites, last destinations) are synchronized through your myAudi account. All important destinations can be displayed in the vehicle and in the myAudi app.

To load destinations in the vehicle automatically, Audi recommends logging into the vehicle with a myAudi user ⇒ page 30.

myAudi navigation functions:

- You can send destinations and routes from the myAudi app to the vehicle ⇒ page 204.
- Active route guidance in the myAudi app can be continued in the MMI.
- Depending on the situation, it may be possible to continue active route guidance from the MMI in the myAudi app to continue navigating to the destination after leaving the vehicle.

Entering a destination

Intelligent search for navigation destinations

Applies to: vehicles with navigation system

Using the intelligent search, you can enter the data for a navigation destination in any order all at once (for example, 5th Avenue New York). Likewise, you can search for points of interest, contacts, previous destinations, or favorites in order to navigate to the desired destination.

Opening a menu

► Applies to: MMI: Select on the home screen: Caro C NAVIGATION > .

Intelligent search

- ► Enter one or more search terms into the input field ⇒ page 23, Text input.
- ► Press on the desired destination in the results list. The **Details** menu will be displayed.
- ▶ Press Start. Route guidance will be activated and the map will be displayed ⇒ page 206, fig. 139.

Online Points of Interest

- Searching for points of interest: enter the name of a POI.
- To display all categories and search for a POI, select: > a category (such as restaurants) > a POI.

Change search area

Requirement: route guidance must be active.

- ► Applies to: MMI: Select on the home screen: NAVIGATION > ...
- ► To change the search area, press ♠ / ỗ / শ repeatedly until the desired search area is selected.

Online search 1)

Applies to: vehicles with navigation system and online search

You can use the results from a search engine provider to find a navigation destination.

Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect.

- ► Applies to: MMI: Select on the home screen: NAVIGATION > ♪ > G.
- Enter one or more search terms into the input field.
- ▶ Press on suggestions, if available, until the desired destination appears in the results list. If necessary, use one finger to swipe upward or downward until the suggestions > or destinations ? appear.
- ▶ Press on the desired destination ♥. The Details menu will be displayed.
- ► Press Start.



Tips

- The MMI input suggestions depend on the last navigated destinations.
- The navigation system always searches for the fastest route. You can have alternative routes displayed if necessary ⇒ page 208.
- If the destination cannot be found, it may not be stored in the navigation database.
 Check the spelling of the term that was searched or check the search area
 ⇒ page 202.
- Distances to points of interest are displayed as a straight-line distance from your current location. The actual distance from your

Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

current location to the point of interest is updated automatically. The list of points of interest that were found is not resorted when this happens.

Select destination

Applies to: vehicles with navigation system



Fig. 137 Menu: select destination

Opening a menu

- ► Applies to: MMI: Press NAVIGATION on the home screen.

The following functions are available:

Loading previous destinations

Applies to: vehicles with navigation system

Your last destinations and routes can be loaded as a navigation destination.

As soon as you start route guidance, the destination is automatically saved in the last destinations. Your previous destinations are marked with the 🖰 symbol.

If you use myAudi navigation, your previous destinations will be synchronized with your myAudi account ⇒ page 201.

Accessing previous destinations

► Applies to: MMI: Select on the home screen:

NAVIGATION > (器) > Last destinations > select
a destination > Start.

➤ Select in the instrument cluster: Navigation tab

> □ button > Last destinations > a destination.

Deleting previous destinations

► Applies to: MMI: Select on the home screen:

NAVIGATION > (器) > Last destinations > ♠ >

select one or more entries or Select all > Delete
> (Done).

(i)

Tips

The last route will be automatically deleted from the list if you start a new route guidance after canceling the route.

Setting a favorite as the destination

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

Requirement: a favorite must be stored ⇒ page 208.

- NAVIGATION > (日) > Favorites > select a destination.
 - ➤ Select in the instrument cluster: Navigation tab
 > button > Favorites > a destination.

Selecting contacts as destinations

Applies to: vehicles with navigation system

You can navigate to contacts.

Requirement: a contact must have an address stored.

- ► Applies to: MMI: Select on the home screen: NAVIGATION > (읍) > Contacts > a contact.
- ▶ Press on the address for a contact.
- Press on a suggested address. The **Details** menu will be displayed.

i

Tips

- If a contact is grayed out, there is no address stored for that contact.
- Navigation to geographical coordinates for a contact is not possible.

Loading received destinations and routes

Applies to: vehicles with myAudi navigation

You can search for destinations or routes in the myAudi app and send to the vehicle.

Requirement: the MMI and the mobile device must be connected to the Internet ⇒ page 193, Audi connect. You must have the myAudi app installed on your mobile device.

- Send a destination or route in the myAudi app to the vehicle.
- ➤ Applies to: MMI: Select on the home screen: NAVIGATION > (읍) > Received destinations and routes.
- Make sure you are logged into the vehicle and the myAudi app with the same myAudi account. The received destination and routes will be loaded automatically.
- Navigating to a destination: press on a destination.
- ▶ Deleting destinations: select: \$\mathscr{A}_{\boldsymbol{\operation}} > one or more entries or Select all > Delete > (Done).

- Call: Requirement: a mobile device must be connected to the MMI ⇒ page 182. You will make a call to the phone number that is stored for the destination.
- 6 Start: starts navigation to the displayed destination. The map will be displayed ⇒ page 207.
- Parking: press Parking to search for a parking space at the destination. You can use the parking space as a destination or stopover.
- (8) Details: Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect.
- Oisplay of distance/driving time to the destination
- Weather at the destination: Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect.

Selecting a destination from the map

Applies to: vehicles with navigation system

A point on the map can be used as the destina-

book.com

Opening the map

- ► Applies to: MMI: Press **NAVIGATION** on the home screen.
- ▶ If necessary, press △ to display the map.

Adjusting the scale

► Select: ₱/♠ > select a scale.

Marking the destination

▶ Press and hold a point on the map until a marking appears or the address for the selected destination is shown.

Selecting map content (such as POIs) as the destination

Requirement: map content must be displayed ⇒ page 212.

Selecting the destination

► Select: 🔁 > Start.

Destination details

Applies to: vehicles with navigation system

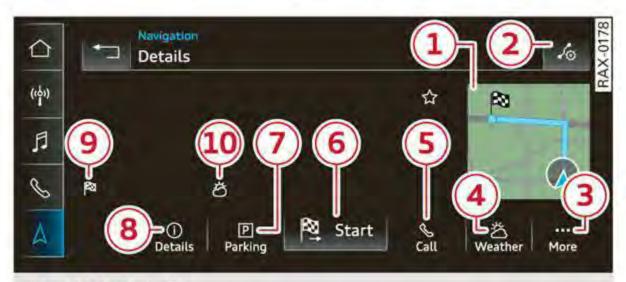


Fig. 138 Details

After you have selected a destination, the details will be displayed. Route guidance is will not be active yet.

The functions depend on the vehicle equipment and the selected destination.

- Map preview: to zoom in on the map preview, press on the map.
- 2 Route criteria: see ⇒ page 213.
- More: additional functions.
- Weather: Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect. Also see ⇒ page 195.

Stopovers and route plan

Applies to: vehicles with navigation system

You can enter additional destinations during active route guidance.

Entering a stopover

Requirement: route guidance must be active.

► Enter a destination ⇒ page 202.

Displaying stopovers or the route plan

All destinations are listed in the route plan.

▶ Press on Pin the side menu on the map ⇒ page 206, fig. 139.

Editing stopovers

- ▶ Press on Pain the side menu on the map ⇒ page 206, fig. 139.
- ► Adding a stopover: Select: Add destination > select a destination > Add to route.
- ► Moving a stopover: press . Touch the \$\Display\$ symbol and move the entry to the desired position. Press Done.
- ► Deleting a stopover: Select: ✓ one or more entries or Select all > Delete > (Done).

e-tron route planner

Applies to: vehicles with navigation system and e-tron route planner

The MMI includes the charging stations along the route, if the destination cannot be reached with the current battery charge level.

Requirement: the **e-tron route planner** must be switched on \Rightarrow page 212.

Entering a destination with the e-tron route planner

► Enter a destination.

If the destination is out of range, the fastest route with stopovers for charging will be suggested automatically.

- To start the suggested route guidance, press Accept.
- ► To display the route, press 🖺 ⇒ page 206, fig. 139 in the map side menu.

The destination is located outside of the range

The symbol will be displayed if the destination in the current route plan cannot be reached.

- ▶ Press on on the map. The route plan will be displayed.
- Press e-tron route planner to calculate an alternative route with suitable charging stations.

In the e-tron route planner, the following items will be shown for each destination: the calculated arrival time, the estimated battery charge level at arrival and after charging , the suggested charging duration , and the distance from the current location.

(i)

Tips

- The calculated arrival time at the destination incorporates the suggested time for charging at the stopovers.
- The e-tron route planner continuously calculates the fastest route while taking into account the charging times at various charging stations. Therefore, a route with multiple charging stops could be faster than a route with fewer charging stops.

Stopping route guidance

Applies to: vehicles with navigation system

Requirement: route guidance must be active and the map must be displayed.

- ► Applies to: MMI: Press 🕅 ⇒ page 206, fig. 139.
- ➤ Select in the instrument cluster: Navigation tab
 > □ button > Cancel route guidance.

Map

Map functions

Applies to: vehicles with navigation system



Fig. 139 Active route guidance

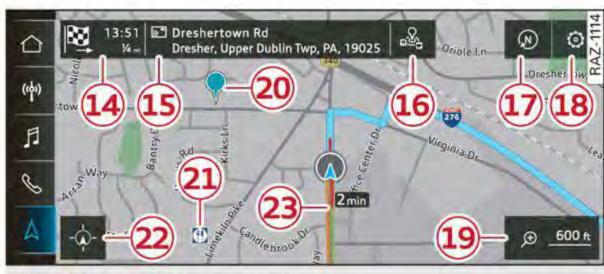


Fig. 140 Marked map object

Opening the map

- ► Applies to: MMI: Press NAVIGATION on the home screen. WWW_Carob
- ▶ If necessary, press △ to display the map.

The following list gives an overview of the information displayed on the map. Press on any function (for example, alternative routes) to show additional options.

- Select destination ⇒ page 203
- ② Entering a destination ⇒ page 202
- (3) Cancel route guidance ⇒ page 205
- 4 Current route
- S Request spoken prompt
- 6 Alternative routes ⇒ page 208
- ⑦ Display active destinations, stopovers, or route plan ⇒ page 205. The distance to the destination including the calculated arrival time is displayed
- Online traffic information ⇒ page 211
- Altitude

- Displays the maximum permitted speed¹⁾: within city limits, on expressways, and on highways
- (1) Current vehicle position
- Route information ⇒ page 213
- (13) Name of the street on which you are driving
- Start route guidance for a marked destination ⇒ page 204, Selecting a destination from the map
- Display details for the destination ⇒ page 204
- 16 Intelligent search nearby ⇒ page 202
- Adjust the map orientation. See also
 ⇒ page 212
- 18 Settings ⇒ page 212
- Adjust the scale. Press the magnifying glass to switch automatic zoom ⇒ page 212 on the map on or off. The A symbol appears when this function is switched on
- Marked destination ⇒ page 204, Selecting a destination from the map
- 21 Map contents (points of interest, favorites).
 - When there are multiple map contents in the immediate vicinity, the symbols are shown stacked on the map. To display a list of individual symbols, press $\Box \Rightarrow fig. 140$. Press on a POI in the list
- Center the map to the current vehicle position
- 23 Traffic incidents and display of estimated losses of time on the route
 - Green: traffic is flowing freely.
 - Orange: stop-and-go traffic
 - Red: traffic jam or traffic obstructions.

Additional possible symbols on the map

Symbol	Description	
企	Home address ⇒ page 208, Favor- ites	
ii]	Business address ⇒ page 208, Fa- vorites	

Applies to vehicles without camera-based traffic sign recognition.

Symbol	Description
*	Favorites ⇒ page 208
2	Previous destinations display

Traffic information

- Colored warning symbols: traffic incidents ahead that are on your route.
- Grayed out warning symbols: traffic incidents that are not on your route.
- All traffic incidents will display in color when route guidance is inactive.
- Warning symbols with arrow: traffic incident that you have been routed around, for example
 .

Map operation

Applies to: vehicles with navigation system

You can operate the map ⇒ page 206, fig. 139 with the movements described in the following information.

Moving the map

► Drag your finger across the map in the desired direction.

Moving the map quickly

Swipe your finger across the map in the desired direction and lift your finger off the map.

Zooming in on the map

- Place two fingers on the map and pull your fingers apart, or
- ► Double-tap on the map with one finger.

Zooming out on the map

- ► Place two fingers on the map and pull your fingers together, or
- ► Double-tap on the map with two fingers.

Rotating the map

► Rotate the map using two fingers.

Tilting the map

► Drag upward or downward with two fingers.



Tips

Certain gestures may not be available on all touch displays or in every menu.

Navigation view with route guidance started

Applies to: vehicles with navigation system and Audi virtual cockpit

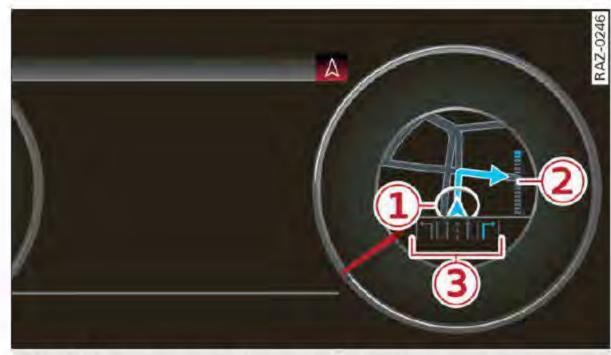


Fig. 141 Instrument cluster: default view: turning maneuver when route guidance has started

Requirement: route guidance must be on ⇒ page 202.

The following information will be displayed in the driver information system, if available:

- Current vehicle position
- A bar graph appears when there is an upcoming turn. The fewer the bars that are shown, the shorter the distance is until the turn. If there is no upcoming turn immediately ahead, the distance to the destination or stopover, the calculated arrival time, and a direction arrow for the upcoming maneuver will be displayed in the right speedometer. If there is no upcoming maneuver, the distance to the next maneuver will be displayed.
- (3) Lane recommendation

Predictive route guidance

Applies to: vehicles with navigation system and predictive route guidance

Your MMI can learn the routes that you drive frequently (such as your daily commute to work and back) and suggest route guidance based on the current vehicle position.

When the function is switched on, the MMI records the routes driven regardless of whether or not you are using navigation.

Without starting route guidance, your MMI can check the traffic conditions and shows possible traffic incidents for the possible routes to be driven.

Opening personal routes

Requirement: predictive route guidance is switched on ⇒ page 213. Route guidance must not be active. A notification is displayed.

► The MMI displays up to three suggestions. Press on a suggestion. Route guidance will start.

Better routes

If there are major traffic incidents, the MMI will display a notification regardless of the selected menu. If the MMI has calculated a better route, you can select it as the route.

▶ Press on the notification.

As soon as you switch off predictive route guidearo ance, your personal routes will no longer be recorded. Routes that were already stored will remain stored.

Deleting personal routes

▶ Applies to: MMI: Select on the home screen: NAVIGATION > ③ > Predictive route guidance > Delete recordings from the last 24 hours or Delete all personal routes and destinations.



Tips

If the predictive route guidance is switched off and you press \Re , the predictive route guidance settings will be displayed \Rightarrow page 213.

Alternative routes

Applies to: vehicles with navigation system

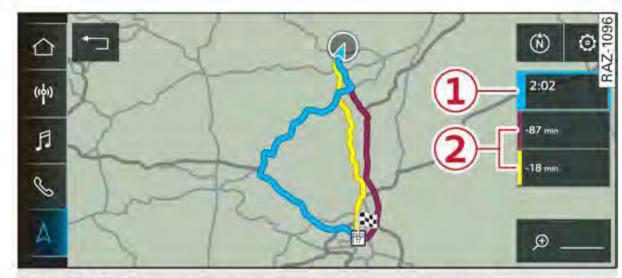


Fig. 142 Alternative routes in the overview map

Opening alternative routes

Requirement: route guidance must be started ⇒ page 202 and the map must be displayed ⇒ page 207.

▶ Press on in the side menu on the map ⇒ page 206, fig. 139.

1 Current route

The distance to the destination and the calculated arrival time will be displayed for the current route.

2 Alternative route

The difference in travel time compared to the selected route will be displayed.

Displaying alternative routes in the foreground

- Press (i) in the corresponding information window, or
- ▶ Press and hold the information window for the corresponding alternative route (for example,
 ② ⇒ fig. 142).

Select route

▶ Press on the information window for the corresponding route (for example ②).

Additional functions

Favorites

Applies to: vehicles with navigation system

In the favorites, you can call up frequently-used destinations as well as your home/business address.

Accessing favorites

► Applies to: MMI: Select on the home screen: NAVIGATION > (器) > Favorites.

If you use myAudi navigation, your favorites will be synchronized with your myAudi account ⇒ page 201.

Storing favorites

► Press ☆ in the **Details** menu ⇒ page 204, fig. 138.

Storing a home address or business address

- Press Home address or Business address.
 When accessed for the first time, you will be prompted to set the address.
- ► Select: Create now > enter a destination > OK.

Editing a home address or business address

Requirement: the favorites list must be displayed. Your home address or business address must be stored.

- ► Press Home address or Business address until the Options menu is displayed.
- ► Select: Change address > enter a destination > (Set as destination) or (Add to address) > OK.

Editing a favorite

Requirement: the favorites list must be displayed.

- Setting a favorite as a destination: press on a favorite.
- ▶ Deleting favorites: in the Details menu, press
 ★ ⇒ page 204, fig. 138, or select: \(\int_{\equiv} > one or \)
 more entries or Select all > Delete > (Done).
- ► Moving a favorite: press A=. Touch the \$\diams\text{ symbol and move the entry to the desired position.}
 Press Done.

i Tips

 After deleting the home address or business address, only the address is deleted and the entry will still be displayed in the favorites. Please note when moving favorites that items 1 and 2 are reserved for the home address and business address.

On-street parking

Applies to: vehicles with navigation system and on-street parking

In supported areas, you can display parking along the route.

Requirement: the **Parking** notification must be switched on ⇒ page 21, Notification center. The MMI must be connected to the Internet ⇒ page 193, Audi connect. Route guidance must be active, you must be close to your destination, and a notification must be displayed or an item on the map must be marked.

- ▶ Press on the notification, or
- ▶ Press on the map.
- To navigate to a parking: space, press on a colored marking on the map.
- ► Select: 🔁 > Start.

Depending on availability, colored markings on the map indicate the probability of open parking spaces.

Color	Description	
Green	High probability	
Orange	Medium probability	
Red	Low probability	

Satellite map

Applies to: vehicles with navigation system and satellite map

You can display the navigation map with satellite images.

Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect.

▶ Applies to: MMI: Select on the home screen: NAVIGATION > ② > Map settings > Satellite map¹⁾.

Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

The map view is based on data packets received from the Internet in the form of satellite images, which are then combined with the roadways from the ⇒ page 206, fig. 139 standard map view.



Tips

- The satellite map¹⁾ is updated regularly whenever the function is opened. The process may take several seconds.
- Depending on the Internet connection, the standard map may also be displayed when the satellite map is switched on ¹⁾.

Electric range

Applies to: vehicles with electric range display

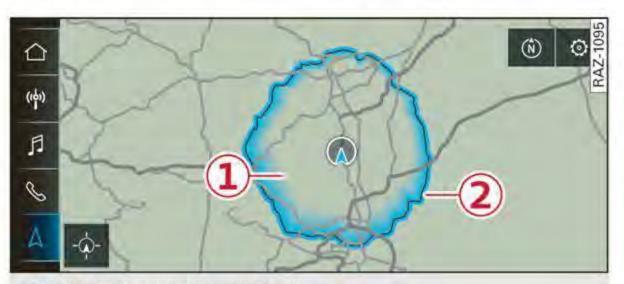


Fig. 143 Electric range display

The electric range shows the distance that can be driven using electric power. Information such as the type of road, speeds, and altitude will be taken into account.

- ▶ Applies to: MMI: Select on the home screen: NAVIGATION > ② > Map settings > Range map.
- ① Depending on environmental conditions, the start of the colored section shows the probable minimum electric range for your vehicle.
- The border indicates the maximum electric range for your vehicle under optimal conditions.

Map update

Introduction

Applies to: vehicles with navigation system

You can update the map data in the MMI with a map update. The functions depend on the country and vehicle equipment.

- Map update through online map update
 ⇒ page 210.
- Import a map update from the USB connection to your MMI ⇒ page 211.

Online map update

Applies to: vehicles with online map update

Using the online map update, you can update the map content for your navigation system in your vehicle.

The MMI determines regions based on the vehicle position. Based on this, update data for these regions are available for your MMI.

Starting the update

Requirement the MMI must be connected to the Internet \Rightarrow page 193, Audi connect.

Applies to: MMI: To allow automatic map updates, select on the home screen: SETTINGS > System maintenance > Automatic online map update. The MMI starts the map update automatically in the background when new map material is available.

You can check the status of the download process and the installation in the notification center

⇒ page 21.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

⇒ ① in General information on page 193.

Audi provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.



Tips

Because of the high volume of data, Audi recommends performing the map update using the USB connection ⇒ page 211.

Map update using the USB connection

Applies to: vehicle with map updates using the USB connection

With the map update, you can update the map material in your navigation system.

Requirement: you must have created a myAudi account at my.audi.com. Your vehicle must be registered in your myAudi account.

Downloading updates

▶ Download the map update at my.audi.com and store it on a USB flash drive. For additional information, visit my.audi.com.

Installing updates

- ➤ Connect the USB flash drive to the Audi music interface ⇒ page 223.
- Open the notification in the notification center on ⇒ page 21 and press on the notification.
- Press Next. The status of the installation is shown in the display.

Traffic incidents

Introduction

Applies to: vehicles with navigation system and online traffic information



Fig. 144 traffic information overview

Open traffic information

Requirement: the map must be displayed ⇒ page 207.

Press on the traffic jam symbol in the side menu on the map ⇒ page 206, fig. 139.

Display traffic report details

- ▶ Press on the traffic report (2).

The following information can be displayed:

- ① A message will appear if the MMI calculates a better route for the current route guidance. The predicted delay takes into account future changes to the traffic situation on the route. Press on an item in a list ① and select the better route. More information can be found under ⇒ page 208.
- 2 A traffic message is displayed. The distance to the hazardous area is calculated from the current vehicle position.
- The traffic messages are only shown when route guidance is active. Press on a line to display details about it.



Tips

- Particularly critical traffic information, such as warnings about wrong-way drivers, is automatically displayed as a notification.
- Traffic information is not available in some countries.

Traffic rerouting

Applies to: vehicles with navigation system

By receiving traffic information, your MMI calculates a better route if available and the possible time saved compared to the current route.

Traffic rerouting

► Start route guidance.

The MMI uses a notification or a note in the traffic information ① ⇒ page 211, fig. 144 to indicate a better route. You can decide which route you would like to use.

To select a better route, you have the following options:

Notification: press ¹⊆. The better route will be used for route guidance, or press on the notification. Press on the information window for the better route (for example ② ⇒ page 208, fig. 142).

Note in the traffic information: press on the list entry ① ⇒ page 211, fig. 144. Press on the information window for the better route (for example ② ⇒ page 208, fig. 142).

Online traffic information

Applies to: vehicles with navigation system and online traffic information

The MMI can receive real-time online traffic information about congestion, accidents, road construction, and other incidents.

Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect. Traffic information must be switched on in the MMI ⇒ page 212.

Traffic information will be displayed on the standard map ⇒ page 206, fig. 139.

Online traffic information is also displayed on the standard map \Rightarrow page 209.

(i)

Tips

- Having the online traffic information function switched on provides the most accurate reports of traffic situations and traffic forecasting. Your vehicle transmits and processes its anonymous, encrypted position information at regular intervals to the traffic data provider. You can switch off data transfer at any time ⇒ page 292.
- The online traffic information network is not available in all countries, and the coverage is not nationwide.

Settings

Applies to: vehicles with navigation system

You can adjust the navigation system settings in the instrument cluster and in the MMI display separately. The settings depend on the country and vehicle equipment.

Accessing settings

► Applies to: MMI: Select on the home screen: NAVIGATION > .

Accessing settings using the multifunction steering wheel

► Select in the instrument cluster: Navigation tab > ≡ button.

A setting made using the multifunction steering wheel only applies to the instrument cluster map.

Map settings

Satellite map: see ⇒ page 209.

Traffic: you can display current traffic information on the map.

- Free flowing traffic
- Traffic obstructions
- Traffic incidents

Map colors

- Automatic: the map display adapts to the lighting conditions (for example, by changing from day to night when driving through a tunnel).
- Day or Night

Map orientation

- 2D heading-up map/2D north-up map: the current vehicle position is displayed. The map is oriented in the direction of travel or to the north.
- 3D map: the current vehicle position is shown on a three-dimensional map and is aligned to the direction of travel.
- Overview: the entire route from the vehicle position to the destination or the next stopover is displayed on the map. The map is oriented to the north.

Automatic zoom

- On: the map scale is adapted automatically depending on the type of road being traveled (expressway, highway, other roads) so that you always have an optimal overview of the road ahead. When route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- Intersection: when route guidance is active, the scale is adjusted automatically for a better detailed view when there are upcoming maneuvers.
- Off

MMI map contents/Map content: you can switch the display of additional information (such as POIs) on the map in the upper display on or off.

Voice guidance

Voice guidance: with the **Traffic** setting, the MMI will only give prompts if there are traffic incidents on your route.

Voice guidance during phone call

Entertainment fader during navigation: the audio playback volume is temporarily lowered when navigation prompts are active.

Route criteria

You can adjust which route criteria should be allowed or avoided for the route calculation.

HOV/carpool lanes

Highways

Toll roads

Ferries

e-tron route planner

www.carobook.com

This function can be switched on and off.

Prefer Electrify America charger station

When this function is switched on, the e-tron route planner will give preference to Electrify America charging stations.

Route information

When this function is switched on and route guidance is active, route information ⇒ page 206, fig. 139 is displayed. The next maneuver will be displayed at the bottom. POIs and traffic information will also be displayed. Press route information to display a preview of the next maneuver on the map. You can switch the following information on or off in route information.

- Points of interest along the route
- Traffic information along the route

Predictive route guidance

The predictive route guidance is switched off when the vehicle is delivered from the factory.

Your trips are recorded and destinations are suggested by the MMI when this function is switched on ⇒ page 207.

Presentation mode

In presentation mode, the system simulates driving on the display along the planned route without the vehicle actually moving. You can use **Specify starting point** when you would like to calculate a route starting from a location other than the current vehicle position, for example. **Simulating route guidance**: start route guidance and press presentation mode.



Tips

You can change the volume of navigation announcements while one is playing ⇒ page 29.

Radio

General information

Selecting the radio



Fig. 145 Upper display: FM station list



Fig. 146 Upper display: SiriusXM channel list

Depending on the vehicle equipment, the radio may support the FM and SiriusXM (satellite radio) frequency bands. Using the HD Radio receiver all so allows you to receive radio stations on the FM bands in digital format.

Depending on the vehicle equipment and the selected station list, the following information will be displayed:

(1) Station list

Shows the stations that are currently available. The station list updates automatically.

(2) Stations

For example, the station name may be displayed depending on availability.

(3) HD Radio technology

FM stations that can be received by digital radio are marked with the HD Radio technology symbol **H)**.

If reception quality declines, the radio will automatically switch to the analog FM station depending on availability.

Additional audio programs

Digital HD Radio stations may contain multiple additional audio programs. If you lose reception, the additional audio programs will be muted since they can no longer be received.

(5) Radio ID

Your radio ID and contact data for your satellite radio provider are displayed.

6 Channel number

7 % No reception

The station cannot be received.

In addition to the symbols for the usual frequency bands, the following information may also be available depending on vehicle equipment:

Symbol	Description
FM}	The station provides information in the background for an online station alternative. Online station tracking must be switched on for this ⇒ page 220.
[WEB]	The station is received through the Internet.
(1gr)	The system attempts to receive the station/podcast through the Internet.

Tips

- Contact the SiriusXM* provider if you would like to receive satellite programming.
- Buildings, tunnels, bridges, open areas, other vehicles or objects on the vehicle roof can affect reception.
- Satellite radio* is not available in all regions.

Adjusting the radio using the MMI

- Applies to: MMI: To set a frequency band, select on the home screen: RADIO > Source a category.
- ▶ Applies to: MMI: To set a station, select on the home screen: RADIO > Source > a category > a station/podcast*.
- ► To select a frequency, follow the instructions under ⇒ page 216, Free search.

Adjusting the radio using the multifunction steering wheel

Requirement: radio mode must be on.

- Select the radio/media tab in the instrument cluster.
- ➤ Press the 🗏 button to toggle between the radio and media or to select a different source.
- ► To select a station or a source, turn and press the left thumbwheel.



Applies to: multifunction steering wheel: Depending on the selected function, operation through the MMI may be required.

Radio functions

Overview

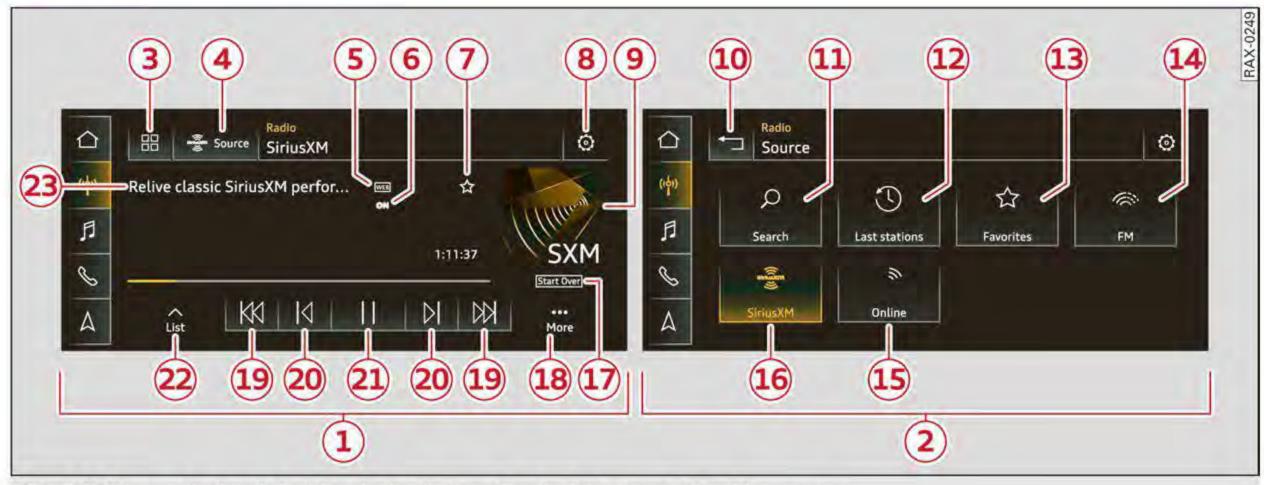


Fig. 147 Upper display: left side: playback view of radio functions, right side: sources

www.carobook.com

Operating

Applies to: MMI: To open the playback view ①, select on the home screen: RADIO > Source > a category > a station/podcast*.

► Applies to: MMI: To open the sources ②, select on the home screen: RADIO > Source.

The following functions may be available depending on the selected radio station/podcast* and the vehicle equipment:

	Symbol/Description	Description
3	88	Displaying categories in a frequency band.
4	Source	Displays sources in the Radio menu.
(5)	Frequency band	Shows the current station frequency band.
6	Indicates that on demand content is playing. The MMI must be nected to the Internet for this.	
7	☆/★	Presets ⇒ page 217
8	0	Settings ⇒ page 219.
9	Station logo	Depending on availability, you can switch between the image views: press on the station logo. Use one finger to swipe to the right or left to switch between the Station logo and Cover art (album cover). Also see \Rightarrow page 220, Online additional data .
10	•	Go back one level.
11	Search	See ⇒ page 216.
12	Last stations	See ⇒ page 216.

	Symbol/Description	Description	
13	Presets	See ⇒ page 217.	
14	FM	Displays stations from the FM frequency band.	
15	Online	See ⇒ page 218.	
16	SiriusXM	Displays stations from the SiriusXM frequency band. Combines SiriusXM Live channels and on demand content, depending on vehicle equipment.	
	Start Over	Go to the beginning of the broadcast.	
	Related	Channels, artists, and shows related to the content that is currently playing.	
0	Subscribe	Log in to be able to play the content.	
	Switch to WEB	Switch manually to Internet reception.	
	Switch to SAT	Switch manually to satellite reception.	
18	More	Access options for the current station ⇒ page 219.	
19		Selecting the previous or next track: press ★ or ►. Going to the beginning of the recording: press and hold ★. Going to the live program: press and hold ►. The we symbol will be displayed.	
20	M/M	Select the previous/next station.	
0	D/II	Start or stop playback	
20	(乙))/(>	Unmutes or mutes playback.	
22	List	The station list is displayed ⇒ page 214.	
23	Info section	Depending on availability, the station name as well as program information, for example, may be displayed. Also see ⇒ page 220, Online additional data.	

! Note

Read the information about Audi connect, and be sure to note the connectivity costs section

□ in General information on page 193.



Not all functions are available in every source and on every touch display.

Free search

Using intelligent search, you can search for station names, frequencies, program types (such as **News**), podcasts*, or online radio stations*.

Opening free text search

► Applies to: MMI: Select on the home screen: RADIO > Source > Search.

Entering search terms

You can enter multiple search terms at once in any order.

The following information may be available:

Symbol	Description
O	Results from the list: Last stations
\Diamond	Results from the list: Presets
((4))	Results from a Station list
For example,	Station frequency band

Last stations

You can listen to the last stations that were played in all frequency bands.

Accessing last stations

► Applies to: MMI: Select on the home screen: RADIO > Source > Last stations.

Listening to last stations

▶ Press on a station.

Deleting last stations

► Select: Select one or more stations or Select all > Delete > (Done).

Presets

You can store your favorite stations from every frequency band in the presets list.

Applies to: vehicles with SiriusXM: Channels, shows, and sports teams will be stored in the presets as Smart Favorites. After switching the ignition and the MMI on, the Smart Favorites store radio programs at a specific time.

Selecting presets using the MMI

► Applies to: MMI: Select on the home screen: RADIO > Source > Presets > a preset W. Carobo Bress W. Carobo

Storing presets

▶ Press on ☆ ⑦ in the playback view ⇒ page 215, fig. 147.

Requirement: a list with radio stations must be displayed ⇒ page 214, fig. 145.

- ► Press and hold an entry in the list until the Options menu appears.
- ► Press Store as preset.

Editing a preset

- ► Deleting presets: press ★ in the playback view, or
- ► In the presets list, select: A=> one or more stations or Select all > Delete > (Done).

Requirement: the presets list must be displayed.

- ► Moving a preset: press A=.
- ► Touch the

 symbol and move the entry to the desired position.
- ► Press Done.

Live Sports

Applies to: vehicles with SiriusXM

Using the Live Sports category, you can find live commentary about your favorite teams during a live sports broadcast. Depending on vehicle equipment, you may be able to switch commentary that favors a certain side on or off.

Accessing live games

► Applies to: MMI: Select on the home screen: RADIO > Source > SiriusXM > # > Sports > Live Sports > a game.

The score, the status of the game, and, if available, the current possession of the ball are displayed.

Saving/deleting a favorite team

▶ Press ☆/★.

Switching commentary on or off

Requirement: the MMI must be connected to the Internet.

Radio text

Program information (for example, general text messages, artist, composer, song) is displayed in the radio text.

Requirement: the selected radio station must support the radio text function.

Opening radio text

► Applies to: MMI: Select on the home screen: RADIO > select a frequency band (such as FM) > select a station > More > Radio text.

Depending on vehicle equipment, the following functions may be available:

Displaying previous radio text entries

Swipe downward with one finger. The last radio text entries are displayed if they are available.

Scrolling through radio text entries

Swipe upward or downward with one finger.

Showing Radio Text Plus information

If a radio text entry is displayed with a color, a phone number or a navigation destination for the station is available as radio text plus information.

You have the following options:

Selecting the destination

Select: a navigation destination marked in color > Set as destination.

Call

► Select: a phone number marked in color > Call.



Tips

A call to a phone number stored in the radio text will start immediately.

Online radio

General information

Applies to: vehicles with Audi connect Infotainment and online radio

You can listen to various radio stations or podcasts on the Internet using online radio. W. Carc

Requirement: the MMI must be connected to the Internet. A data plan must be available ⇒ page 197.

Accessing online radio through the MMI

► Applies to: MMI: Select on the home screen: RADIO > Source > Online.

The following functions are available:

Previous selection

The station/podcast list for the last station or podcast that was playing will be displayed.

Top stations

The favorite online radio stations are displayed.

Filter list

▶ Select: \mathcal{P}_{\equiv} > (a category) > a station/podcast.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

□ in General information on page 193.

(i)

Tips

- Depending on the Internet connection and network traffic, the connection may be lost when online radio is playing.
- Online radio reception may not be possible if Internet service is throttled.
- Online media usage depends on the service availability of the third party provider.
- The range and screen display of online media services from third party providers in the vehicle can vary.
- Please note that it may not be possible to play some online radio stations in certain countries.
- Audi only provides access to online radio and does not assume any responsibility for the content of these services.

Podcasts

Applies to: vehicles with Audi connect Infotainment and online radio

Opening podcasts using the MMI

▶ Applies to: MMI: Select on the home screen: RADIO > Source > Online > Podcasts.

The following functions are available:

Listening to a podcast

► Select: a podcast > a podcast episode.

Search

▶ Press P.

The following functions are available in the podcast playback view:

Displaying podcast episodes

▶ Press List.

Starting/stopping podcast playback

▶ Press ▷ / II.

Previous/next podcast

▶ Press ⋈ / ⋈.

Changing the playback position

► Move the slider into the desired position.

Displaying the online radio menu

► Press ##.

Switching to radio

▶ Press Source. The sources in the Radio menu are displayed.

Podcast favorites

You can store podcasts in the podcast favorites.

Requirement: the playback view for a podcast must be displayed.

▶ Press ☆ ⑦ ⇒ page 215, fig. 147.

Requirement: a list with podcasts must be displayed.

- ► Press and hold an entry in the list until the Options menu appears.
- ► Press Save podcast.

Listening to podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

► Select: a podcast > a podcast episode.

Browsing through podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

▶ Press (or).

Displaying all podcast favorites

Requirement: the podcast favorites list must be displayed. At least one podcast favorite must be stored.

► Press All.

Editing podcast favorites

► Deleting podcast favorites: press ★ in the playback view, or

▶ In the podcast favorites list, select: All > /=> one or more podcasts, or Select All > Delete > (Done).

Requirement: the podcast favorites list must be displayed.

- ► Moving podcast favorites: Select: All > A.
- ► Touch the

 symbol and move the entry to the desired position.
- ► Press Done.

Options and settings

Options

Requirement: the playback view \bigcirc page 215, fig. 147 must be displayed.

► Press More (18), or

Requirement: a list with radio stations or podcasts* must be displayed ⇒ page 214, fig. 145.

► Press and hold an entry in the list until the Options menu appears.

Depending on the selected source and vehicle WWW.Carobequipment, the following functions may be available.

- Store as favorite ⇒ page 217.
- Radio text ⇒ page 217.
- Save podcast ⇒ page 219, Podcast favorites.
- Save as a shortcut ⇒ page 22, Shortcuts.

Related content

Channels, artists, and shows related to the content that is currently playing.

Settings

► Applies to: MMI: Select on the home screen: RADIO > 1.

Depending on the vehicle equipment, the following settings may be available:

FM HD Radio

You can switch HD Radio reception on or off.

SiriusXM Tune Start

If you play a Smart Favorite when this function is switched on, the song currently playing on the channel will play from the beginning.

SiriusXM subscription status

The status of your license is displayed.

Call SiriusXM: the telephone number and radio ID of your satellite radio provider are displayed. To call your satellite radio provider using the MMI, press Call SiriusXM.

Online additional data

Requirement: the MMI must be connected to the Internet. A data plan must be available ⇒ page 197.

When the function is switched on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Online station tracking

Requirement: the MMI must be connected to the Internet. A data plan must be available ⇒ page 197. A station provides information in the background for its online station alternative and is identified with the ™ symbol.

During reception loss in the FM frequency band, the radio tuner can establish a data connection and switch to an online station alternative, if it is available. If available, you can receive your local radio stations in every region of your country online. This may result in additional costs ⇒ ①. The symbol indicates a station that is currently being received online.

- Automatic/Off: activates or deactivates automatic switching to online station alternatives.
- With request: switching to online station alternatives must be confirmed manually.

Preferred online radio data rate

Depending on the selected radio station, you may be able to adjust the data rate for Internet radio ⇒ page 218 and for the Online station tracking.

For optimal sound playback, press **High**. To reduce data usage, press **Low**.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

□ in General information on page 193.



Delays may occur when switching automatically between normal frequency bands and online radio.

Troubleshooting

The information that follows lists some troubleshooting options. They depend on the equipment.

Problem	Solution
A station is no longer displayed in the station list.	Store the station as a preset in advance. Access the presets using the presets list ⇒ page 217.
Online radio: no playback from online radio.	Check if a data plan has been purchased for the applicable country and it is available ⇒ page 197.

Media

General information

There may be different media sources and connections available depending on the vehicle equipment. For example, you can play media files using a connected USB drive or connect your mobile devices to the Audi music interface and operate them through the MMI.

Media and format restrictions: the MMI (including the USB storage device connection) was tested with a variety of products and media on the market. However, there may be cases where individual devices/media and media files may not be recognized, may play only with restrictions, or may not play at all.

Restricted functionality: reset the MMI to the factory default settings if functionality is restricted ⇒ page 234.

Digital Rights Management: please note that the media files are subject to copyright protection.

Files that are protected by DRM and are identified with the symbol 🗗 will not play.

Data security: never store important information on mobile devices. Audi is not responsible for damaged or lost files and media.

Loading times: the more files/folders/playlists there are on a storage medium, the longer it will take to load. To reduce the amount of time it takes the media files to load, use a storage medium that only contains media files, and create subfolders (for example, for each artist or album).

Additional information: when playing, audio files are automatically displayed with any additional information that is stored (such as the artist, track and album cover). If this information is not available on the medium, the MMI will revert to the local Gracenote metadata database or search online if necessary. See ⇒ page 227, Online additional data. However, in some cases, the additional information may not be displayed.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

□ in General information on page 193.

Bluetooth audio player

Applies to: vehicles with Bluetooth audio player

With the Bluetooth audio player, you can play music wirelessly through the MMI from your Bluetooth-capable mobile device (such as a cell phone).

Requirement: the vehicle must be stationary and the ignition must be switched on. The Bluetooth settings will open on your mobile device during the connection setup. The Bluetooth function and visibility of the MMI \Rightarrow page 234 and mobile device must be switched on.

Connecting a mobile device

- ► Applies to: MMI: Select on the home screen:

 MEDIA > Source > Connect external device >

 New connection. The available Bluetooth devi
 ces will be displayed after several seconds.
- Press on the desired mobile device in the list of displayed Bluetooth devices.
- ► To update the list, press 🔾.

A PIN for a secure Bluetooth connection will be generated.

► Confirm the PIN on your mobile device.

After connecting successfully, the mobile device will be displayed in the **Connected devices** menu as a Bluetooth audio player.

Playing media ⇒ page 224.



Tips

- Check for any connection requests on your Bluetooth device.
- Multiple Bluetooth audio players can be paired with the MMI, but only one at a time can be active as a Bluetooth audio player
 ⇒ page 235.
- The supported media functions (such as shuffle, list view, categories, search, options) depend on the Bluetooth device being used.

- Note the volume setting on your Bluetooth device. Audi recommends setting your mobile device to the maximum volume when using it as a Bluetooth audio player.
- A selection of supported Bluetooth devices can be found in the database for tested mobile devices at www.audi.com/bluetooth.

Online media

Applies to: vehicles with Audi connect Infotainment and online media

You can play and operate various online media services, such as music streaming services, using the MMI.

Requirement: a supported online media service must be available in the country where the vehicle is being operated. you must be logged in to your myAudi account in the vehicle.

Connect online media

- ► Connect the MMI to the Internet ⇒ page 193.
- ► Applies to: MMI: Select on the home screen:

 MEDIA > Source > Streaming services. All supported online services in your country will be a red displayed for the user that is logged in.
- ➤ Press on the desired online media service and follow the system instructions.

After successfully logging in, the online media service will be available as a media source.

Starting online media

► Applies to: MMI: Select on the home screen: MEDIA > Source > an online media source.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.



Note

- Read the information about Audi connect, and be sure to note the connectivity costs section

 □ in General information on page 193.
- There generally are additional costs when using an online media service account, especially when it is used internationally.



Tips

Depending on the Internet connection and network traffic, the connection may disconnected when online media sources are playing.

Amazon Alexa

Applies to: vehicles with Amazon Alexa Integration

You can play various Amazon Alexa content using the MMI. The voice recognition system is used to operate it.


Requirement: Amazon Alexa must be activated ⇒ page 27.

- Start Amazon Alexa using the voice recognition system.
- Applies to: MMI: Select on the home screen: MEDIA > Source > Alexa.



WARNING

Always follow the information found in $\Rightarrow \triangle$ in General information on page 193.

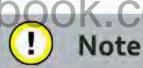

Read the information about Audi connect, and be sure to note the connectivity costs section

⇒ page 193.

Multimedia connections

USB adapter

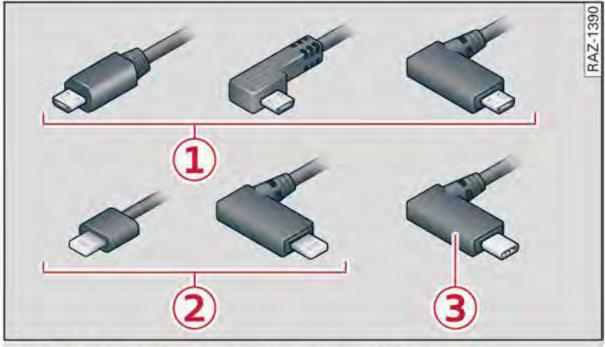


Fig. 148 Audi Genuine Accessories: USB adapter

You can connect your mobile devices through the Audi music interface to the MMI using the USB adapter and charge the battery at the same time.

You can purchase the USB adapter cable from an authorized Audi dealer or at specialty stores:

- USB adapter for devices with a micro USB connection
- USB adapter for Apple devices with a Lightning connection
- 3 USB adapter for devices with USB type C connection

! Note

Handle the USB adapter carefully. Do not allow it to be pinched.

(i)

Tips

Apple devices with a dock connector can only be charged using a USB adapter designed for devices with a dock connector. Data cannot be transmitted.

Audi music interface

Connect your mobile devices to the Audi music interface in order to operate them through the MMI and charge the batteries. WWW_Caro

The Audi music interface USB ports are located in the storage compartment under the front center armrest and are labeled with the symbol. If multiple USB devices are connected to the USB ports (for example, a smartphone and a USB flash drive), all of these devices can be used as the playback source.

Connecting or charging mobile devices using a USB adapter

Connect the matching USB adapter to the Audi music interface USB port and connect it to the mobile device, such as a smartphone.

The battery will charge automatically.

Mobile devices connected to the Audi music interface can be started and operated using the MMI ⇒ page 224.

Disconnecting a mobile device from the Audi music interface

Remove the USB adapter cable from the Audi music interface.

1

WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.

(!)

Note

- Pull the cable out of the Audi music interface carefully so that the USB ports are not damaged.
- Use a USB extension cable to connect devices that have an integrated USB connector (such as a USB stick) to reduce the risk of damage to your USB device and the Audi music interface.
- Extremely high or low temperatures that can occur inside vehicles can damage mobile devices and/or impair their performance.
 Never leave mobile devices in the vehicle in extremely high or low temperatures.

(i)

Tips

- Always follow the information found in ⇒ page 80.
- When you switch the ignition off, the USB ports are still supplied with power until the energy management intervenes.
- Do not use an additional adapter cable or USB extension cable to connect mobile devices to the Audi music interface that already have a cable or that must be connected with a USB adapter cable (⇒ page 222, fig. 148). Using an additional adapter or US extension cable may impair functionality.
- Functionality is not guaranteed for mobile devices that do not conform to the USB 2.0 specification.
- USB hubs are not supported.
- Video playback through the Audi music interface is not supported on Apple devices and MTP devices (such as smartphones).
- iPod touch or iPhone malfunctions also affect the operation of the MMI. Reset your mobile device in these situations.
- Audi recommends updating the iPod touch or iPhone software to the latest version.

Refer to your mobile device owner's manual for more information.

- The USB adapter on the Audi music interface will support iPod touch or iPhone devices from the 5th generation or newer with the lightning connector.
- A selection of supported devices can be found in the database for tested mobile devices at www.audi.com/mp3.

Playing media

Media sources

The following sources can be selected depending on the vehicle equipment:

- Alexa ⇒ page 222.
- USB device ⇒ page 223.
- Connect external device: you can connect external devices via Bluetooth and use the Bluetooth audio player ⇒ page 221, or you can connect an external device directly to the Audi music interface ⇒ page 223.
- Streaming services ⇒ page 222.

Accessing media

Playing media files using the MMI

- ▶ Applies to: MMI: Select on the home screen: MEDIA > Source > a source. Depending on the connected device or online media service*, the symbol for a source may change. The device name may be displayed (for example: my-Phone).
- ► Select a track from the categories in the media center ⇒ page 224.

Playing media files using the multifunction steering wheel

Requirement: a media source must contain media files ⇒ page 224.

- Select the radio/media tab in the instrument cluster.
- ▶ Press the is button to toggle between the radio and media or to select a different source.
- ► To select a media file/source, turn and press the left thumbwheel.

(i) Tips

ing.

- For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driv-
- Applies to: multifunction steering wheel:
 Depending on the selected function, operation through the MMI may be required.

Media center

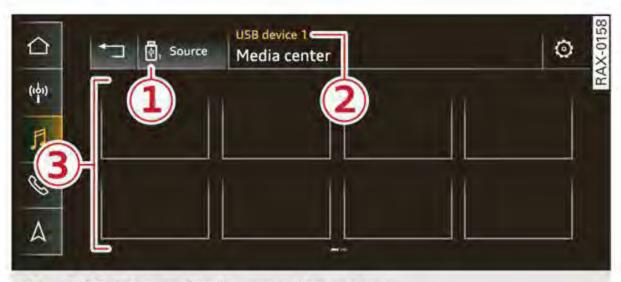


Fig. 149 Upper display: media center

There are various categories available in the media center. You can also search for media files
across sources. The current music track continues
playing while you search the MMI.

Opening the media center

▶ Applies to: MMI: Select on the home screen: MEDIA > Source > a source > a category.

1 Source symbol

The symbol for the source that is currently in use is displayed. Depending on the connected device or online media service*, the source symbol may change. As an example, a USB stick is shown connected to the Audi music interface.

2 Source device name

The device name of the source that is currently in use is displayed.

(3) Categories

The media center will display categories depending on vehicle equipment, the connected device, the content of the selected source, and the connection type:

- Last played tracks
- Artists
- Compilations

- Composers
- iTunes Radio
- Audio books
- Podcasts
- Genres
- Videos
- Tracks
- Albums

Other categories may be available depending on the service.

Playlists

All playlists and smart playlists in the source are displayed.

Smart playlists

- Last played tracks
- Most played tracks

Folders

The folder structure or track/chapter list is displayed.

 Read the information about Audi connect, and be sure to note the connectivity costs section

 □ in General information on page 193.

(i)

Tips

- Only the categories supported by the medium/service are available.
- For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driving.
- When synchronizing a mobile device with Cloud services, playlists may display incorrectly in the MMI. Use the media center in the device.
- Applies to: iPod touch/iPhone: Note the information about the Audi music interface and the supported devices ⇒ page 222.



Note

www.carobook.com

Applies to: vehicles with Audi connect Infotainment

 Cloud services and the iTunes radio category always require an Internet connection.

Media functions

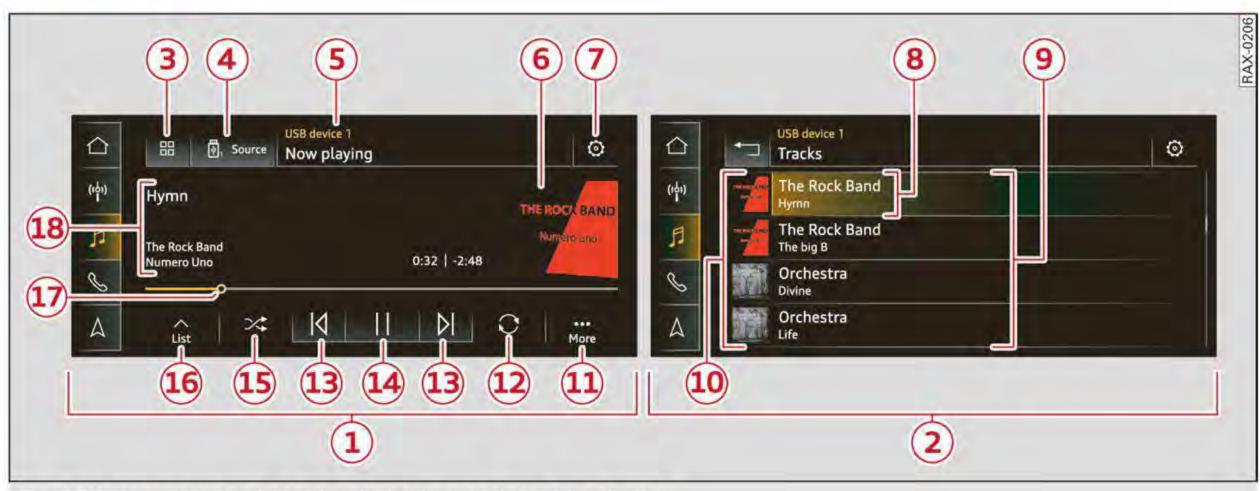


Fig. 150 Upper display: left side: playback view, right side: playlist

Operating

► Applies to: MMI: To open the playback view ①, select on the home screen: MEDIA > Source > a

source > a category (for example, **Artists** > Album) > a track.

► To open the playlist ②, select **List** in the playback view 16.

The following functions may be available depending on the selected media source and the vehicle equipment:

	Symbol/Description	Description	
3		The media center categories are displayed based on the active source ⇒ page 224.	
4	Source	Displays sources in the Media menu.	
(5)	Source/device name	device name of the source that is currently playing.	
6	Album cover in the play- back view	Requirement: a media source with album covers must be selected or the covers must be available online \Rightarrow page 227, Online additional data. Displays the current album cover. Display the playlist: press on the cover.	
7	0	Settings ⇒ page 227.	
8	Current track informa- tion	Display of Track and Artist . Highlights the track that is currently playing.	
9	List	Browsing in the list: drag your finger upward or downward.	
10	Album cover in the play- list	Requirement: a media source with album covers must be selected or the covers must be available online \Rightarrow page 227, Online additional data. Displays the current album cover.	
11	More	Opens options ⇒ page 227	
	€ Off	Switching between off/playlist/track: press 12.	
12	Playlist	The tracks in the current playlist will repeat continuously in a loop.	
	1 Track	The current track will repeat continuously in a loop.	
13	Selecting the previous/next track (or station/chapter): press Id		
14	D/II	Start or stop playback	
13	> \$	When this function is switched on, all files in the playlist will play in random order.	
16	List	The playlist ② is displayed.	
7	Playback position	The bar shows the current playback position in the track. Fast-forward or rewind: to fast forward or rewind within a track, move the bar to the right or left. Changing the playback position: press the desired playback position.	
(18)	Info section	Display of Track, Artist, and Album.	



Tips

Not all functions are available in every source and on every touch display.

Free text search

Applies to: vehicles with free text search

You can search across all active sources, for example for tracks and artists.

Opening the search

Requirement: the selected source must support the search function.

Applies to: MMI: Select on the home screen: MEDIA > Search.

Entries that contain the entered search term are listed in the results list. Each result is marked with the symbol for a category in the media center ⇒ page 224.

You can search for the following categories:

- Artists
- Albums
- Tracks
- Genres
- Videos

Aspect ratio

Audi recommends the **Auto** setting for the picture format. If you press on an aspect ratio, you will see a preview of the setting on the screen. Press **OK** to apply the selected aspect ratio.

The following table gives an overview of the aspect ratios. The possible aspect ratios depend on the source or video file being played.

	Aspect ra- tio	Description
ce must support	Auto	The MMI detects the picture for- mat of the source and displays the image in the optimal ratio.
d search term are sult is marked in the media cen-	4:3, 16:9	The image is fixed in the corresponding ratio. Select one of these options if the image is distorted or a section of the image is cut off or blurry when Auto is selected.
g categories:	Zoom	The image is enlarged to fill the entire display.
www.carob	Original	The image is displayed in the ratio of the source format. Select this option if the image is distorted or a section of the image is cut off or blurry when Auto is selected.

Options and settings

Options

Context-dependent functions and settings may be available depending on vehicle equipment, the selected source, the connected mobile device, and the connection type.

Requirement: the playback view must be displayed ① ⇒ page 225, fig. 150.

► Press More 11.

Play more like this

The track currently playing is quickly analyzed for features such as artist, genre, mood, and beat, and a smart playlist with similar tracks will be shown.

Settings

Accessing settings

► Applies to: MMI: Select on the home screen: MEDIA > ۞.

Depending on the vehicle equipment, the following settings may be available:

Online additional data

Requirement: the MMI must be connected to the Internet. A data plan must be available ⇒ page 197.

When the function is switched on, additional information (such as album cover, artist, track) will be loaded depending on the availability.

Supported media and file formats

Overview

Depending on the vehicle equipment, media files with the following properties may be supported by the connection for USB storage devices:

Audio/video files		
Supported media	Audi music interface: mobile devices ⇒ page 222 such as iPhones, MTP players, and USB storage devices in "USB Device Subclass 1 and 6" that conform to USB 2.0: USB sticks, USB MP3 players (Plug-and-Play capable), external USB flash drives, and hard drives	
File system	USB storage devices: exFAT, FAT, FAT32, NTFS. USB storage device partitions (primary/logical*): 2 per USB connection.	
Metadata	Album cover: GIF, JPG, PNG with max. 800x800 px. The album cover from the medium or from Gracenote* is displayed, depending on availability.	
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX	
Number of files	USB mass storage device: max. 50,000 files per medium; max. 1,000 files per playlist/folder	

Audio files		
Format	File/extension aropool	(.com
MPEG 1/2 Layer 3	.mp3	22011111
Windows Media Audio 9/10	.wma	Up to maximum 320 kbit/s 48 kHz sampling frequencies
MPEG 2/4	.m4a; .m4b; .aac	40 KHZ sampting frequencies
Opus	.opus; .ogg; .oga	
FLAC	.flac	
ALAC	.m4a	48 kHz sampling frequency
Monkey's Audio	.ape	

Video files		
Format	File extension	
MPEG 1/2	.mpg; .mpeg	
MPEG4 AVC (H.264)	.mp4; .m4v; .mov; .avi	a e var var
Windows Media Video 9	.wmv; .asf	up to maximum 15 Mbit/s and 1920x1080 px at maximum 30 fps
MPEG-H (H.265/HEVC)	.mp4; .mov	1320x 1000 px at maximum 30 ips
VP8/VP9	.webm	_4
Flash video	.flv; .f4v	



Tips

- The media sources do not support the Windows Media Audio 9 Voice format.
- For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time

- may differ for audio files with variable bit rate.
- Special characters (such as those in ID3 tag information) may display differently or may not always display, depending on the system language.
- The manufacturer of the storage device can provide information about its "USB Device Subclass".
- Some MTP player functions are not supported, such as rating music tracks and video playback.

Troubleshooting

The information that follows lists some troubleshooting options. They depend on the equipment.

Problem	Solution
Audi music interface/Bluetooth® audio player: the mobile device is not supported.	Read the instructions in the chapter ⇒ page 222, Multimedia connections/⇒ page 221, Bluetooth audio player.
Audi music interface: the mobile device is not recognized as a source.	For many mobile phones or mobile devices, playback is not possible when the battery level is too low (less than 5% charge level). The mobile device will only be recognized as a media source in the MMI after connecting if the battery charge level is sufficient.
Audi music interface: malfunctions during audio playback through an iPod touch/iPhone.	The Bluetooth® audio player function is switched on. Switch this function off ⇒ page 234 when you are not using the Bluetooth® audio player.
Audi music interface: audio play- back through the connected mo- bile device is not possible.	Make sure the USB mode MTP is selected in the settings on your mobile device.
Bluetooth® audio player: interference with track display and audio playback.	Playback interference can occur when using the Bluetooth® au- dio player if a music player app from a third party provider is open. Audi recommends using the integrated media player on your Bluetooth device (such as a smartphone).
Online media: no playback of on- line media.	Check if a data plan has been purchased for the applicable country and it is available ⇒ page 197.

Audi smartphone interface

Setup

Applies to: vehicles with Audi smartphone interface

You can connect your smartphone to the MMI with a cable or wirelessly* using the Audi smartphone interface. Certain content on your smartphone is adapted in the MMI while driving and can be operated through the MMI.

Connecting smartphones with a cable

Requirement: the vehicle must be stationary and the ignition must be switched on. An iPhone from the 6th generation or newer with lightning connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 5.0 Lollipop or newer installed.

► Connect your smartphone to the Audi music interface ⇒ page 223 using a USB adapter ⇒ page 222, fig. 148.

Connecting smartphones wirelessly WW.Cal

Applies to: vehicles with wireless Apple CarPlay/wireless Android Auto

Requirement: the vehicle must be stationary and the ignition must be switched on. An iPhone from the 6th generation or newer with lightning connection must have the latest operating system installed or a smartphone with Android Auto app must have Android 11 or newer installed.

- ► To connect your smartphone wirelessly, switch on the Bluetooth function and Wi-Fi on your smartphone.
- ► Applies to: wireless Apple CarPlay: Open the Apple CarPlay settings in your iPhone.
- Applies to: wireless Android Auto: Make sure that wireless Android Auto is allowed in the app settings in your smartphone.
- ► Enable the Bluetooth function and visibility on the MMI ⇒ page 234.
- ▶ Applies to: MMI: Select on the home screen: SETTINGS > Connected devices > Audi smartphone interface > New connection.
- ► In the MMI, press on your smartphone in the list of displayed devices.

► To update the list, press 🔾.

Establishing a wired/wireless* connection

- ► Follow the system instructions if necessary.
- ► Pay attention to any additional system prompts on your smartphone, if applicable.
- Applies to: MMI: If you declined use of Apple CarPlay or Android Auto the first time you connected your smartphone, then select on the home screen: SETTINGS > Connected devices > Audi smartphone interface > a smartphone.
- ► Follow the system instructions.



WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

193m



Tips

- The functions that can be used depend on the following factors, among others:
 - The brand of your smartphone
 - The version of the operating system in your smartphone
 - The software version of the app used
 - The USB adapter cable and correct connection
 - Your cell phone service provider
 - The customized settings on your smartphone
- One of the factors above or a combination of any of them could cause your smartphone to be incompatible with the Audi smartphone interface. Compatibility cannot be guaranteed for all types of smartphones. For more information and assistance, refer to the user guide and the manufacturer of your smartphone.
- Please note that you can only connect your smartphone via the front Audi music

- interface in order to use the Audi smartphone interface.
- Wireless Apple CarPlay*/wireless Android
 Auto* is not available in all countries.
- Wireless Apple CarPlay*/wireless Android
 Auto* was a function in development at the
 time this manual was printed. Wireless Ap ple CarPlay*/wireless Android Auto* may
 not be available in your vehicle.
- Wireless Apple CarPlay*/wireless Android Auto* is only possible in vehicles without a navigation system or without a detected vehicle position (GPS data) if the following requirement is met: the embedded SIM card for the vehicle must be logged into the mobile phone network ⇒ page 194.
- If the connected smartphone has voice control, you can operate your smartphone using

- the external voice recognition system ⇒ page 27.
- The MMI uses the menu language selected in your smartphone settings.
- Some MMI functions are not available when there is an active Audi smartphone interface connection.
- You cannot connect any mobile devices via Bluetooth when an Audi smartphone interface connection is active.
- Usage of the Audi smartphone interface depends on the availability of services through third party providers.
- Audi merely provides access to third party services through the MMI and does not assume any responsibility for the content of these services.

Troubleshooting

Applies to: vehicles with Audi smartphone interface

The information that follows lists some troubleshooting options. They depend on the equipment. WWW.Carobook.com

Problem	Solution	
Audi smartphone interface cannot be opened.	Check the battery charge level on your smartphone. Check the USB adapter and use a different one if necessary. Check if Android Auto or Apple CarPlay is available in the country where the vehicle is being operated.	
	Android Auto: check if the Android Auto app is installed on your smartphone.	
Connecting the smartphone to the MMI failed.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the Audi music interface ⇒ page 222.	
	Apple CarPlay: check if Apple CarPlay is activated on your iPhone.	
	Android Auto: check in the Android Auto app if Android Auto permits new vehicles.	

Audi smartphone interface

Problem	Solution
Wireless connection between the	Wireless Apple CarPlay: open the settings for Bluetooth and Apple CarPlay on your iPhone. Remove your vehicle.
smartphone and the MMI failed.	Wireless Android Auto: open the settings for Bluetooth on your smartphone. Remove your vehicle. Also remove your vehicle in the Android Auto app.
	Open the Connected devices menu ⇒ page 235. Delete your smartphone in the Telephone 1 and Audi smartphone interface menu items. Repeat the connection process. Restart the MMI ⇒ page 18. Restart your smartphone. Open the Wi-Fi settings in your smartphone. Check if your smartphone has connected to the 5 GHz vehicle Wi-Fi. Try connecting to the 5 GHz Wi-Fi manually.
The smartphone is not automatically detected.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the Audi music interface ⇒ page 222. Check if the requirements needed to connect a smartphone have been met.

www.carobook.com

Additional settings System settings

Introduction

General settings are described in this chapter. You can find specific settings in the chapters about those settings. The available settings depend on the vehicle equipment.

Date and time

► Applies to: MMI: Select on the home screen: SETTINGS > General > Date & time.

Possible settings:

- Automatically set date and time
- Date
- Time
- Date format
- Time format
- Automatic time zone
- Time zone

Measurement units

► Applies to: MMI: Select on the home screen: SETTINGS > General > Measurement units.

Possible settings:

- Speed
- Distance
- Temperature
- Volume
- Pressure
- Consumption (electric motor)

Language and keyboard

► Applies to MMI: Select on the home screen: SETTINGS > Language & keyboard.

Language

You can change the languages for the display, navigation announcements, and the voice recognition system.

Keyboard

See ⇒ page 23.

Sound

Requirement: an audio source must be active.

Applies to MMI: Select on the home screen: SETTINGS > Sound.

Possible settings:

- Treble
- Bass
- Balance/fader
- Speed dependent volume control
- Subwoofer
- Surround Level

Focus

You can optimize the sound distribution for various locations in the vehicle.

3D effect

You can adjust the intensity of the 3D effect. With the **Medium** setting, you will hear an optimal 3D effect for all sources.

Announcements and tones

► Applies to: MMI: Select on the home screen: SETTINGS > Announcements & tones.

Possible settings:

- Announcement volume
- Welcome sound

Λ

WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.



Tips

The volume is automatically adjusted to a preset level when the MMI is switched on.

Bluetooth

▶ Applies to MMI: Select on the home screen: SETTINGS > Connection settings > Bluetooth®

Bluetooth®

You can select a setting for visibility of the MMI to other Bluetooth devices. To connect a new Bluetooth device, the **Visible** setting must be selected. If **Invisible** is selected, a Bluetooth connection will only be possible with paired devices. If **Off** is selected, no Bluetooth device can be connected.

Bluetooth® audio player

When this function is switched on, the profile will load automatically when your Bluetooth audio player is within range.

Bluetooth® name

The MMI's Bluetooth name is displayed and can be changed.



Tips

The name of the Wi-Fi hotspot and the Blue Caro tooth name are automatically compared when there are changes.

Factory default settings

Requirement: the ignition must be switched on.

- ▶ Applies to MMI: Select on the home screen: SETTINGS > System maintenance > Restore factory settings.
- ► Follow the system instructions.

The settings will be reset. The system will restart. This may take some time.



Tips

Make sure that not only the settings were deleted but also the stored data, if applicable.

Software update

Introduction

Applies to: vehicles with software update

You can update your vehicle's software.

The functions depend on the country and vehicle equipment:

- Update through the online system update
 ⇒ page 234.
- Map material update for the navigation system
 ⇒ page 210.
- Have the software update performed by an authorized Audi dealer or authorized Audi Service Facility. This can result in additional costs.



WARNING

- Perform the installation only when the vehicle is stationary. Otherwise, this increases the risk of an accident
- If the installation fails, contact an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Online system update

Applies to: vehicles with online system update

With the online system update, you can update the software directly in the vehicle.

Requirement: the MMI must be connected to the Internet ⇒ page 193, Audi connect.

Downloading updates

Requirement: notification for an online system update will appear in the upper display.

- ▶ Press on the notification, or
- ▶ Open the notification in the notification center on ⇒ page 21 and press on the notification.
- ► Follow the system instructions.

You can also check manually if an update is available.

- ▶ Applies to: MMI: Select on the home screen: SETTINGS > System maintenance > Software update > Search for updates > desired update > Continue.
- ► Follow the system instructions.

The MMI will start the download. You can check the status of the download process in the notification center ⇒ page 21.

Installing updates

Requirement: an online system update must be downloaded and a notification must be shown in the upper display.

- ► Stop the vehicle safely.
- ▶ Press on the notification, or
- ▶ Open the notification in the notification center on ⇒ page 21 and press on the notification.
- ► Follow the system instructions.

Depending on the scope of the update, the online system update may only be started if you follow these instructions:

- ► Switch the emergency flashers off, if necessary
- ▶ Make sure that the starter battery is charged.
- ► To start the update, exit and lock the vehicle.

The MMI will start the installation. When the update has ended, a notification will be displayed.



WARNING

Depending on the scope of the installation, the ignition must not be switched on during the installation to ensure the installation completes successfully. WWW.Car



Note

Read the information about Audi connect, and be sure to note the connectivity costs section

□ in General information on page 193.



Tips

The software update may take some time.

Messages

Applies to: vehicles with online system update

The following messages may appear depending on the vehicle equipment:

Online system update: incomplete. Warning! Vehicle functions limited

If an error occurs when installing an online system update, certain functions such as the emergency call function may not be available. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Connected devices

Displayed connected devices

Requirement: the vehicle must be stationary and the ignition must be switched on.

► Applies to: MMI: Select on the home screen: SETTINGS > Connected devices.

Possible menu items:

- Telephone 1
- Telephone 2
- Audio player
- Wi-Fi hotspot
- Headset

Audi smartphone interface

You can connect your smartphone to the MMI ⇒ page 230.

myAudi app

This function is available if the myAudi app is installed on your mobile device and started, and if the mobile device is connected with the vehicle's Wi-Fi hotspot.



Note

Read the information about Audi connect, and be sure to note the connectivity costs section ⇒ page 193.

Managing connected devices

Requirement: the connected devices menu must be displayed ⇒ page 235.

Connecting a device

Requirement: Bluetooth visibility must be activated in the MMI ⇒ page 234 and mobile device.

- ▶ Press on a menu item, such as Telephone 1.
- ► To search for and connect your mobile device, press New connection ⇒ page 182.

Selecting a connected device

- ▶ Press on a menu item, such as Telephone 1.
- ▶ Press on the desired mobile device in the list of displayed devices. The connection will be made. ▶

Disconnecting a connected device

- ▶ Press on a menu item, such as Telephone 1.
- ▶ Press on the connected mobile device. The selected mobile device will be disconnected from the MMI.

Deleting a device

- ▶ Press on a menu item, such as Telephone 1.
- Press and hold an element until the Options menu is displayed.
- ► Press Delete.

If a device is listed multiple times, it will be deleted from all menu items.

Additional options

Depending on the selected function, additional options may be available.

Requirement: the connected devices menu must be displayed ⇒ page 235.

- ▶ Press on a menu item, such as Telephone 1.
- ► Press and hold an element until the **Options**menu is displayed.

 WWW.Carc

Bluetooth® profiles

You can switch desired profiles on or off separately in the MMI.

Favorite

To set a paired mobile device as the default phone, activate this function in the MMI.

When the mobile device is in range and the Bluetooth function on the mobile device and in the MMI is switched on, the default phone will be given priority over the other Bluetooth devices and will be connected directly to the MMI.

Legal information

General information

Information on the software licenses can be found online at www.audi.com/softwareinfo.

Multi Media Interface

► Applies to: MMI: Select on the home screen: **SETTINGS** > **General**.

Subscriptions

Version information

Legal notes

Possible options:

- Software information
- About Audi connect
- About the data memory

Audi smartphone interface

Applies to: vehicles with Audi smartphone interface

Requirement: a smartphone must be connected to the MMI \Rightarrow page 230.

- Applies to: MMI: Select on the home screen: SETTINGS > Connected devices > Audi smartphone interface.
- Press and hold an element until the Options menu is displayed.
 Press Legal notes.

Instrument cluster

Requirement: the vehicle must be stationary and the ignition must be switched on.

- ► Select in the instrument cluster: vehicle functions tab ⇒ page 12.
- ▶ Press and hold the 🗏 button on the multifunction steering wheel until the display appears.

Possible options:

- Motor code
- Software information
- Version information

Head-up display

Applies to: vehicles with head-up display

Requirement: the vehicle must be stationary and the ignition must be switched on. The head-up display is switched on. ► Applies to: MMI: Select on the home screen:

SETTINGS > Display & brightness > Head-up
display > Display contents > Show the license
text in the head-up display.

www.carobook.com

Checking and Filling

Front compartment

General information

Special care is required if you are working in the front compartment

For work in the front compartment, such as checking and filling fluids, there is a risk of injury, scalding, accidents, and burns. For this reason, follow all the warnings and general safety precautions provided in the following information. The front compartment of the vehicle is a potentially dangerous area. $\Rightarrow \land$

Explanation of warning symbols (sticker in the front compartment):



Observe all warnings - there is a risk for injury!



Hot components! Rotating parts!



Hot surfaces. The surfaces of individual components may become hot due to the heat generated during operation. Do not touch components - there is a risk of burns!



The radiator fan can switch on at any time!



High voltage! The voltage in the highvoltage system is high enough to cause fatal injuries. Touching a damaged highvoltage component can result in a fatal electric shock.



Hot coolant - there is a risk of scalding!



Always follow the instructions in the operating manual.

1

WARNING

- Switch the ignition off.
- Set the parking brake.
- Select the "P" (Park) selector lever position.
- Keep children away from the front compartment.
- Never spill operating fluids in the front compartment.

- Avoid short circuits in the electrical system.
- Never open the hood when there is steam or coolant escaping from the front compartment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.
- The cap on the coolant expansion tank may only be opened by an authorized Audi dealer or authorized Audi Service Facility.
- The cap of the coolant expansion tank for the high-voltage system is equipped with a seal that must never be removed under any circumstances ⇒ page 241. If the coolant expansion tank is not sealed, contact an authorized Audi dealer or authorized Audi Service Facility.
- The cap on the coolant expansion tank must never be opened when the coolant is hot.
 The cooling system is under pressure.
- To protect your face, hands, and arms from hot steam or coolant, cover the cap with a thick cloth when opening.
- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed only by an authorized Audi dealer or authorized Audi Service Facility.
- Limit your exposure to chemicals to as short a time as possible.

A

WARNING

The voltage in the high-voltage system is high enough to cause fatal injuries. Touching a damaged high-voltage component can result in a fatal electric shock. The components in the high-voltage system are marked with a warning label which warns of the high-voltage.

- The voltage level in the high-voltage system is still dangerous and potentially life-threatening when the ignition is switched off.
- Never perform work on orange high-voltage cables or on high-voltage components. Only authorized repair facilities that are certified may perform work on the high-voltage system.

Λ

WARNING

California Proposition 65 Warning:

- Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms.
 Wash hands after handling.



Note

When filling fluids, be sure not to add any fluids to the wrong reservoirs. Otherwise, severe malfunctions and damage will occur.



For the sake of the environment Caro

You should regularly check the ground under your vehicle in order to detect leaks quickly. If there are visible spots from oil or other fluids, bring your vehicle to an authorized Audi dealer or authorized Audi Service Facility to be checked.

Opening and closing the hood

The hood is released from inside the vehicle.



Fig. 151 Footwell: release lever



Fig. 152 Unlocked hood: lever

Observe the safety precautions \Rightarrow page 238, General information.

Make sure the wiper arms are not raised up from the windshield. Otherwise the paint could be damaged.

Opening the hood

- With the door open, pull the lever ≈ 1) below the instrument panel in the direction of the arrow ⇒ fig. 151.
- ► Lift the hood slightly ⇒ Λ.
- Press the lever ⇒ fig. 152 in the direction of the arrow. This releases the hooks.
- ▶ Open the hood.

Closing the hood

- Push the hood down until you override the force of the strut.
- ► Let hood fall lightly into the latch. Do not press it in. ⇒ ⚠.

Messages

The following messages may appear depending on the vehicle equipment:

Warning! Hood is not locked. Stop vehicle and check the lock

The hood latch is not locked correctly. Stop immediately and close the hood.



WARNING

 Never open the hood when there is steam or coolant escaping from the front compartment, because there is a risk that you could

¹⁾ The ≈ symbol is not available in all countries.

- be burned. Wait until no steam or coolant is escaping.
- For safety reasons, the hood must always be latched securely while driving. Because of this, always check the hood after closing it to make sure it is latched correctly. If the
- front corners of the hood cannot be lifted, then the lid is latched correctly.
- If you notice that the hood is not latched while you are driving, stop immediately and close it, because driving when the hood is not latched increases the risk of an accident.

Front compartment overview

The most important check points.

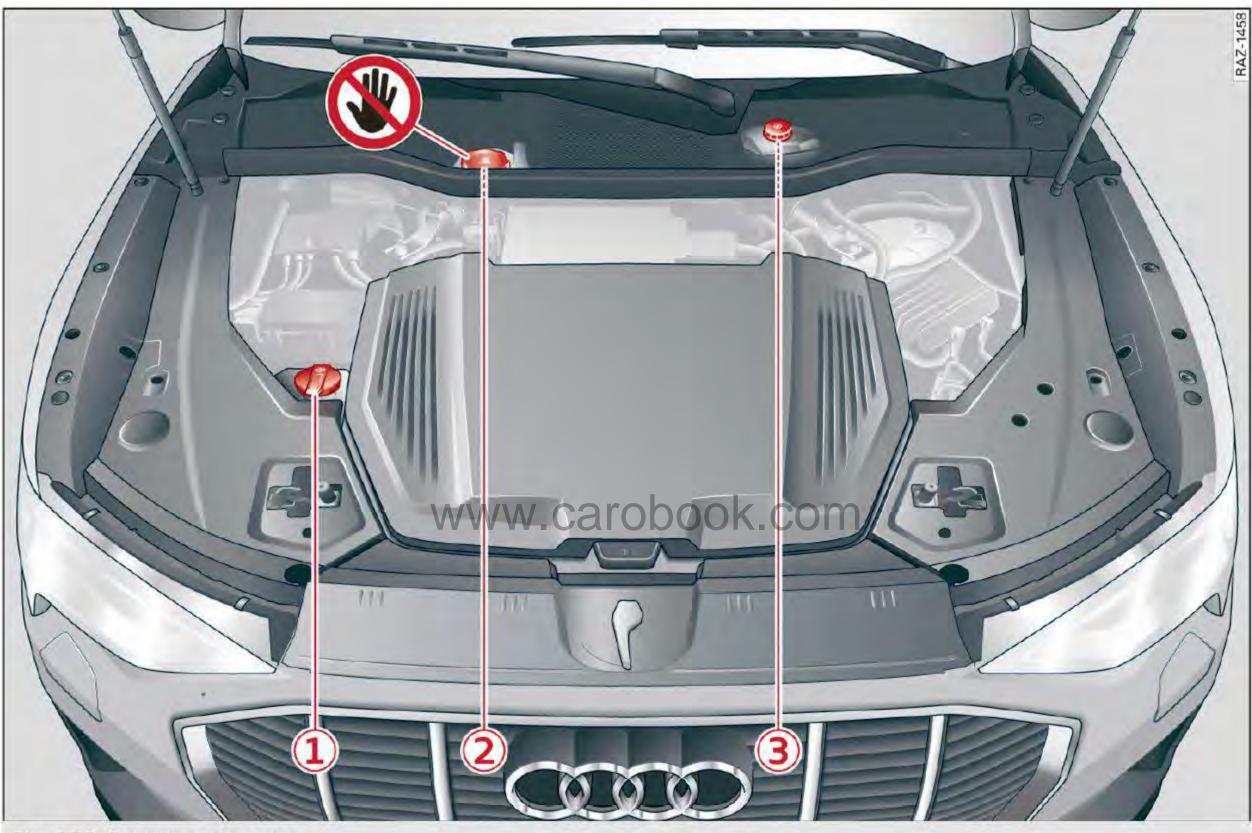


Fig. 153 Overview: diagram

Observe the safety precautions \Rightarrow page 238, General information.

- Washer fluid reservoir (♣) ⇒ page 245
- ② Coolant expansion tank (⚠) under a cover ⇒ page 241
- ③ Brake fluid reservoir (◎) under a cover ⇒ page 242

Cooling system

Coolant

Observe the safety precautions \Rightarrow page 238, General information.

The cooling system is filled with a mixture of purified water and coolant additive at the factory.

This coolant must not be not changed.

The coolant level is monitored using the **!** indicator light. However, you should occasionally check the coolant level.

Messages

The following messages may appear depending on the vehicle equipment:

Turn off engine and check coolant level. See owner's manual

The coolant level is too low.

Do not continue driving and switch the ignition off. Add coolant. The vehicle must not be towed. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Electric drive: malfunction! Cooling system. Please contact Service

There is a malfunction in the cooling system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.



Note

Before winter weather begins, have an authorized Audi dealer or authorized Audi Service Facility check if the coolant additive in your vehicle matches the percentage appropriate for the climate. This is especially important when driving in colder climates.

Coolant level

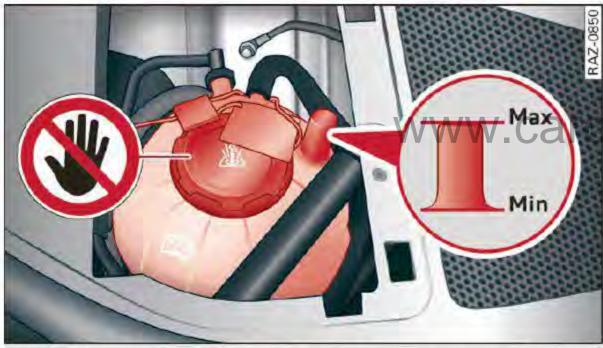


Fig. 154 Front compartment: coolant expansion tank

Observe the safety precautions \Rightarrow page 238, General information.

Checking the coolant level

- ► Park the vehicle on a level surface.
- ► Switch the ignition off.
- ▶ Open the hood ⇒ page 239.

The coolant expansion tank is located in the plenum chamber under a cover. Slide the cover that is located below the windshield wipers on the front passenger's side toward the windshield and remove the cover ⇒ page 240, fig. 153.

▶ Read the coolant level on the floating gauge for the expansion tank without opening the cap. The coolant level must be between the Min and Max markings when the coolant is cold ⇒ fig. 154

- ► If turns on, do not continue driving ⇒ page 240.
- ▶ If the coolant level is just over the Min marking, drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

Coolant loss usually indicates that there is a leak. Immediately drive your vehicle to an authorized Audi dealer or authorized Audi Service Facility and have the cooling system inspected.

Λ

WARNING

- The front compartment in any vehicle is a potentially dangerous area. Before performing work in the front compartment, switch the ignition off and allow the cooling system to cool down. Always follow the information found in ⇒ page 238, General information.
- Never open the hood if you can see or hear steam or coolant escaping from the front compartment, because there is a risk that you could be burned. The cooling system is under pressure. When you no longer see or hear steam or coolant escaping, you may open the motor compartment with caution.
- The coolant expansion tank may only be opened and filled by an authorized Audi dealer or authorized Audi Service Facility.
- The cap of the coolant expansion tank for the high-voltage system is equipped with a seal that must never be removed under any circumstances ⇒ page 241. If the coolant expansion tank is not sealed, contact an authorized Audi dealer or authorized Audi Service Facility.
- When adding coolant, it may leak into the inside of high-voltage components and cause a short circuit, increasing the risk of fire.
- Coolant additive and coolant can be dangerous to your health. For this reason, store the coolant in the original container and away from children. There is a risk of poisoning.

Brake fluid

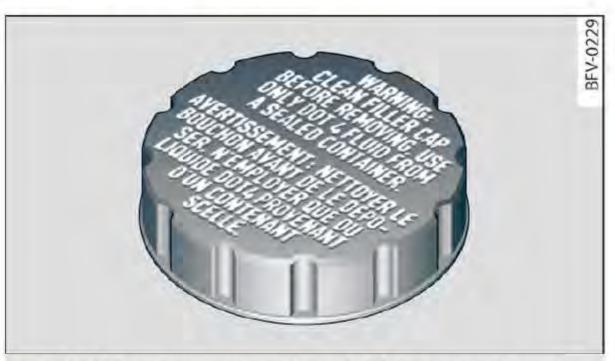


Fig. 155 Front compartment: brake fluid reservoir cover

Observe the safety precautions ⇒ page 238, General information.

Checking the brake fluid level

- ▶ Park the vehicle on a level surface.
- ► Slide the cover that is located below the windshield wipers on the driver's side toward the windshield and remove the cover.
- ► Read the brake fluid level on the brake fluid reservoir ⇒ page 240, fig. 153. The brake fluid level must be between the MIN and MAX markings ⇒ ⚠. WWW.Caroot

The brake fluid level is monitored automatically.

Messages

The following messages may appear depending on the vehicle equipment:

BRAKE / Brakes: stop vehicle and check brake fluid level

Stop the vehicle and check the brake fluid level. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Changing the brake fluid

Brake fluid should be changed at regular intervals. Have the brake fluid changed by an authorized Audi dealer or authorized Audi Service Facility. The authorized Audi dealer or authorized Audi Service Facility will inform you of the replacement intervals.

Λ

WARNING

 If the brake fluid level is below the MIN marking, it can impair the braking effect and

- driving safety, which increase the risk of an accident. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- If the brake fluid is old, bubbles may form in the brake system during heavy braking. This could impair braking performance and driving safety, which increases the risk of an accident.
- The brake fluid in your vehicle must meet the standard VW 501 14 and is available at an authorized Audi dealer or authorized Audi Service Facility. If this brake fluid is not available, another high-grade brake fluid of equivalent quality may be used, and it must meet the U.S. Federal Motor Vehicle Standard (FMVSS) 116 DOT 4, Class 6.



Note

- If the brake fluid level is above the MAX marking, brake fluid may leak out over the edge of the reservoir and result in damage to the vehicle.
- contact with the vehicle paint, because it will corrode the paint.

Electrical system

The following messages may appear depending on the vehicle equipment:

If the / or indicator light turns on, there is a malfunction in the power supply, the battery, or the vehicle electrical system.

/ Electrical system: malfunction! Safely stop vehicle

Do not continue driving and switch the ignition off ⇔ ⚠. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Electrical system: malfunction! Restart not possible. Please contact Service

If you switch the ignition off, you will not be able to restart the vehicle. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

Electrical system: malfunction! Please contact Service

Switch off all electrical equipment that is not needed. If necessary, some equipment will be switched off automatically. Vehicle functions or driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

Electrical system: low battery charge. Battery will be charged while driving

- If this message turns off after a little while, the vehicle battery has been charged enough by the high-voltage battery while driving.
- If the message does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Λ

WARNING

When there is an electrical system malfunction, vehicle functions may not work and driving stability may be limited, which increases the risk of an accident. Do not continue driving and switch the ignition off. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Battery

Battery general information

Batteries with different technologies are installed in your vehicle:

- 12 volt vehicle battery (for example, for basic power supply) ⇒ page 244, Safety precautions
- High-voltage battery (for example, for electric drive system, climate control) ⇒ page 112, Introduction

Not running the vehicle for long periods of time

If the vehicle is left parked for long periods of time, the 12 volt vehicle battery will drain gradually. To ensure that the vehicle can still be started, the electrical equipment will be limited or switched off. Some convenience functions, such as interior lighting or power seat adjustment, may not be available under certain circumstances. The convenience functions will be available again when you establish drive ready mode.

Even when electrical equipment is switched off, the equipment can still drain the 12 Volt vehicle battery if the vehicle is not driven for long periods of time. Deep draining results in a chemical reaction that destroys the inside of the battery. To reduce the risk of this, the battery must be charged monthly by an authorized Audi dealer or authorized Audi Service Facility \Rightarrow page 245. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Winter operation

Cold weather places an especially high load on the 12 volt vehicle battery. Have the battery checked by an authorized Audi dealer or authorized Audi Service Facility before cold weather begins.

Replacing the battery

Applies to: 12 volt vehicle battery

All work on the battery must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

The 12 volt vehicle battery was developed based on the installation location and is equipped with safety features. If a 12 volt vehicle battery must be replaced, ask your authorized Audi dealer or authorized Audi Service Facility about the electromagnetic compatibility, size, and the necessary maintenance, power, and safety standards for the new 12 volt vehicle battery. The battery vent of the 12 volt vehicle battery must always be on the negative terminal side. The battery vent on the positive terminal side must always be closed.

Λ

WARNING

- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed only by an authorized Audi dealer or authorized Audi Service Facility.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because and adaptation must be performed on the vehicle electrical system when the battery is replaced. Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly. Otherwise, there could be a loss of safety-related functions among other things, which increases the risk of an accident.



WARNING

California Proposition 65 Warning:

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California Contains to cause cancer and reproductive harms.
 Wash hands after handling.



Note

- If the vehicle will be parked for long periods of time, protect the 12 Volt vehicle battery against the cold so that it will not "freeze" and become damaged. Have the battery charged by an authorized Audi dealer or authorized Audi Service Facility ⇒ page 245, Charging the 12 volt vehicle battery.
- Always have an authorized Audi dealer or authorized Audi Service Facility replace the 12 volt vehicle battery, because and adaptation must be performed on the vehicle electrical system when the battery is replaced.
 Only an authorized Audi dealer or authorized Audi Service Facility has the necessary technology to perform the adaption correctly.
- Using unsuitable batteries may void the vehicle's operating license.

(4)

For the sake of the environment

Batteries must be disposed of using methods that will not harm the environment. Do not dispose of them in household trash. They contain harmful substances and recyclable raw materials. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Safety precautions

Explanation of warning symbols:



Observe all warnings - there is a risk for injury!



Always follow the instructions in the operating manual.



High voltage! The voltage in the high-voltage system is high enough to cause fatal injuries. Touching a damaged high-voltage component can result in a fatal electric shock.





Electrolyte fluid is highly corrosive. Always wear protective gloves and eye protection. First aid: if electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately. Immediately neutralize electrolyte fluid on the skin or clothing using a soap solution and rinse with plenty of water. If electrolyte fluid is accidentally ingested, seek medical attention immediately.



Always wear eye protection.



If electrolyte fluid enters the eyes, immediately flush with clean water for several minutes. Seek medical attention immediately.



Fire, sparks, open flame, and smoking are prohibited. Avoid creation of sparks and short circuits when handling cables and electrical devices.



The high-voltage battery is flammable.

The high-voltage battery must never be exposed to fire, sparks, or open flame. Always handle the high-voltage battery with care to reduce the risk of damage and leaking fluids.



Always keep children away from battery electrolyte fluid and the battery.



Applies to: high-voltage battery: Handling the high-voltage battery incorrectly can lead to serious injuries or death. Never remove the cover from the high-voltage battery and never disassemble the high-voltage battery.





Applies to: high-voltage battery: Handling the high-voltage battery incorrectly can lead to serious injuries or death. The high-voltage battery must only be serviced by qualified and trained technicians. Never make modifications to the high-voltage battery. If the high-voltage battery is open, it must not come into contact with water or other liquids. Liquids may cause short circuits, electric shocks and burns.

Have the high-voltage battery replaced only by an authorized Audi dealer or authorized Audi Service Facility. Audi recommends an authorized Audi dealer or authorized Audi Service Facility, because these locations have trained personnel and the required parts and tools.



A highly explosive mixture of gases can form when charging batteries.



WARNING

All work on the batteries must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

- Gases that escape from these batteries can be poisonous or flammable.
- The contents of these batteries can be corrosive. If any battery contents come into contact with the skin, flush the affected area for at least 15 minutes with clean water. Then wash the affected area with soap. Have the

affected area examined by a medical professional.

Charging the 12 volt vehicle battery

The vehicle cannot be operated when the 12 volt vehicle battery is drained. The vehicle battery must not be charged under any circumstances. Contact an authorized Audi dealer or authorized Audi Service Facility.



Note

arraina of the vehic

The charging of the vehicle battery requires specialized knowledge and technology.

- The vehicle battery may only be charged by an authorized Audi dealer or authorized Audi Service Facility. Otherwise, the electronic systems in the vehicle may be severely damaged.
- The jump start pins in the front compartment are designed only for use by qualified technicians.

Windshield washer system



Fig. 156 Front compartment: washer fluid reservoir cover

Observe the safety precautions \Rightarrow page 238, General information.

The windshield washer reservoir \Leftrightarrow contains the cleaning solution for the windshield/rear window and the headlight washer system* \Rightarrow fig. 156, \Rightarrow page 240. The reservoir capacity can be found in \Rightarrow page 299.

To reduce the risk of lime scale deposits on the spray nozzles, use clean water with low amounts of calcium. Always add window cleaner to the

Checking and Filling

water. When the outside temperatures are cold, an anti-freezing agent should be added to the water so that it does not freeze.

Messages

The following messages may appear depending on the vehicle equipment:

Please add washer fluid

Fill the washer fluid for the windshield washer system and the headlight washer system* when the ignition is switched off.

! Note

- The concentration of anti-freezing agent must be adjusted to the vehicle operating conditions and the climate. A concentration that is too high can lead to vehicle damage.
- Never add radiator anti-freeze or other additives to the washer fluid.
- Do not use a glass cleaner that contains paint solvents, because this could damage the paint.

Λ

WARNING

Inadequate service, a lack of service, or failing to adhere to the service intervals can result in the vehicle breaking down in traffic, accidents, and serious injuries.

1

Note

- Regular service work on the vehicle is not only beneficial for the sustainable use and retention of the vehicle value, but also for the operational and traffic safety. For this reason, always have service work performed according to the Audi guidelines.
- Even if the mileage on the vehicle is low, do not exceed the time for the next service.
- Audi is not responsible for damage to the vehicle that occurred due to inadequate service or insufficient part availability.

Service interval display carobook.com

The service interval display detects when your vehicle is due for service.

The service interval display works in two stages:

- Inspection reminder: after driving a certain distance, a message appears in the instrument cluster display each time the ignition is switched on or off.
- Inspection due: if your vehicle has reached an inspection interval, the message Inspection due! appears briefly after the ignition is switched on and off.

Checking service intervals

Applies to MMI: Select on the home screen: VEHI-CLE > Settings & Service > Service intervals

Resetting the indicator

An authorized Audi dealer or authorized Audi Service Facility will reset the service interval display after performing service.

Wheels

Wheels and Tires

General information

- ► Check your tires regularly for damage, such as punctures, cuts, cracks, and bulges. Remove foreign objects from the tire tread.
- ▶If driving over curbs or similar obstacles, drive slowly and approach the curb at an angle.
- ► Have faulty tires or rims replaced immediately.
- ► Protect your tires from oil, grease, and fuel.
- Mark tires before removing www.cal them so that the same running direction can be maintained if they are reinstalled.
- Lay tires flat when storing and store them in a cool, dry location with as little exposure to light as possible.

\triangle

WARNING

-Never drive faster than the maximum permitted speed for your tires. This could cause the tires to heat up too much. This increases the risk of an accident because it can cause the tire to burst. –Always adapt your driving to the road and traffic conditions. Drive carefully and reduce your speed on icy or slippery roads. Even winter tires can lose traction on black ice.

1

Note

- -Please note that summer and winter tires are designed for the conditions that are typical in those seasons. Audi recommends winter tires during the winter months. Low temperatures significantly decrease the elasticity of summer tires, which affects traction and braking ability. If summer tires are used in very cold temperatures, cracks can form on the tread bars, resulting in permanent tire damage that can cause loud driving noise and unbalanced tires.
- -Burnished, polished or chromed rims must not be used in winter driving conditions. The surface of the rims does not have sufficient corrosion protection for this and could be permanently damaged by road salt or similar substances.

Tire designations

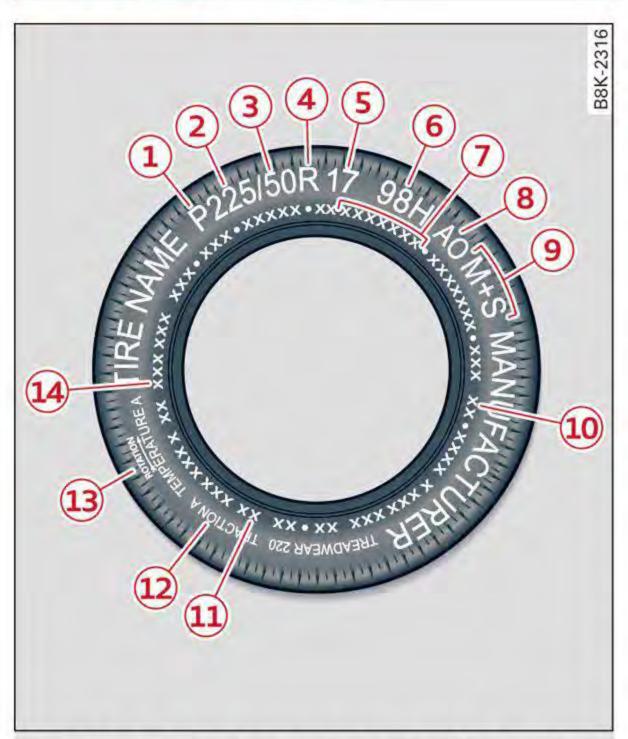


Fig. 157 Tire designations on the sidewall

Tires for passenger wehicles (if applicable)

"P" indicates a tire for a passenger vehicle. "T" indicates a tire designated for temporary use.

(2) Nominal width

Nominal width of the tire between the sidewalls in millimeters. In general: the larger the number, the wider the tire.

(3) Aspect ratio

Height/width ratio expressed as a percentage.

4 Tire construction

"R" indicates a radial tire.

(5) Rim diameter

Size of the rim diameter in inches.

6 Load index and speed rating

The load index indicates the tire's load-carrying capacity.

The speed rating indicates the maximum permitted speed. Also see ⇒ ∧ in General information on page 247.

"EXTRA LOAD", "xl" or "RF" indicates that the tire is reinforced or is an Extra Load tire.

Speed rat-	Maximum permitted speed
Р	up to 93 mph (150 km/h)
Q	up to 99 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 110 mph (180 km/h)
Ţ	up to 118 mph (190 km/h)
U	up to 124 mph (200 km/h)
Н	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)a)
Z	above 149 mph (240 km/h)a)
W	up to 168 mph (270 km/h)a)
Υ	up to 186 mph (300 km/h)a)

a) For tires above 149 mph (240 km/h), tire manufacturers sometimes use the code "ZR".

7 US DOT number (TIN) and manufacture date

The manufacture date is listed on the tire sidewall (it may only appear on the inner side of the tire):

DOT ... 2221 ...

means, for example, that the tire was produced in the 22nd week of the year 2021.

8 Audi Original Tires

Audi Original equipment tires with the designation "AO" have been specially matched to your Audi. When used correctly, these tires meet the highest standards for safety and handling Wantara Tobo thorized Audi dealer or authorized Audi Service Facility will be able to provide you with more information.

Mud and snow capability

"M/S" or "M+S" indicates the tire is suitable for driving on mud and snow.
indicates a winter tire.

(10) Composition of the tire cord and materials

The number of plies indicates the number of rubberized fabric layers in the tire. In general: the more layers, the more weight a tire can carry. Tire manufacturers

must also specify the materials used in the tire. These include steel, nylon, polyester and other materials.

11 Maximum permitted load

This number indicates the maximum load in kilograms and pounds that the tire can carry.

12 Uniform tire quality grade standards for treadwear, traction and temperature resistance

Treadwear, traction, and temperature ranges ⇒ page 264.

(13) Running direction

The arrows indicate the running direction of unidirectional tires. You must always follow the specified running direction

\$\Rightarrow\$ page 281.

14 Maximum permitted inflation pressure

This number indicates the maximum pressure to which a tire can be inflated under normal operating conditions.

Glossary of tire and loading terminology

Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Aspect ratio

means the ratio of the height to the width of the tire in percent.caro Numbers of 55 or lower indicate a low sidewall for improved steering response and better overall handling on dry pavement.

Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Bead separation

means a breakdown of the bond between components in the bead.

Cord

means the strands forming the plies in the tire.

Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment.

Extra load tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as "XL", "xl", "EXTRA LOAD", or "RF" on the sidewall.

Gross Axle Weight Rating ("GAWR")

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

Gross Vehicle Weight Rating ("GVWR")

means the maximum total loaded weight of the vehicle.

Groove

means the space between two adjacent tread ribs.

Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum loaded vehicle weight

means the sum of:

- (a) Curb weight
- (b) Accessory weight
- (c) Vehicle capacity weight, and
- (d) Production options weight

Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called "maximum inflation pressure."

Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

Occupant distribution

means distribution of occupants in a vehicle.

Outer diameter

means the overall diameter of an inflated new tire.

Overall width

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

Ply

means a layer of rubber-coated parallel cords.

Production options weight

means the combined weight of those installed regular production options weighing over 5 lbs.

(2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

Radial ply tire

means a pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure

see ⇒ page 250, Cold tire inflation pressure.

Reinforced tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as "XL", "xl", "EXTRA LOAD", or "RF" on the sidewall.

Rim

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Rim diameter

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

Rim size designation

means rim diameter and width.

Rim width

means nominal distance between rim flanges

Sidewall

means that portion of a tire between the tread and bead.

Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇒ table on page 248. You may not find this information on all tires because it is not required by law.

The speed rating letter code, where applicable, is molded on the tire sidewall and indicates the >

maximum permissible road speeds. See also ⇒ ∧ in General information on page 247.

Tire pressure monitoring system

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning telltale.

Tread

means that portion of a tire that comes into contact with the road.

Tread separation

means pulling away of the tread WWW.Car from the tire carcass.

Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇒ page 256, Treadwear indicator for more information on measuring tire wear.

Uniform Tire Quality Grading

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative com-

parisons among tires. The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles (kilometers) or perform in a certain way. It simply gives tire buyers additional information to combine with other considerations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the tire manufacturers in three areas: treadwear, traction, and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

U.S. DOT Tire Identification Number (TIN)

This is the tire's "serial number". It begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

DOT ... 2221 ...

means that the tire was produced in the 22nd week of 2021. The other numbers are marketing codes that may or may not be used by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

Vehicle capacity weight

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle's designated seating capacity.

Vehicle maximum load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

Vehicle normal load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with \Rightarrow table on page 259) and dividing by two.

Occupant loading and distribution for vehicle normal load for various designated seating capacities

Refer to the tire inflation pressure label ⇒ page 257, fig. 160

for the number of seating positions. Refer to the table ⇒ table on page 259 for the number of people that correspond to the vehicle normal load.

New tires or wheels

Audi recommends having all work on tires or wheels performed by an authorized Audi dealer or authorized Audi Service Facility.

These facilities have the proper knowledge and are equipped with the required tools and replacement parts.

- New tires do not yet have the optimal gripping properties.

 Drive carefully and at moderate speeds for the first 350 miles (500 km) with new tires.
- ►Only use tires with the same design, size (rolling circumference), and as close to the same tread pattern as possible on all four wheels.
- ► Do not replace tires individually. At least replace both tires on the same axle at the same time.
- ► Audi recommends using Audi Genuine Tires. If you would like to use different tires, please note that the tires may perform ►

- differently even if they are the same size $\Rightarrow \land$.
- ▶If you would like to equip your vehicle with a tire and rim combination that is different from what was installed at the factory, consult with an authorized Audi dealer or authorized Audi Service Facility before making a purchase ⇔ ⚠.

Because the spare tire* is different from the regular tires installed on the vehicle (such as winter tires or wide tires), only use the spare tire* temporarily in case of emergency and drive carefully while it is in use. It should be re-robout placed with a regular tire as soon as possible.

All four wheels must be equipped with tires that are the same brand and have the same construction and tread pattern so that the drive system is not damaged by different tire speeds. For this reason, in case of emergency, only use a spare tire* that is the same circumference as the regular tires.

Λ

WARNING

Do not use steel rims that are
 17 inches or larger. Otherwise,

- damage to the vehicle and an accident could result.
- -Only use tire/rim combinations and suitable wheel bolts that have been approved by Audi. Otherwise, damage to the vehicle and an accident could result.
- -For technical reasons, it is not possible to use tires from other vehicles. In some cases, you cannot even use tires from the same vehicle model.
- -Make sure that the tires you select have enough clearance to the vehicle. Replacement tires should not be chosen simply based on the nominal size, because tires with a different construction can differ greatly even if they are the same size. If there is not enough clearance, the tires or the vehicle can be damaged and this can reduce driving safety and increase the risk of an accident.
- -Only use tires that are more than six years old when absolutely necessary and drive carefully when doing so.
- –Do not use run-flat tires on your vehicle. Using them when

- not permitted can lead to vehicle damage or accidents.
- -If you install wheel covers on the vehicle, make sure they allow enough air circulation to cool the brake system. If they do not, this could increase the risk of an accident.
- -Mounting a tire on the rim incorrectly can result in tire damage or failure. To reduce the risk of an accident, only trained personnel may mount a tire on the rim.

Tire wear and damage

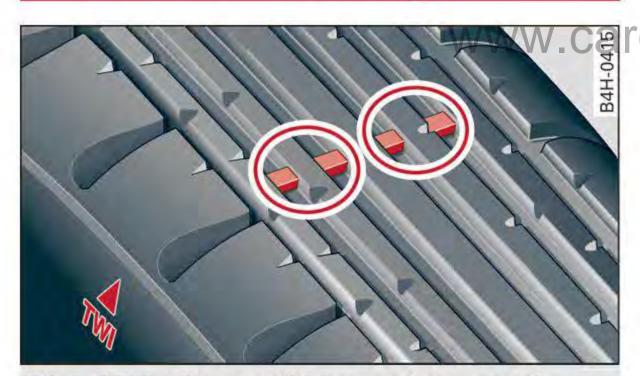


Fig. 158 Tire profile: treadwear indicator

Tire wear

Check the tires regularly for wear.

- –Inflation pressure that is too low or high can increase tire wear considerably.
- Driving quickly through curves, rapid acceleration, and heavy braking increase tire wear.
- –Have an authorized Audi dealer or authorized Audi Service Facility check the wheel alignment if there is unusual wear.
- Have the wheels rebalanced if an imbalance is causing noticeable vibration in the steering wheel.
 If you do not, the tires and other vehicle components could wear more quickly.

Treadwear indicator

Original equipment tires contain treadwear indicators in the tread pattern, which are bars that are 1/16 inch (1.6 mm) high and are spaced evenly around the tire perpendicular to the running direction \Rightarrow fig. 158. The letters "TWI" or triangles on the tire sidewall indicate the location of the treadwear indicators.

The tires have reached the minimum tread depth ¹⁾ when they

Obey any applicable regulations in the country where the vehicle is being operated.

have worn down to the treadwear indicators. Replace the tires with new ones ⇒ ∧.

Tire rotation

Rotating the tires regularly is recommended to ensure the tires wear evenly. To rotate the tires, install the tires from the rear axle on the front axle and vice versa. This will allow the tires to have approximately the same length of service life.

For unidirectional tires, make sure the tires are installed according to the running direction indicated on the tire sidewall www.carob ⇒ page 281.

Hidden damage

Damage to tires and rims can often occur in locations that are hidden. Unusual vibrations in the vehicle or pulling to one side may indicate that there is tire damage. Reduce your speed immediately. Check the tires for damage. If no damage is visible from the outside, drive slowly and carefully to the nearest authorized Audi dealer or authorized Audi Service Facility to have the vehicle inspected.

Λ

WARNING

Tread that has worn too low or uneven tread depths on the tires can reduce driving safety. This can increase the risk of an accident because it has a negative effect on handling, driving through curves, and braking, and because it increases the risk of hydroplaning when driving through deep puddles.

Tire pressure

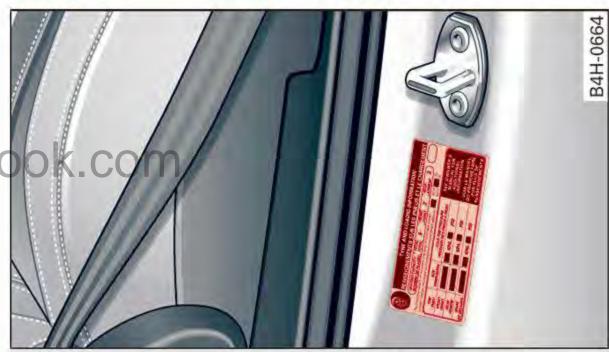


Fig. 159 Driver's side B-pillar: tire pressure label

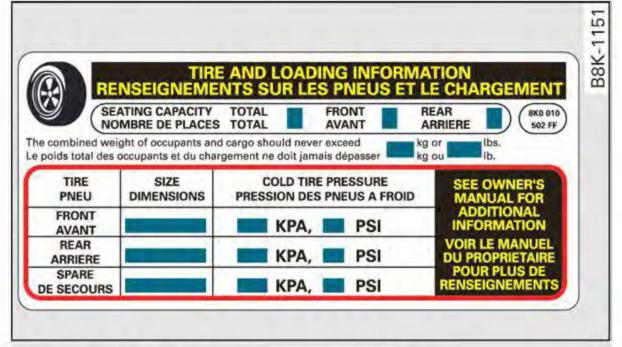


Fig. 160 Tire pressure label

The correct tire pressure for tires installed at the factory is listed on ▶

a label. The label is located on the B-pillar \Rightarrow fig. 159, \Rightarrow fig. 160.

Use the tire pressure specified for a normal vehicle load when the vehicle is partially loaded ⇒ table on page 259. If driving the vehicle when fully loaded, you must increase the tire pressure to the maximum specified pressure ⇒ ▲.

Checking and correcting tire pressure

- ► Check the tire pressure at least once per month and also check it before every long drive.
- Always check the tire pressure when the tires are cold. Do not reduce the pressure if it increases when the tires are warm.
- ► Refer to the sticker ⇒ fig. 160 for the correct tire pressure.
- ► Correct the tire pressure if necessary.
- ►Store the new tire pressure in the MMI ⇒ page 266 or ⇒ page 268.
- ► Check the pressure in the spare tire*. Always maintain the maximum temperature that is specified for the tire.



WARNING

Always adapt the tire pressure to your driving style and the vehicle load.

- –Overloading can lead to loss of vehicle control and increase the risk of an accident. Read and follow the important safety precautions in ⇒ page 259.
- The tire must flex more if the tire pressure is too low or if the vehicle speed or load are too high. This heats the tire up too much. This increases the risk of an accident because it can cause the tire to burst and result in loss of vehicle control.
- -Incorrect tire pressure increases es tire wear and has a negative effect on driving and braking behavior, which increases the risk of an accident.



Note

Replace lost valve caps to reduce the risk of damage to the tire valves.

For the sake of the envi-

Tire pressure that is too low increases energy use.

Tire pressure table

Please note that the information contained in the following table was correct at the time of printing, and the information is subject to change. If there are any differences, you should always follow the tire pressure sticker ⇒ page 257, fig. 159.

Make sure that the tire designation on your tire matches the designation on the tire pressure label and the tire pressure table.

The following table lists recommended tire pressures in cold tires according to the load and the size of the tires installed.

Model	Tire designation	Tire pressure							
		Normal load (up to 3 people) ^{a)}				Maximum load			
		Front		Rear		Front		Rear	
		PSI	kPA	PSI	kPA	PSI	kPA	PSI	kPA
e-tron and e-tron Sportback	255/50 R20 109H	41	280	44	300	41	280	44	300
	265/45 R21 108H	35	240	38	260	39	270	42	290
	255/55 R19 111H	39	270	42	290	41	280	44	300
	265/40 R22 106H	W ₃₅ C2	172400	038C	260	41	280	44	300
e-tron S and e-tron S Sportback	285/45 R20 112H	32	220	35	240	38	260	41	280
	285/40 R21 109H	35	240	38	260	38	260	41	280
	255/50 R20 109H	41	280	44	300	41	280	44	300
	285/35 R22 106H	36	250	39	270	41	280	44	300

a) Two people in the front, one person in the rear



WARNING

Please note the important safety precautions regarding tire pressure ⇒ page 257 and load limits ⇒ page 259.

Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle

that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating** ("GVWR").

The "GVWR" includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry ("seating capacity") with an assumed weight of 150 lbs. (68 kg) for each/passen-aro ger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the loaded trailer must be included as part of the vehicle load.

The Gross Axle Weight Rating ("GAWR") is the maximum load that can be applied at each of the vehicle's two axles.

The fact that there is an upper limit to your vehicle's Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker label located on the driver's side B-pillar.



WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

- -Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.
- -The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.
- -Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and

- sudden deflation, causing loss of control and a crash.
- -Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle's Gross Vehicle Weight Rating.

Determining correct load limit

Use the example below to calculate the total weight of the passengers and luggage or other things that you plan to transport of so that you can make sure that your vehicle will not be overloaded.

Steps for Determining Correct Load Limit

- Locate the statement "THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED XXX KG OR XXX LBS" on your vehicle's placard (tire inflation pressure label)

 ⇒ page 257, fig. 160.
- 2. Determine the combined weight of the driver and pas-

- sengers that will be riding in your vehicle.
- 3. Subtract the combined weight of the driver and passengers from "XXX" kilograms or "XXX" pounds shown on the sticker ⇒ page 257, fig. 160.
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.

 (1400-750 (5 x 150) = 650 lbs.)
- 5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- 6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

► Check the tire sidewall (⇒ page 248, fig. 157) to determine the designated load rating for a specific tire.

Wheel bolts and rims

Wheel bolts

Wheel bolts must be clean and loosen/tighten easily.

Rims

Rims with a bolted rim ring* or with bolted wheel covers* consist of multiple pieces. These components were bolted together using special bolts and a special procedure. You must not repair or disassemble them $\Rightarrow \triangle$.



WARNING

Wheel bolts that are tightened or repaired incorrectly can become loose and result in loss of vehicle control, which increases the risk of an accident. For the correct tightening specification, see ⇒ page 281, Finishing.

- Always keep the wheel bolts and the threads in the wheel hub clean and free of grease.
- Only use wheel bolts that fit the rim.
- Always have damaged rims repaired by an authorized Audi dealer or authorized Audi Service Facility. Never repair or disassemble rims yourself, because this increases the risk of an accident.

Loose wheel warning

Applies to: vehicles with loose wheel warning

Within the limits of the system, the loose wheel warning in the instrument cluster warns you if one or more wheels are loose.

Using the ABS sensors, the loose wheel warning system compares the vibration characteristics of the individual tires. If one or more wheels are loose, it will be indicated in the instrument cluster display with the indicator light and a message. If only one wheel is affected, the location of that wheel will be indicated.

Messages

Wheel bolts loose. Please safely stop the vehicle and check all wheel bolts!

Loose wheel warning for at least one wheel ⇒ ⚠. Check the wheel bolts on all wheels with the wheel wrench (vehicle tool kit). Have the tightening specification checked as soon as possible with a torque wrench. Drive carefully until then. For the correct tightening specification, see ⇒ page 281, Finishing.

Wheel assessment active. Please continue driving carefully

After this message appears and you have checked the wheel bolts, the assessment phase begins when the vehicle is in motion. This may take several minutes.

Loose wheel warning: malfunction! See owner's manual

There is a system malfunction. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

WARNING

Wheel bolts that are tightened incorrectly can become loose and result in loss of vehicle control, which increases the risk of an accident.

- If a message appears, reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the wheel bolts.
- Check your wheels for damage. Have the damaged wheels checked and/or replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.
- Under certain conditions (such as a sporty driving style, winter conditions, or unpaved roads), the message may be delayed.
- The driver is responsible for ensuring that the wheels are attached correctly.



Tips

 The loose wheel warning system can also stop working when there is an ESC malfunction. Using snow chains may result in a system malfunction.

Winter tires

Winter tires significantly improve the vehicle's handling when driving in winter conditions. Because of their construction (width, compound, tread pattern), summer tires provide less traction on ice and snow.

- ▶ Use winter tires on all four wheels.
- Only use winter tires that are approved for your vehicle.
- ▶ Please note that the maximum permitted speed may be lower with winter tires ⇒ in General information on page 247. An authorized Audi dealer or authorized Audi Service Facility can inform you about the maximum permitted speed for your tires.
- ► Check the tire pressure after installing wheels ⇒ page 257.

The effectiveness of winter tires is reduced greatly when the tread is worn down to a depth of 0.16 in (4 mm). The characteristics of winter C tires also decrease greatly as the tire ages, regardless of the remaining tread.

(

For the sake of the environment

Reinstall summer tires at the appropriate time, because they provide better handling when roads are free of snow and ice. Summer tires cause less road noise, tire wear, and energy use.



Tips

You can also use all season tires instead of winter tires. Please note that in some countries where winter tires are required, only winter tires with the A symbol may be permitted.

Snow chains

Snow chains improve both driving and braking in winter road conditions.

► Only install snow chains on the rear wheels.

- ► Check and correct the seating of the snow chains after driving a few feet, if necessary. Follow the instructions from the manufacturer.
- Note the maximum speed of 30 mph (50 km/h). Observe the local regulations.

Use of snow chains is only permitted with certain rim/tire combinations due to technical reasons. Check with an authorized Audi dealer or authorized Audi Service Facility to see if you may use snow chains.

Use **fine-mesh snow chains**. They must not add more than 0.40 inch (10.5 mm) in height, including the chain lock.

You must remove the snow chains on roads without snow. Otherwise, you could impair driving ability and damage the tires.



WARNING

Using incorrect snow chains or installing snow chains incorrectly can result in loss of vehicle control, which increases the risk of an accident.

(!)

Note

com

- Snow chains can damage the rims and wheel covers* if the chains come into direct contact with them. Remove the wheel covers* first. Use coated snow chains.
- Do not install and use snow chains if there is a malfunction in the air suspension*, because the vehicle height will be very low. If you drive with snow chains anyway, the wheel housings and other vehicle components can be severely damaged.



Tips

When using snow chains, it may be advisable to limit the ESC \Rightarrow page 110.

Low-profile tires

Applies to: vehicles with low-profile tires

Compared to other tire/rim combinations, lowprofile tires offer a wider tread surface and a larger rim diameter with shorter tire sidewalls. This results in an agile driving style. However, it may reduce the level of comfort and increase road noise when driving on roads in poor condition.

Low-profile tires can become damaged more quickly than standard tires when driving over large bumps, potholes, manhole covers, and curbs. Therefore, it is particularly important to maintain the correct tire pressure ⇒ page 257.

To reduce the risk of damage to the tires and rims, drive very carefully on poor roads.

Check your wheels regularly every 2,000 mi (3,000 km) for damage. For example, check for bulges/cracks on the tires or deformations/ cracks on the rims.

After a heavy impact or damage, have the tires and rims inspected or replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.

Low-profile tires can wear out faster than standard tires.

Uniform tire quality grading

- Tread wear
- Traction AA A B C
- Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇒ page 248, fig. 157.

For example: Tread wear 200, Traction AA, Temperature A.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and

may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure $\Rightarrow \triangle$.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.



WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

A

WARNING

Temperature grades apply to tires that are properly inflated and not over or underinflated.

Tire pressure monitoring system

(!) General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure tell-tale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon

subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

If the tire pressure monitoring indicator appears

Applies to: vehicles with Tire Pressure Monitoring System indicator

The tire pressure indicator in the instrument cluster informs you if the tire pressure is too low or if there is a system malfunction.

Using the ABS sensors, the tire pressure monitoring system compares the tire tread circumference and vibration characteristics of the individual tires. If the pressure changes in one or more tires, this is indicated in the instrument cluster display with an indicator light (1) and a message. If only one tire is affected, the location of that tire will be indicated.

The tire pressures must be stored again each time you change the pressures (switching between partial and full load pressure) or after changing or replacing a tire on your vehicle ⇒ page 266. The tire pressure monitoring system only monitors the tire pressure you have stored. Refer to the tire pressure label for the recommended tire pressure for your vehicle ⇒ page 257, fig. 160.

Tire tread circumference and vibration characteristics can change and cause a tire pressure warning if:

- The tire pressure in one or more tires is too low
- The tires have structural damage
- The tire was replaced or the tire pressure was changed and it was not stored ⇒ page 266

 Tires that are only partially used are replaced with new tires

Indicator lights

If the indicator light turns on, there is a loss of pressure in at least one tire .⇒ Check the tires and replace if necessary. Check and correct the pressures of all four tires and store the pressure again ⇒ page 266.

Tire pressure: malfunction! See owner's manual

If TPMS appears after switching the ignition on or while driving and the indicator light in the instrument cluster blinks for approximately one minute and then stays on, there is system malfunction. Try to store the correct tire pressures page 266. In some cases, you must drive for several minutes after storing the pressures until the indicator light turns off. If the indicator light does turn off or turns on again after a short period of time, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

MARNING

- If the tire pressure indicator appears in the display, reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the tires and their pressure.
- The driver is responsible for maintaining the correct tire pressure. You must check the tire pressure regularly.
- Under certain conditions (such as a sporty driving style, winter conditions, or unpaved roads), the tire pressure monitoring system indicator may be delayed.

i Tips

- The tire pressure monitoring system can also stop working when there is an ESC malfunction.
- Using snow chains may result in a system malfunction.
- The tire pressure monitoring system in your
 Audi was calibrated with "Audi Original

Tires" ⇒ page 254. Audi recommends using these tires.

Storing tire pressures

Applies to: vehicles with Tire Pressure Monitoring System indicator

If the tire pressure changes or a tire is replaced, it must be confirmed in the MMI.

- ▶ Before storing the tire pressures, make sure the tire pressures in all four tires meet the specified values and are adapted to the load ⇒ page 257.
- ▶ Switch the ignition on.
- ▶ Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Tire pressure monitoring > Store tire pressure > Yes, store now.



Tips

Do not store the tire pressures if snow chains are installed.

Tire pressure monitoring system

(1) General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure tell-tale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life,

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

General information

Applies to: vehicles with tire pressure monitoring system

The tire pressure monitoring system monitors the pressure in the four tires when driving.

The system uses sensors that measure the temperature and pressure in the tires. The data is sent from these sensors to the control module by radio frequency.

The tire pressure monitoring system shows the current pressures and temperatures of the tires in the MMI while driving ⇒ page 268. It also compares the current tire pressures with the stored tire pressures and gives a warning in the driver

information system if the tire pressure is different from what is stored ⇒ page 268.

The system does not detect if the stored tire pressures match the recommended tire pressures. You must store the tire pressures again in each of the following situations ⇒ page 268:

- Each time the tire pressures change, for example when the load in the vehicle changes
- After replacing a tire
- If wheels with new wheel sensors are used

Λ

WARNING

- The tire pressure monitoring system assists the driver in monitoring tire pressures. The driver is responsible for having the tires inflated to the correct pressure.
- Do not change the tire pressure when the temperature of the tire is extremely high.
 This could result in serious damage to the tire and even cause the tire to burst, increasing the risk of an accident.
- A tire with low pressure flexes more. This
 heats the tire up too much. This could cause
 the tread to separate and even cause the tire
 to burst, increasing the risk of an accident.
- The tire pressure monitoring system does not warn about damage or defects in the tire construction that could cause the tire to burst, for example. Inspect your tires regularly.



Tips

- If tires are replaced, the sensors and valves do not need to be removed or replaced. Only replace the valve stem and, if necessary, the valve and the wheel electronics. If you have questions, see an authorized Audi dealer or authorized Audi Service Facility.
- An incorrect display or a malfunction in the tire pressure monitoring system can occur after using the tire mobility kit*. Have the sensors replaced by an authorized Audi dealer or authorized Audi Service Facility.
- The system complies with United States FCC regulations and ISED regulations
 ⇒ page 300.

Displaying tire pressures and temperatures

Applies to: vehicles with tire pressure monitoring system

Requirement: you must be driving the vehicle.

► Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Tire pressure monitoring > Display tire pressure.

The current tire pressures are shown in green, yellow, or red numbers:

- Green: the current tire pressure and the specified tire pressure are approximately the same.
- Yellow: the current tire pressure is lower than the specified tire pressure.
- Red: the current tire pressure is much lower than the specified tire pressure.

The specified tire pressure is the last tire pressure that was stored ⇒ page 268.

Note that the tire pressure also depends on the temperature of the tire. The tire pressure increases as the tires become warmer while driving.

WARNING

Read and follow the important information and notes ⇒ page 267.



The tire pressure or temperature is not displayed while the vehicle is stationary and in adaptation mode. Dashes --. -- are shown in place of the pressure and temperature.

(!) Tire pressure loss

Applies to: vehicles with tire pressure monitoring system

If the indicator light turns on, the tire pressure is too low compared to the specified pressure. Check and store the tire pressure(s) the next time it is possible ⇒ page 268.

Flat tire! Safely stop vehicle. Please check all tires and store pressures in MMI

If the indicator light turns on and the message appears, the tire pressure has reached a critical level compared to the specified pressure. Avoid unnecessary steering and braking maneuvers.

Adapt your driving style to the situation. Stop as soon as possible and check the tire(s). If it is possible to continue driving, see an authorized Audi dealer or authorized Audi Service Facility immediately and have your tire(s) repaired or replaced if necessary.



WARNING

Read and follow the important information and notes \Rightarrow page 267.

Storing new tire pressures

Applies to: vehicles with tire pressure monitoring system

The tire pressure specifications must be stored correctly for the tire pressure monitoring system to function reliably.

It is always necessary to store the tire pressures when the tire pressures are modified, for example due to a change in load or when new sensors are installed.

- ▶ Before storing the tire pressures, make sure the tire pressures of all four tires meet the speci-WWW.Caro Ofied Values and are adapted to the load ⇒ page 257, fig. 160. Only correct and store the pressure in tires whose temperature is approximately the same as the ambient temperature. If the temperature of the tire is higher than the ambient air temperature, the tire pressure must be increased approximately 3 PSI (0,2 bar) above the value on the sticker.
 - ► Switch the ignition on.
 - ► Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Tire pressure monitoring > Store tire pressure > Yes, store now.
 - ▶ If the changed tire pressures are not displayed on the MMI, drive the vehicle for approximately 10 minutes so that the sensor signal from the wheels is received again.

During this adaptation phase, --.-- is displayed for the pressure and temperature and the tire pressure monitoring system is only partially available. It only provides a warning if one or more tire pressures is below the minimum permitted specified pressure.

Tire pressure: wheel change detected. Please check all tires and store pressures in MMI

If the indicator light turns on and the message appears, the system has detected that the location of the sensors has changed due to a wheel replacement, or new sensors have been installed. Store the new tire pressures.

 Λ

WARNING

Read and follow the important information and notes ⇒ page 267.

Malfunctions

Applies to: vehicles with tire pressure monitoring system

Tire pressure: malfunction! See owner's manual

If the indicator light appears after switching the ignition on or while driving and the indicator light also blinks for approximately one minute and then stays on, then there is system malfunction. The following are examples of situations that could cause a malfunction:

- If the message appears at the end of the adaptation phase, the system may not detect one or several of the wheel sensors necessary for pressure monitoring. This may result from one or more wheels without wheel sensors or with incompatible wheel sensors being installed.
- A wheel sensor or another component has failed.
- Using snow chains can affect the function of the system because of the shielding effect of the chains.
- The tire pressure monitoring system is not available due to a malfunction.
- Transmitters with the same frequency, such as headphones or remote controlled devices, may cause a temporary system malfunction due to the strong electromagnetic field.

The TPMS indicator light and the message turn off once the tire pressure monitoring system is available again. If you cannot correct the malfunction and the TPMS indicator light stays on, drive immediately to an authorized Audi dealer or author-

ized Audi Service Facility to have the malfunction repaired.

Care and cleaning

General information

Regular, proper care helps to maintain your vehicle's value. It can also be a requirement when submitting warranty claims for corrosion damage and paint defects on the body.

The required cleaning and care products can be obtained from an authorized Audi dealer or authorized Service Facility. Read and follow the instructions for use on the packaging.



WARNING

- Using cleaning and care products incorrectly can be dangerous to your health.
- Always store cleaning and care products out of reach of children to reduce the risk of poisoning.



For the sake of the environment

- Purchase environmentally-friendly cleaning products if possible.
- Do not dispose of cleaning and care prod-Caro ucts with household trash.

Car washes

The longer that deposits such as insects, bird droppings, tree sap or road salt remain on the vehicle, the more the surface can be damaged. High temperatures such as those caused by sunlight increase the damaging effect.

Before washing, rinse off heavy deposits with plenty of water.

Stubborn deposits such as bird droppings or tree sap are best removed with plenty of water and a microfiber cloth.

Also, wash the underside of your vehicle once road salt stops being used for the season.

Pressure washers

When washing your vehicle with a pressure washer, always follow the operating instructions provided with the pressure washer. This is especially important in regard to the pressure and spraying distance. Do not aim the spray directly at the

seals on the side windows, doors, hood, luggage compartment lid, or sunroof*, or at tires, rubber hoses, insulating material, sensors*, camera lenses*, or the laser scanner*. Maintain a distance of at least 16 inches (40 cm).

Do not direct the washer stream toward the wall mount clip*.

Do not remove snow and ice with a pressure washer.

Never use cone nozzles or high pressure nozzles.

The water temperature must not be above 140 °F (60 °C).

Automatic car wash

Spray off the vehicle before washing.

Make sure that the windows and roof* are closed and the windshield wipers are off. Make sure that the vehicle is still able to roll during the washing process in the car wash. Follow instructions from the car wash operator, especially if there are accessories attached to your vehicle.

If possible, use car washes that do not have brushes.

Washing by hand

Clean the vehicle starting from the top and working downward using a soft sponge or cleaning brush. Use solvent-free cleaning products.

Washing vehicles with matte finish paint by hand

To reduce the risk of damaging the paint when washing, first remove dust and large particles from your vehicle. Insects, grease spots, and fingerprints are best removed with a special cleaner for matte finish paint.

Apply the product using a microfiber cloth. To reduce the risk of damaging the paint surface, do not use too much pressure.

Rinse the vehicle thoroughly with water. Then clean using a neutral shampoo and a soft microfiber cloth.

Rinse the vehicle thoroughly again and let it air dry. Remove any water residue using a chamois.

Λ

WARNING

- To reduce the risk of accidents, only wash the vehicle when the ignition is off and follow the instructions from the car wash operator.
- To reduce the risk of cuts, protect yourself from sharp metal components when washing the underbody or the inside of the wheel housings.
- After washing the vehicle, the braking effect may be delayed due to moisture on the brake rotors or ice in the winter. This increases the risk of an accident. The brakes must be dried with a few careful brake applications.

1

Note

- If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors.
 Power folding exterior mirrors* must only be folded in and out using the power folding function.
- To reduce the risk of damage to the rims and tires, compare the width between the wheels on your vehicle with the distance between the guide rails in the car wash.
- To reduce the risk of damage, compare the height and width of your vehicle with the

- height and width of the inside of the car wash.
- To reduce the risk of paint damage, do not wash the vehicle in direct sunlight.
- To reduce the risk of damage, do not wash decorative decals* with a pressure washer.
- To reduce the risk of damage to the surface, do not use insect removing sponges, kitchen sponges, or similar items.
- When washing matte finish painted vehicle components:
 - To reduce the risk of damage to the surface, do not use polishing agents or hard wax.
 - Never use protective wax. It can destroy the matte finish effect.
 - Do not place any stickers or magnetic signs on vehicle components painted with matte finish paint. The paint could be damaged when the stickers or magnets are removed.



For the sake of the environment

only wash the vehicle in facilities specially designed for that purpose. This will reduce the risk of dirty water contaminated with oil from entering the sewer system.

Cleaning and care information

When cleaning and caring for individual vehicle components, refer to the following tables. The information contained there is simply recommendations. For questions or for components

that are not listed, consult an authorized Audi dealer or authorized Audi Service Facility. Also follow the information found in $\Rightarrow \Lambda$.

Exterior cleaning

Component	Situation	Solution			
Windshield wiper blades	Deposits	Soft cloth with glass cleaner, ⇒ page 58			
Headlights/ tail lights	Deposits	Soft sponge with a mild soap solution ^{a)}			
Sensors/ camera lenses	Deposits	Sensors: soft cloth with a solvent-free cleaning product Camera lenses: soft cloth with an alcohol-free cleaning sol- ution			
	Snow/ice	Hand brush/solvent-free de-icing spray			

Component	Situation	Solution			
Laser scanner	Deposits	Soft sponge with a mild soap solution ^{a)}			
Wheels	Road salt	Water			
	Brake dust	Acid-free special cleaning solution			
Decorative parts and trim	Deposits	Mild soap solution ^{a)} , cleaning solution suitable for stain- less steel, if necessary			
Paint	Paint damage	Repair with touch-up paint			
	Surface rust	Rust remover, then treat with hard wax; for questions, consult an authorized Audi dealer or authorized Audi Service Facility.			
	Corrosion	Have it removed by an authorized Audi dealer or authorized Audi Service Facility.			
	Water no longer beads on the surface of clean paint	Treat with hard wax (at least twice per year)			
	No shine even though paint has been pro- tected/paint looks poor	Treat with suitable polish; then apply paint protectant if the polish that was used does not contain any protectant			
	Deposits such as in- sects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a micro- fiber cloth V.Carobook.com			
	Grease-based con- taminants such as cosmetics or sunblock	Remove immediately with a mild soap solution ^{a)} and a soft cloth			
Carbon compo- nents	Deposits	Clean the same way as painted parts ⇒ page 270			
Decorative decals	Deposits	Soft sponge with a mild soap solution ^{a)}			
Audi e-tron charging system	Deposits	Soft, dry towel			
Wall mount clip	Deposits	Soft towel with alcohol-free cleaning solution			

a) Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

Interior cleaning

Component	Situation	Solution	
Window glass Deposits		Glass cleaner, then wipe dry	
Decorative parts and trim	Deposits	Mild soap solution ^{a)}	
Plastic parts	Deposits	Damp cloth	
	Heavier deposits	Mild soap solution ^{a)} , detergent-free plastic cleaning solution, if necessary	

Component	Situation	Solution			
Displays/instru- ment cluster	Deposits	Soft cloth with LCD cleaner; dust in the lower area of the instrument cluster can be removed using a soft brush.			
Controls	Deposits	Soft brush, then a soft cloth with a mild soap solution ^{a)}			
Safety belts	Deposits	Mild soap solution ^{a)} , allow to dry before letting them retract			
Textiles, artificial leather, microfiber	Deposits adhering to the surface	Vacuum cleaner			
	Water-based deposits such as coffee, tea, blood, etc.	s Absorbent cloth and mild soap solution ^{a)}			
	Oil-based deposits such as oil, make-up, etc.	Apply a mild soap solution ^{a)} , blot away the dissolved oi dye, treat afterward with water, if necessary			
	Certain types of de- posits such as ink, nail polish, latex paint, shoe polish, etc.	Special stain remover, blot with absorbent material, treat afterward with mild soap solution, if necessary ^{a)}			
Natural leather	Fresh stains	Cotton cloth with a mild soap solutiona)			
	Water-based deposits such as coffee, tea, blood, etc. WWW.	Fresh stains: absorbent cloth dried stains: stain remover suitable for leather Carobook.com			
	Oil-based deposits such as oil, make-up, etc.	Fresh stains: absorbent cloth and stain remover suitable for leather dried stains: oil cleaning spray			
	Certain types of de- posits such as ink, nail polish, latex paint, shoe polish, etc.	Spot remover suitable for leather			
	Care	Regularly apply conditioning cream that protects from light and penetrates into the material. Use special colored conditioning cream, if necessary.			
Carbon compo- nents	Deposits	Clean the same way as plastic components			

a) Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

MARNING

The windshield must not be treated with water-repelling windshield coating agents. Under unfavorable conditions, such as wetness, darkness, and when the sun is low, these coatings can cause increased glare, which increas-

es the risk of an accident. They can also cause wiper blade chatter.

Λ

WARNING

 Never immerse the Audi e-tron charging system and connectors in water. The Audi e-tron charging system must only be cleaned when the control unit is completely disconnected from the power supply and from the vehicle.

1

Note

- Headlights and tail lights

- Never clean the headlights or tail lights with a dry cloth or sponge because the lights could be damaged.
- Do not use any cleaning products that contain alcohol, because they could cause cracks to form.

- Wheels

- Never use any paint polish or other abrasive materials.
- Damage to the protective layer on the rims, such as stone chips or scratches, must be repaired immediately.

- Camera lenses

- Never use warm or hot water to remove snow or ice from the camera lens. This could cause the lens to crack.
- Never use abrasive cleaning materials or Carobo alcohol to clean the camera lens. This could cause scratches and cracks.

- Laser scanner

 Never use abrasive cleaning materials to clean the laser scanner. This could cause scratches and cracks.

- Door windows

- Remove snow and ice on windows and exterior mirrors with a plastic scraper. To reduce the risk of scratches, move the scraper only in one direction and not back and forth.
- Never remove snow or ice from door windows and mirrors using warm or hot water because this could cause cracks to form.
- To reduce the risk of damage to the rear window defogger, do not apply any stickers on the heating wires on the inside of the window.

- Decorative parts and trim

 Never use chrome care or cleaning products.

- Paint

- To reduce the risk of scratches, the vehicle must be free of dirt and dust before polishing or waxing.
- To prevent paint damage, do not polish or wax the vehicle in direct sunlight.
- To reduce the risk of paint damage, do not polish away rust spots.
- Remove cosmetics and sunscreen immediately because they could damage the paint.

- Decorative decals

- To reduce the risk of damage, do not use any rough powder or abrasive cleaning products.
- To reduce the risk of damage, do not polish decorative decals that have a matte or printed finish.
- Due to the risk of damage, do not use an ice scraper to remove snow and ice on windows with decorative decals on them.

- Displays and instrument cluster

- Make sure that the display and instrument cluster are switched off and have cooled

 There before alreading To switch off the
- down before cleaning. To switch off the upper and lower display, select on the MMI home screen: SETTINGS > Display & brightness > MMI > Screen cleaning.
- Displays, the instrument cluster, and the trim surrounding it must not be cleaned with dry cleaning methods because they could become scratched.
- Make sure no fluids enter the spaces between the instrument cluster and the trim, because that could cause damage.

- Controls

 Make sure that no fluids enter the controls, because this could cause damage.

- Safety belts

- Do not remove the safety belts to clean them.
- Never clean safety belts or their components with chemicals or with corrosive fluids or solvents and never allow sharp objects to come into contact with the safety belts. This could cause damage to the belt webbing.

- If there is damage to the webbing, the connections, the retractors, or the buckles, have them replaced by an authorized Audi dealer or authorized Audi Service Facility.

- Textiles/artificial leather/microfiber

- Never treat artificial leather or microfiber with leather care products, solvents, floor polish, shoe polish, spot remover, or similar products.
- Have a cleaning specialist remove stubborn stains to reduce the risk of damage.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating* to dry the seat.
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Open hook and loop fasteners, for example on clothing, can damage seat covers. Make sure hook and loop fasteners are closed.

Tips

- Insects are easier to remove from paint that has been freshly waxed.
- Regular waxing can prevent rust spots from forming.
- Decorative decals can age due to environmental conditions, which can result in damage such as brittleness. The color may fade if exposed to excessive sunlight.

Taking your vehicle out of service

If you would like to take your vehicle out of service for a long period of time, contact an authorized Audi dealer or authorized Audi Service Facility. You can obtain information about the steps to complete depending on the conditions for taking the vehicle out of service (duration, location, etc.).

- Natural leather

lar products.

- www.carobook.com - Never treat leather with solvents, floor polish, shoe polish, spot remover or simi-
- Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
- Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
- Do not turn on the seat heating* to dry the seat.
- To help prevent the leather from fading, do not leave the vehicle in direct sunlight for long periods of time. If leaving the vehicle parked for long periods of time, you should cover the leather to protect it from direct sunlight.

- Wall mount clip

- Do not us any abrasive cleaning products or any that contain alcohol, because these increase the risk of discoloration.

Emergency assistance

General information

- ▶ Park the vehicle as far as possible from moving traffic in the event of a breakdown. In the event of a flat tire, park the vehicle on a level surface. If you are on a steep hill, be especially careful.
- Set the parking brake.
- ► Switch the emergency flashers on.
- ► Have the passengers exit the vehicle. They should move to a safe place, for example behind a guard rail.

A

WARNING

Follow the steps given above. This is for your protection and the for the safety of others on the road.

Equipment

Vehicle tool kit, tire mobility kit, and vehicle jack

Applies to: vehicles with the vehicle tool kit, tire mobility kit, and vehicle jack



Fig. 161 Front compartment: storage compartment

Observe the safety precautions ⇒ page 238, General information.

The vehicle tool kit, the vehicle jack*, the tire mobility kit*, and the compressor* are located under the cargo floor in the storage compartment in the front compartment.

- ▶ Open the storage compartment ⇒ page 81.
- Remove any objects from the storage compartment.
- ► Remove the cargo floor.



Tips

The vehicle jack* does not require any maintenance.

Tire mobility kit

Preparation

Applies to: vehicles with tire mobility kit

- Read and follow the important safety precautions ⇒ page 276.
- ► Set the parking brake.
- ► Select the "P" selector lever position.
- Check if a repair with the tire mobility kit is possible ⇒ page 276.

Using the tire mobility kit

Applies to: vehicles with tire mobility kit



Fig. 162 Tire: tire damage that cannot be repaired

If the tire is pierced by an object such as a nail, do not remove the object from the tire.

The tire mobility kit can be used at temperatures as low as -4 °F (-20 °C).

The tire mobility kit must not be used:

- If the tire has cuts or punctures that are larger than 0.16 inch (4 mm) (1) ⇒ fig. 162
- If the rim is damaged (2)
- If you have driven with very low tire pressure or without air in the tire (3)

See an authorized Audi dealer or authorized Audi Service Facility for assistance in these situations.

Λ

WARNING

- Please note that the tire mobility kit cannot be used in all situations, and that it may only be used temporarily.
- The tire sealant must not come in contact with skin, eyes, or clothing.
- If tire sealant comes into contact with your eyes or your skin, thoroughly rinse the affected area immediately with clean water.
- Do not inhale the fumes.
- If you swallow any of the tire sealant, thoroughly rinse your mouth immediately and drink a lot of water. Do not induce vomiting.
 Seek medical attention immediately.
- Change your clothing immediately if it comes into contact with tire sealant.
- If an allergic reaction occurs, seek medical attention immediately.
- Keep the tire sealant away from children.
- In vehicles with a tire pressure monitoring system*, using tire sealant can result in an incorrect display or a system malfunction.
 Drive carefully to the nearest authorized Audi dealer or authorized Audi Service Facili-C ty.



For the sake of the environment

Batteries and electrical/electronic devices must be disposed of in an environmentally safe manner.



Tips

- If sealant leaks, allow it to dry in place. You can then peel it off like a sticker.
- Note the expiration date on the sealant bottle. Replace the tire sealant at an authorized Audi dealer or authorized Audi Service Facility.
- Radio reception can be interrupted when operating the compressor.
- Follow the legal regulations that are applicable in the country where you are operating the vehicle.

Repairing tires

Applies to: vehicles with tire mobility kit

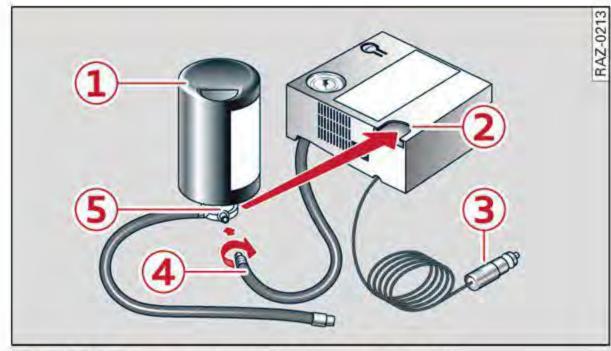


Fig. 163 Components of the tire mobility kit

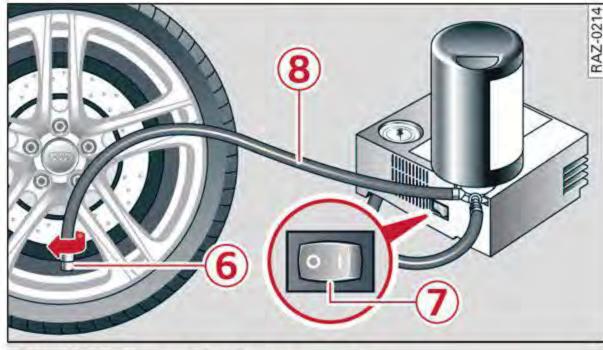


Fig. 164 Tire mobility kit connection

Requirement: the tire mobility kit must be laid out and ready for use \Rightarrow page 276.

Setting up the tire mobility kit

- Remove the connector (3) and pressure hose (4)
 from the bottom of the housing.
- ► Connect the compressor pressure hose ④ 1) to the flange ⑤ on the tire sealant bottle ①.
- ► Insert the sealant bottle with the flange at the bottom into the opening ② on the compressor.
- ► Remove the valve cap from the faulty tire.
- Connect the filler hose (8) to the valve (6)

 ⇒ fig. 164.
- ► Connect the plug ③ ⇒ fig. 163 to an outlet in the vehicle.
- ► Switch the ignition on.

Inflating a tire

► Move the switch $\bigcirc \Rightarrow fig$. 164 on the compressor into position I.

The compressor may look different. However, the way it is operated is generally the same.

Emergency assistance

- ▶ Inflate the tire to between 29 psi (200 kPA) and 36 psi (250 kPA) and read the pressure on the gauge.
- If this tire pressure is not reached, remove the filler hose. Drive slowly approximately 33 feet (10 m) forward or in reverse so that the sealant can be distributed in the tire. Inflate the tire again ⇒ ...

A

WARNING

- Read and follow the manufacturer's safety precautions on the compressor and in the instructions on the bottle of sealant.
- If a tire pressure of 29 psi (200 kPA) cannot reached after inflating for 6 minutes, then the tire is too severely damaged. Do not continue driving.
- If the tire cannot be repaired with the tire sealant, see an authorized Audi dealer or authorized Audi Service Facility for assistance.



Tips

Do not operate the compressor for more than six minutes continuously, or it can overheat. Once the compressor has cooled, you can continue to use it.

Completing

Applies to: vehicles with tire mobility kit

- ► Affix the sticker that says "max. 50 mph (max. 80 km/h)" that is provided with the tire mobility kit within the driver's field of vision.
- ► Stop the vehicle after driving for about 10 minutes and check the tire pressure.
- ▶ If the tire pressure is lower than 19 psi (130 kPA), then the tire is too severely damaged. Do not continue driving.



WARNING

Pay attention to the following after repairing the tire:

- Do not drive faster than 50 mph (80 km/h).
- Avoid hard acceleration or braking and driving fast around curves.
- The vehicle may become more difficult to control.

 If the tire is too severely damaged, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

For the sake of the environment

You can give the used tire sealant bottle to an authorized Audi dealer or authorized Audi Service Facility for disposal.



Tips

Remember to obtain a new bottle of sealant from an authorized Audi dealer or authorized Audi Service Facility after repairing a tire.

Replacing wheels

Preparation

You must complete the preparation before changing a tire.

- Read and follow the important safety precautions ⇒ page 276.
- ► Set the parking brake.
- Select the "P" selector lever position.
- ► When towing a trailer: disconnect the trailer from your vehicle.
- Lay out the vehicle tool kit ⇒ page 276 and the spare tire ⇒ page 282.
- Applies to: vehicles with air suspension: Select on the home screen: VEHICLE > Settings & Service > Air suspension: wheel change.
- Switch the ignition off.



WARNING

The vehicle must also be secured to prevent it from rolling when using the vehicle jack*. Use suitable objects to block the front and back of the wheel that is diagonal from the wheel with the flat tire.

Removing the caps



Fig. 165 Wheel: wheel bolts with caps

- Slide the plastic clip from the vehicle tool kit onto the cap until it engages ⇒ fig. 165.
- ▶ Remove the cap with the plastic clip.

Anti-theft wheel bolts

Applies to: vehicles with anti-theft wheel bolts

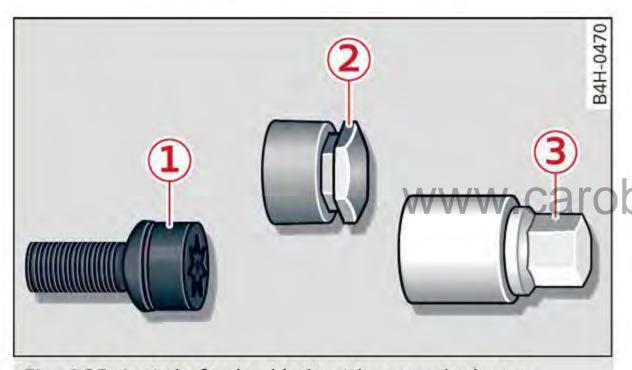


Fig. 166 Anti-theft wheel bolt with cap and adapter

You need a special adapter in the vehicle tool kit to remove the anti-theft wheel bolts.

- ► Remove the cap ②.
- ► Slide the adapter ③ all the way onto the antitheft wheel bolt ①.
- ► Slide the wheel wrench* from the vehicle tool kit all the way onto the adapter ③.
- ► Loosen the wheel bolt ⇒ page 279.



Tips

Note the code number for the wheel bolt adapter and store it in a safe place separate from the vehicle. If you need a replacement adapter, contact an authorized Audi dealer or

You need the matching adapter in order to loosen and tighten anti-theft wheel bolts* ⇒ page 279. authorized Audi Service Facility and give them the code number.

Loosening the wheel bolts



Fig. 167 Wheel: loosening the wheel bolts

- Slide the wheel wrench* from the vehicle tool kit all the way onto the wheel bolt¹⁾.
- ► Turn the wheel bolt approximately one turn to the left. To achieve the required torque, hold the end of the wheel wrench*. If the wheel bolt will not loosen, press carefully on the wheel wrench* with your foot. Hold onto the vehicle securely while doing this and make sure your footing is stable.



WARNING

To reduce the risk of an accident, only loosen the wheel bolts gently one turn before raising the vehicle with the vehicle jack*.

Raising the vehicle

Applies to: vehicles with vehicle jack

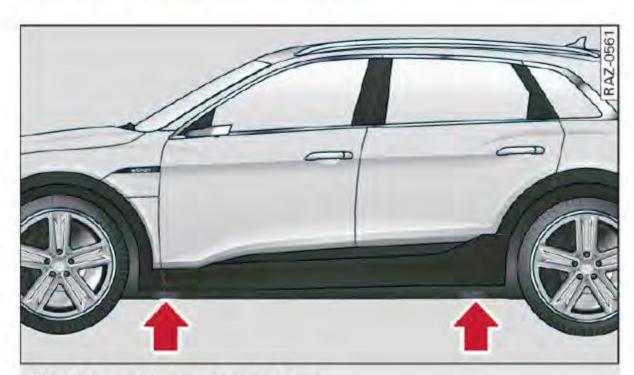


Fig. 168 Sill panels: markings



Fig. 169 Sill: positioning the vehicle jack

- Place the vehicle jack from the vehicle tool kit are on a firm surface. Use a flat, stable support if necessary. On a slippery surface such as tile, you should use a non-slip pad such as a rubber mat ⇒ .
- ► Find the marking on the sill that is closest to the tire that will be changed ⇒ fig. 168. Behind the marking, there is a lifting point on the side sill for the vehicle jack.
- ► Using the hex socket wrench ③ from the vehicle tool kit, turn the vehicle jack under the lifting point on the side sill until it is high enough that the arm ① ⇒ fig. 169 is under the designated plastic mount.
- ► Align the vehicle jack so the arm ① engages in the designated lifting point in the door sill and the base ② lies flat on the ground. The base ② must be directly under the mounting point ①.
- ➤ To lift the vehicle, position the ratchet ④ from the vehicle tool kit with the correct side on the hex socket wrench ③.
- Move the ratchet 4 clockwise back and forth until the wheel lifts up slightly from the ground.

Λ

WARNING

- To reduce the risk of injury, make sure no one is in the vehicle before raising it.
- Make sure the vehicle jack is stable. The risk of injury is increased when the ground is slippery or soft, because the vehicle jack could slide or sink.
- Only raise your vehicle with the vehicle jack provided by the factory. If you use a vehicle jack designed for another vehicle, your vehicle could slip and cause injury.
- Position the vehicle jack only at the designated mounting points on the side sill and align the jack. Otherwise, the vehicle jack could slip and cause an injury if it does not have sufficient hold on the vehicle.
- To reduce the risk of injury, do not raise any other vehicles or other loads using the vehicle jack provided by the factory.
- Applies to: vehicles with air suspension:
 Changes in temperature or load can affect the height of the stopped vehicle.
- To reduce the risk of an accident, never
 Switch the drive system on while the vehicle is raised.
- To reduce the risk of injury, no work should be performed under the vehicle while it is raised.



Note

Do not lift the vehicle by the sill. Position the vehicle jack only at the designated mounting points on the side sill. Otherwise, your vehicle could be damaged.

Removing and installing a wheel

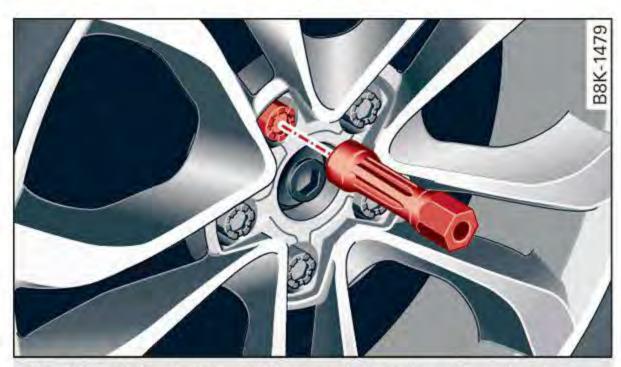


Fig. 170 Wheel: internal hex socket to turn the wheel bolts



Fig. 171 Wheel: alignment pin in the top hole

Removing a wheel

www.carobo

- Remove the top wheel bolt completely using the hex socket in the screwdriver handle from the vehicle tool kit ⇒ fig. 170 and place it on a clean surface.
- ► Then install the alignment pin from the vehicle tool kit in the empty wheel bolt hole by hand \$\infty\$ fig. 171.
- ► Remove the rest of the wheel bolts.
- ► Remove the wheel ⇒ ①. The alignment pin remains in the hole while doing this.

Installing a wheel

Read the directions on ⇒ page 281 when installing unidirectional tires.

- ► Slide the wheel on over the alignment pin ⇒ ①.
- Install the wheel bolts and tighten them gently using the hex socket.
- Remove the alignment pin and tighten the remaining wheel bolt.
- ► Carefully lower the vehicle using the vehicle jack*.
- ► Tighten the wheel bolts in a diagonal pattern using the wheel wrench*.

The wheel bolts must be clean and loosen and tighten easily. Check the contact surfaces for the wheel and hub. Contaminants on these surfaces must be removed before installing the wheel.

/ WARNING

- Read and follow the important information and notes under ⇒ page 254.
- Never use the hex socket in the screwdriver handle to tighten the wheel bolts. Using the hex socket will not achieve the required tightening torque, which increases the risk of an accident.

! Note

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

Unidirectional tires

A unidirectional tire profile is identified by arrows on the tire sidewall that point in the running direction. You must always maintain the specified running direction. This is necessary to ensure the tire's optimal performance in regard to adhesion, running noise, and friction, and to reduce the risk of hydroplaning.

To benefit fully from the advantages of the unidirectional tire design, you should replace faulty tires as soon as possible and restore the correct running direction on all of the tires.

Finishing

- ► Reinstall any covers on the wheel bolts that were removed.
- Store the vehicle tool kit in its designated place.
- If the removed wheel does not fit in the spare wheel well, store it securely in the luggage compartment ⇒ page 81.
- ► Check the tire pressure on the installed wheel as soon as possible.
- Correct the tire pressure and store it in the MMI ⇒ page 266 or ⇒ page 268.

- ➤ The wheel bolts must be tightened to 120 ft lbs (160 Nm). Have it checked as soon as possible with a torque wrench. Drive carefully until then.
- Have the faulty wheel replaced as quickly as possible.

Collapsible spare tire

Applies to: vehicles with collapsible spare tire

The collapsible spare tire is intended for shortterm use only. Have the damaged tire checked and replaced if necessary by an authorized Audi dealer or authorized Audi Service Facility as soon as possible.

There are some restrictions on the use of the collapsible spare tire. The collapsible spare tire has been designed specifically for your type of vehicle. Do not replace it with the collapsible spare tire from another type of vehicle.

The collapsible spare tire is located in the luggage compartment under the cargo floor.

Requirement: the vehicle tool kit ⇒ page 276 and the compressor must be laid out.

Removing

- ► Lift the cargo floor using the handle.
- Turn the handwheel counter-clockwise and remove it.
- ▶ Remove the cover.
- ► Remove the collapsible spare tire.

You must inflate the collapsible spare tire beforehand in order to use it.

Inflating

- Remove the valve cap from the collapsible spare tire.
- Tighten the compressor hose on the collapsible spare tire valve.
- ► Connect the compressor hose to a vehicle socket and switch it on.
- Let the compressor run until the specified value on the tire pressure sticker is reached ⇒ page 257, fig. 160 ⇒ 1.
- Screw the valve cap back onto the valve.

Returning to storage

- ➤ To release air, turn the valve insert. See an authorized Audi dealer or authorized Audi Service Facility.
- ► Turn the valve insert back once the air has been released.
- ▶ Wait several hours before placing the collapsible spare tire in the spare wheel well. Only then will it fold down completely so that you can store it securely.
- ► Then screw the valve cap back onto the valve.
- Secure the collapsible spare tire with the cover and the handwheel.
- ► Fold the cargo floor cover back into place.

Snow chains

Using snow chains on the collapsible spare tire is not permitted for technical reasons.

If you have to drive with snow chains and a rear tire fails, mount the collapsible spare tire in place of a front tire. Install the snow chains on the front tire that you removed, and install that in place of the rear tire that failed.

WARNING

www.caro

- Only use the collapsible spare tire in emergencies and drive very carefully, especially if it is more than six years old.
- The compressor and the hose can become very hot during operation which increases the risk of burn injuries.
- After installing a collapsible spare tire, the tire pressure must be checked as quickly as possible to reduce the risk of an accident.
- Do not drive faster than 50 mph (80 km/h)
 with the collapsible spare tire. Driving faster than that increases the risk of an accident.
- To reduce the risk of an accident, avoid hard acceleration or braking and driving fast around curves with the collapsible spare tire.
- Never drive using more than one collapsible spare tire, because this increases the risk of an accident.
- Normal tires or winter tires must not be mounted on the collapsible spare tire rim.

Note

The compressor must be switched off after six minutes at the most to reduce the risk of overheating. Let the compressor cool down for several minutes before using it again.



Tips

The ESC must not be limited or switched off when driving with the collapsible spare tire ⇒ page 110.

Jump starting

The vehicle cannot be operated when the 12 volt vehicle battery is drained. Your vehicle must not be jump started in this case. Contact an authorized Audi dealer or authorized Audi Service Facility.



Note

The vehicle battery must not be bridged using conventional jump start methods.

- You may neither give nor receive a jump start. Otherwise, the electronic systems in Co the vehicle may be severely damaged.
- The jump start pins in the front compartment are designed only for use by qualified technicians.

Towing

General information

You should only perform the steps that follow if you have the necessary tools and technical expertise.

Towing requires a certain amount of practice. Audi recommends contacting a towing company to have the vehicle transported.

You should only have your vehicle towed by another vehicle when disabled in exceptional circumstances. Inexperienced drivers should not tow.

Notes on towing

The maximum permitted towing speed is 30 mph (50 km/h).

The maximum permitted towing distance is 30 miles (50 km).

Additional information on towing with a tow truck

The vehicle may only be towed with the front axle raised. Do not wrap any chains or cables around the brake lines.

Tow bar and towing cable

The vehicle can be towed with a tow bar or towing cable. Both drivers should be familiar with the special considerations when towing, especially when using a towing cable.

Always make sure the traction force does not exceed the permitted level and there are no shock loading conditions. There is always the risk of the coupling becoming overloaded when driving offroad.

For the most safety and security, drive with a tow bar. You should use a towing cable only if a tow bar is not available. Use a towing cable made of synthetic elastic cable similar elastic material.

A

WARNING

- Towing highly increases the risk of an accident, for example from colliding with the towing vehicle.
- To reduce the risk of an accident, do not allow anyone to remain inside the vehicle when it is being transported by a tow truck or a special transporter.

(!)

Note

- If the indicator light turns on, there is a fault in the cooling circuit. The vehicle must not be towed. The drive system can be severely damaged.
- If normal towing is not possible, for example if the transmission is faulty or if the towing distance is greater than 30 miles (50 km), then transport the vehicle on a special carrier.
- If the vehicle is towed by a tow truck at the axle that is not permitted, this can cause severe damage to the transmission.

- When the parking lock is engaged, neither the front nor rear axle may be lowered or raised more than 10. If the vehicle is secured on a special transporter, the supports under the wheels must not be moved anymore. The drive system or the tires could be seriously damaged.
- Towing must not be used to charge the high-voltage battery (recuperation), because this could result in major damages to the tow vehicle or the vehicle being towed.
- The vehicle must not be tow started for technical reasons.

(i) Tips

- Switch Audi pre sense* off ⇒ page 167 when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation, or when towing the vehicle. This can prevent an undesired intervention from the pre sense* system.
- Follow the local legal regulations for towing.

Vehicle being towed (rear)

- Make sure the ignition is switched on so that the steering wheel is not locked and so that you can use the turn signals, the horn, and the windshield wipers if needed ⇒ .
- ➤ Switching it off before the vehicle has stopped may impair the function of the brake booster and power steering. You would then need to use more force to steer and brake the vehicle.
- ▶ Release the parking brake ⇒ page 101.
- ► Select the "N" selector lever position.
- ► Switch the ESC off to avoid error messages ⇒ page 110.
- ► Make sure the towing cable is always taut.

WARNING

- Never tow a vehicle using a tow bar or towing cable if the vehicle does not have electrical power.
- If the vehicle runs out of power while it is being towed, stop towing the vehicle immediately and consult an authorized Audi dealer or qualified repair facility.

www.card

Towing

Read and follow the important information under ⇒ page 283.

Preparations

- ▶ Only secure the towing cable or tow bar at the designated towing loops ⇒ page 284, ⇒ page 285.
- Make sure the towing cable is not twisted. Otherwise it could disconnect from the towing loop while towing.
- ► Switch the emergency flashers on in both vehicles ⇒ page 52. However, do not do this if it prohibited by law.

Towing vehicle (front)

- Only start to drive when the towing cable is taut.
- ▶ Press the brake pedal very carefully.
- ► Avoid sudden braking or driving maneuvers.

Front towing loop



Fig. 172 Front bumper: installing the towing loop

The threaded opening for the towing loop is located on the right side of the front bumper.

- Remove the towing loop from the vehicle tool kit ⇒ page 276.
- ▶ Press the cap inward with brief, strong pressure ⇒ fig. 172. The cap will loosen from the bumper.
- ► Tighten the towing eye as far as it will go into the mount. Use a suitable object to tighten the

towing eye completely and securely in the mount.

► After using, place the towing loop back in the vehicle tool kit.



WARNING

If the towing loop is not tightened until it stops when installing, the threads may be pulled out when towing the vehicle and result in an accident.



Tips

Depending on the model, the shape of the cap can vary.

Rear towing loop

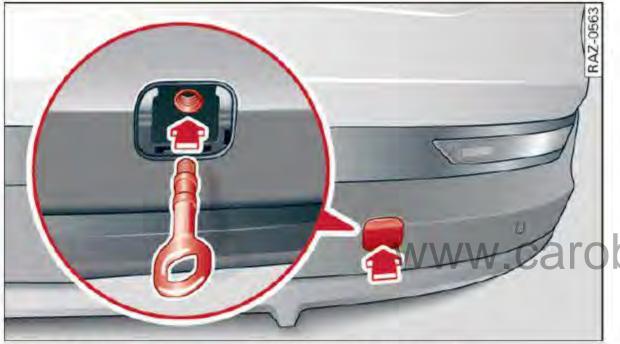


Fig. 173 Rear bumper: installing the towing loop

Vehicles with a towing loop

On vehicles without a factory-installed trailer hitch*, the towing loop threads are located on the right rear side of the bumper.

- ▶ Remove the towing loop from the vehicle tool kit ⇒ page 276.
- ▶ Press the cap inward with brief, strong pressure ⇒ fig. 173. The cap will loosen from the bumper.
- ► Tighten the towing eye as far as it will go into the mount. Use a suitable object to tighten the towing eye completely and securely in the mount.
- After using, place the towing loop back in the vehicle tool kit.

Vehicles with a trailer hitch*

► Attach the tow bar or the towing cable to the trailer hitch.

Vehicles with a factory-installed trailer hitch* are **not** equipped with towing loop threads at the rear.

Λ

WARNING

If the towing loop is not tightened until it stops when installing, the threads may be pulled out when towing the vehicle and result in an accident.



Note

To reduce the risk of damaging the trailer hitch*, only use suitable tow bars that are compatible with it. If a tow bar is not available, you can use a towing cable.



Tips

Depending on the model, the shape of the cap can vary.

book.com

Fuses and bulbs

Fuses

Replacing fuses

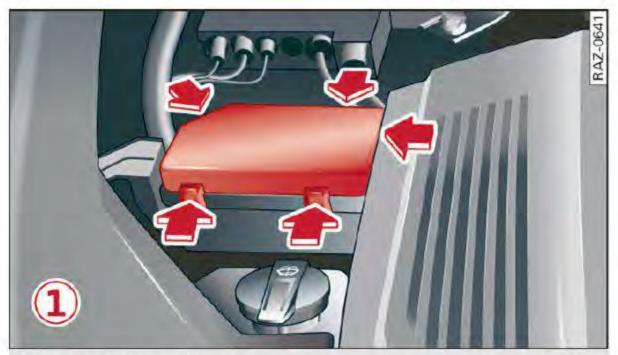


Fig. 174 Right side of the front compartment: fuse panel cover 1

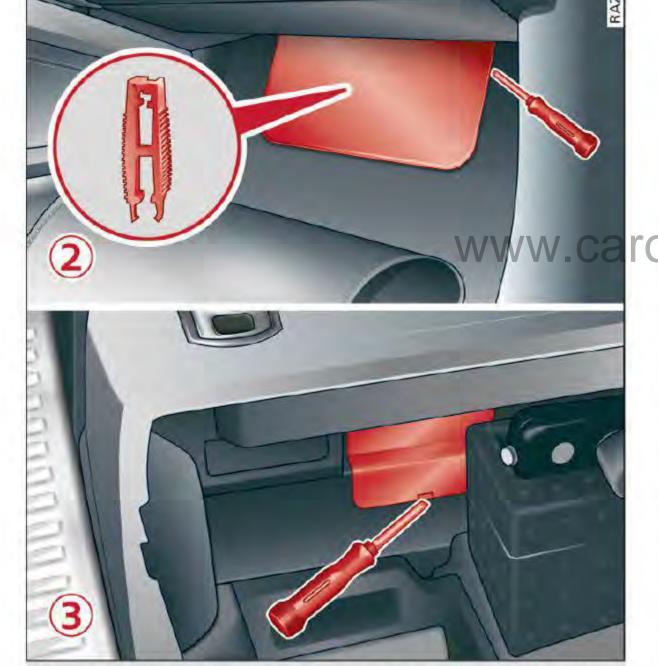


Fig. 175 Front passenger footwell: cover and clip 2, left side of the luggage compartment: cover 3

Fuses are installed in various locations in your vehicle. The following information only lists fuses that you can change yourself. To have other fuses changed, contact an authorized Audi dealer or authorized Audi Service Facility. The following table does not list fuse locations that are not used.

A fuse that has blown will have metal strips that have burned through.

The fuses are located on the right side of the front compartment (1), in the front passenger

footwell (2), and under the left side of the luggage compartment (3).

- Switch the ignition and all electrical equipment off.
- ► Check the table that follows to see which fuse belongs to the affected equipment.
- ► Remove the screwdriver from the vehicle tool kit ⇒ page 276.
- ► Remove the appropriate cover.
- Remove the colored plastic bracket from the fuse panel, if present.
- ► Remove the clip from the fuse panel in the front passenger's footwell ②.
- ► Remove the fuse using the clip.
- Replace the blown fuse only with a fuse that has the same amp rating.
- ► Reinstall the plastic bracket, if present.
- ► Install the cover.

Fuse color identification

Color	Current rating in amps
Black	1
dayok.com	2
Purple	3
Pink	4
Light brown	5
Brown	7.5
Red (narrow)	10
Light blue	15
Yellow	20
White or transparent	25
Light green	30
Teal	35
Orange	40
Red (wide)	50

\triangle

WARNING

Do not repair fuses and never replace a blown fuse with one that has a higher amp rating. This can cause damage to the electrical system and increases the risk of fire.



Note

If a new fuse burns out again shortly after you have installed it, have the electrical system checked as soon as possible by an authorized Audi dealer or authorized Audi Service Facility.



Tips

Some of the equipment listed in the following tables applies only to certain model versions or certain optional equipment.

Fuse assignment - front compartment

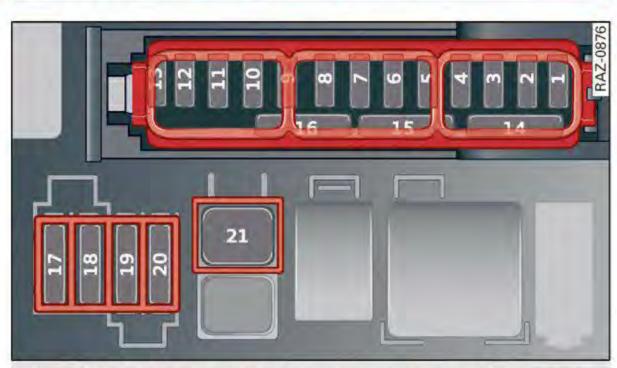


Fig. 176 Right side of the front compartment: fuse panel with plastic clip

No.	Equipment			
1	Electrical charging port door			
2	Climate control system compressor			
4	High-voltage battery			
5	High-voltage charger			
6	Thermal management			
7	Electric drive system, power electronics			
11	High-voltage charger			
13	Thermal management			
14	Windshield washer system control module			
15	High-voltage battery coolant pump			
16	Windshield wipers			
17	Thermal management			
18	Thermal management			
19	Thermal management			
21	Electronic Stabilization Control (ESC)			

Fuse assignment - footwell

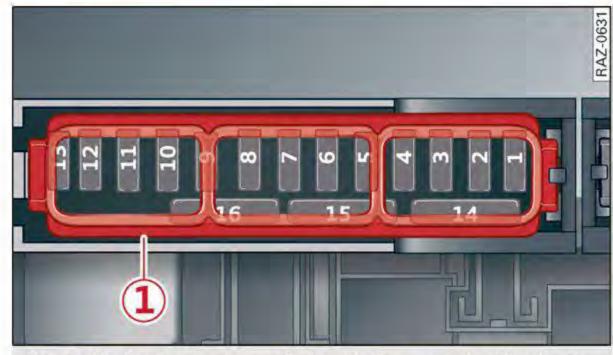


Fig. 177 Front passenger footwell: fuse panel with plastic clip

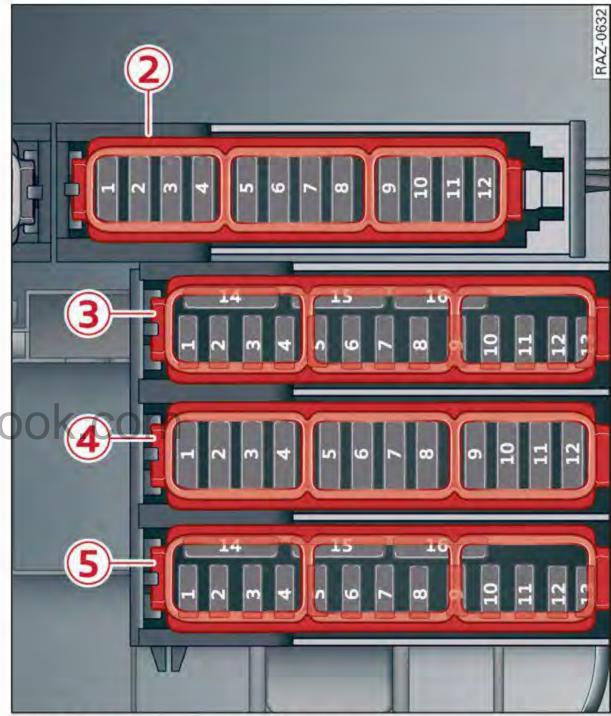


Fig. 178 Front passenger footwell: fuse panel with plastic clip

The fuse assignment on right-hand drive vehicles is a mirror image of this.

Fuse panel (1) (black)			
No. Equipment			
3	Climate control system, fragrance system, ionizer		
4	Head-up display		
5	Audi music interface, USB connection		
6	DVD drive		
7	Steering column lock		
8	Upper/lower display		

Fuse panel (1) (black)			
9 Instrument cluster			
10	Volume control		
11	Light switch, switch panels		
12	Steering column electronics		
15	Steering column adjustment		
16	Steering wheel heating		

Fuse panel ② (black)		
No.	Equipment	
1	Front seat heating	
2	Climate control system	
3	Left headlight electronics	
4	Panoramic glass roof	
5	Left front door control module	
6	Sockets	
8	Instrument panel	
9	Right headlight electronics	
10	Windshield washer system/headlight washer system	
12	Parking lock	

Fuse panel ③ (red)				
No.	Equipment			
1	Anti-theft alarm system			
2	Drive system control module			
3	Emergency call and communication control module			
4	Selector lever			
5	Horn			
6	Parking brake			
7	High-voltage battery, battery monitoring control module			
8	Roof electronics control module			
10	Airbag control module			
11	Left front lumbar support			
12	Diagnostic connection, light/rain sensor			
14	Right front door control module			
15	Climate control system compressor			
16	Climate control system blower			

No. Equipment	
2 Dight front pofety helt tonsioner	
2 Right front safety belt tensioner	
4 Left front safety belt tensioner	
5 Air suspension/suspension control	
6 Right headlight	
7 Left headlight	
8 Left rear door control module	
9 Right rear door control module	
10 Infotainment system	
11 Driver assistance systems control	module
12 Diagnostic interface	

Fuse panel (5) (black)			
No.	Equipment		
1	Seat electronics, front seat ventilation, rearview mirror, diagnostic connection		
2	Vehicle electrical system control module, diagnostic interface		
3	Exterior sound generator		
5	Electric drive system		
6	Traffic information antenna (TMC)		
7	Active accelerator pedal		
8	Night vision assist		
9	Adaptive cruise assist		
11	Driver assistance systems, intersection assistant control module		
15	USB connection		

Fuse assignment - luggage compartment

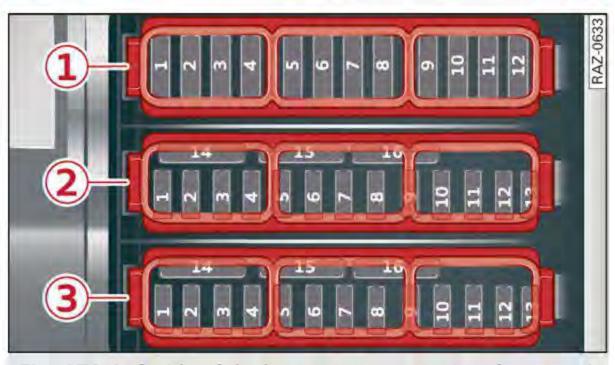


Fig. 179 Left side of the luggage compartment: fuse panel with plastic clip

Fuse	Fuse panel (1) (black)		
No.	Equipment		
1	Trailer hitch		
3	Passenger's side rear safety belt tensioner		
4	Driver's side rear safety belt tensioner		
5	Trailer hitch socket		
6	Left trailer hitch light		
8	Rear seat heating		
9	Convenience system control module, left tail light		
11	Luggage compartment lid central locking, electrical charging port door, convenience system control module		
12	Luggage compartment lid control module		

Fuse	panel ② (red)	
No.	Equipment	
	Not assigned	

Fuse	Fuse panel (3) (brown)			
No.	Equipment			
1	Driver assistance systems control module			
2	Audi phone box			
3	Right front lumbar support			
4	Side assist			
5	Service disconnect switch			
6	Tire pressure monitoring system			
7	Auxiliary climate control			
8	Exterior antenna			
9	Rear climate control system control panel			
10	TV tuner, data exchange and telematics control module			
11	Virtual exterior mirrors, convenience access and start authorization control module			
12	Garage door opener			
13	Rearview camera, peripheral cameras			
14	Convenience system control module, right tail light			
15	Right trailer hitch light			

Bulbs

Note

Your vehicle is equipped with maintenance-free headlights and tail lights. However, if a light bulb needs to be replaced, please contact an authorized Audi dealer or authorized Audi Service Facility.

book.com

Data privacy

Privacy notice

You can find information about responsibility for data protection in the MMI.

Applies to: MMI: Select on the home screen: **SET-TINGS** > **General** > **Legal notes** > **About Audi connect**.

Image recording

Surrounding area monitoring

Applies to: vehicles with surrounding area monitoring

Some vehicle functions require the vehicle's path to be detected and evaluated. This is done by cameras installed permanently on the vehicle that detect objects in the vehicle's surroundings (such as obstacles or guard rails). The live images from the cameras are transmitted to the applicable control module.

The camera images are transferred to the responsible control module for processing and may be stored, depending on vehicle equipment. The car control module analyzes the current camera image using image evaluation software. This image evaluation software detects anonymized technical measurements, such as distances to objects. The control module evaluates these technical measurements and makes it possible for the assist systems to control the vehicle as needed.

Data memories

Vehicle control modules



Fig. 180 Driver's side footwell: connection port for the On Board Diagnostic System (OBD)

Your vehicle is equipped with electronic control modules for various vehicle systems such as the airbags. These vehicle control modules store data while driving normally that is required by an authorized Audi dealer or authorized Audi Service Facility for diagnosis and repair purposes. Only certain types of data are recorded for a very short period of time if a control module has detected a system event. No noises, conversations, or images will be recorded in the vehicle.

The data may include information such as the vehicle speed, the direction of travel, and information about the brake system, or also the behavior of the restraint system in the event of an accident. The stored data can be exported and downloaded with special devices, which must be connected directly to the vehicle.

On Board Diagnostic System (OBD)

There is a diagnostic connector socket in the driver's side footwell to read out the various control modules and the event data recorder. Data regarding the function and condition of the electronic control modules is stored in the event memory. Only have an authorized Audi dealer or authorized Audi Service Facility read out and delete the event memory.

Λ

WARNING

- Incorrect use of the connection port for the On Board Diagnostic System can cause malfunctions, which can then result in accidents and serious injuries.
- Only allow an authorized Audi dealer or authorized Audi Service Facility to read out the motor data.

Crash data recorder

Event Data Recorder

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's system performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of

time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Assist system monitor

This vehicle is equipped with an Assist System Monitor (ASM). The ASM collects data that is not stored by the EDR in the event of an accident. The main task of the ASM is to make it possible to understand the role and the behavior of the assist systems in these accident situations. In addition to the data that the EDR stores, the ASM records data related to the assist systems starting several seconds before the accident or near-accident. The data collected by ASM depends on the equipment and may include the following information: status information of the assist systems (for example, if they are switched on or off, system events, etc.), control interventions (for example, by ESC, ABS, Audi pre sense*, etc.), and assist systems settings (such as speed settings).

Special devices and access to the vehicle or to the ASM are necessary in order to read the data from

the ASM memory. In addition to the vehicle manufacturer, third parties such as law enforcement authorities can also read and analyze the stored data if they have access to the vehicle or to the ASM.

Data usage

Audi can read out the information stored in the data memories or similar data, or give this information to third parties, especially in the following situations:

- If the vehicle owner or lessee agrees
- If there is an official request from the police
- If a court or authorities request it

If legally permitted, Audi can also use the data for analysis of vehicle operation and safety performance or provide this data to third parties for research purposes.

Transmitted information

Data collection

Applies to: vehicles with data collection

Depending on the country, Audi may collect data for the following purposes, for example: offer and product optimization, public safety, provision of Audi connect remote vehicle services, and adaptation to customer expectations. For example, various technical function data, environmental data, driving data, and usage data will be collected for a specific purpose and forwarded to Audi. The data will be sent from the vehicle at the time the data was collected.

Applies to: MMI: You can find additional information about data collection in the MMI. Select on the home screen: **SETTINGS** > **General** > **Legal notes** > **About Audi connect**.

If you would like to deny data transmission to Audi, contact an authorized Audi dealer or authorized Audi Service Facility for more information. You also have the option to deactivate data transmission within the privacy settings.

Privacy settings

Applies to: vehicles with Audi connect

- ► Applies to MMI: Select on the home screen: SETTINGS > Privacy settings.
- ➤ To display additional information about the privacy settings and the associated symbols in the status bar, press (i) in the MMI.

Requirement: the ignition must be switched on.

Setting the maximum privacy settings

When the Activate privacy mode function is switched on, the data connection is deactivated or sending of data is restricted, but all safety-related, legal, or contractually required Audi connect services remain activated. The majority of the Audi connect services are deactivated.

When the function is switched off, the data connection will be available in order to use Audi connect services. After switching off the **Activate privacy mode** function, check the individual data categories under *Adjusting individual privacy set*tings.

Adjusting individual privacy settings Car

In the MMI, you can adjust individually which data should be transmitted from the vehicle. If you switch on a data category, the data will be transmitted.

You can also deactivate individual services for your vehicle at my.audi.com if you are logged into the vehicle as the key user ⇒ page 30. These deactivated services will not be available in the vehicle. For additional information, visit my.audi. com. ¹⁾



Note

You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used to access the Internet through the Wi-Fi hotspot.



Tips

- The following interfaces are not affected by changes to the privacy settings: Bluetooth, Bluetooth Low Energy (BLE), Wi-Fi, Audi smartphone interface (ASI), Near Field Communication (NFC), charging communication (high-voltage system), Electronic Toll Collect (ETC), On-Board Diagnostic System (OBD) if equipped.
- If the maximum privacy settings are switched on, your vehicle may not receive certificates and security updates for establishing a secure connection, depending on vehicle equipment. In order to receive security updates and certificates, switch the maximum privacy settings off for at least ten minutes every three months. Make sure that your vehicle is connected to the Internet. A symbol in the MMI status bar indicates if the required data connection is available
 ⇒ page 21.
- If the transmission of data is limited, it will have the following effects on the exchange of data for Audi connect services and emergency calls, if equipped:
 - The emergency call function will remain available without restrictions and will continue to transmit data.
 - If an online roadside assistance call is initiated, no data will be transmitted, but a call will be made.
 - The Audi connect Stolen Vehicle Locator will remain available without restrictions and can continue to transmit data. Please note that the Audi connect Stolen Vehicle Locator is not displayed in the MMI under additional information about privacy settings.
 - Online Car Care will remain available without restrictions and continue to transmit data, as long as the vehicle's embedded SIM card is connected to the mobile phone network.

4KE012721BH

- If the Geofencing Alert, Speed Alert, and/or Valet Alert services have been activated by the key user, then they will remain available without restrictions and continue to transmit data.
- Stored destinations (favorites, last destinations) are only stored in the vehicle. If you allow transmission of data again, these destinations will be synchronized via the myAudi account. To prevent synchronization of destinations, delete the destinations before you allow data to be transmitted again.

tion can be found in the Application's Privacy Statement.

For additional information about the privacy practices relating to Audi connect, myAudi, or other websites, applications or online services as well as your obligations with respect to using these services, and for additional information regarding Audi connect terms and conditions, please visit your Audi national/sales region website at www.audi.com.

Audi connect

Applies to: vehicles with Audi connect Infotainment

Audi collects, uses, stores and shares your personal information, such as contact data, vehicle data, usage data, driving data and precise geolocation, in order to provide you with the products and services you have purchased or requested, and for a number of other purposes, for example, to track quality issues, to performance and safety, to meet our internal compliance or legatre to be complianted and potential customers. For a more complete list of the data we collect, how we use it and with whom we share it, please visit your Audi national/sales region website at www.audi.com.

The collection, use and sharing may vary depending on your model and model year, your subscription status, or the service offering. For example, collection, use and sharing may vary between Audi connect services, if you have designated a key user, or if you are driving a model equipped with persistent data logging. Please review the complete Privacy Statement to understand our data handling practices with respect to a particular service.

You can find additional information about our data privacy practices in your MMI.

► Applies to: MMI: On the home screen, select: SETTINGS > General > Legal notes > About Audi connect.

Information about our privacy practices in conjunction with the mobile Audi connect applica-

Accessories and technical changes

Warranty

Your vehicle is covered by various warranties:

- New Vehicle Limited Warranty
- Limited Warranty Against Corrosion Perforation
- Applies to: USA models: Kansas Safety Belt Limited Warranty

You can find detailed information in your Warranty & Maintenance Booklet.

Audi Literature Shop

Service information is made available as soon as possible after a model is introduced and can be ordered in the Audi Literature Shop: http://literature.audiusa.com

Driving in other countries

Canada require motor vehicles to comply with emissions regulations and safety standards. Therefore, vehicles that were produced for the U.S. and Canadian markets are different from vehicles produced for other countries.

If you plan to use your vehicle outside of the United States or Canada, it is possible that:

- Proper maintenance and repair work may not be possible because special service equipment, tools, or measuring devices needed for your vehicle may not be available.
- Replacement parts may not always be available.
- Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries.



Note

Audi is not liable for damage to the vehicle resulting from these country-specific differences.

Maintenance, repairs, and technical modifications

Observe the safety precautions \Rightarrow page 238, General information and \Rightarrow page 280, Raising the vehicle.

General information

Due to the increasing complexity of technology in these vehicles, as well as the safety and environmental standards that apply, you can only perform a very limited amount of repairs and modifications to the vehicle yourself.

Proof of maintenance work may be required to submit a claim within the warranty period.

We recommend that you have your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and that Audi Genuine Parts and Audi Genuine Accessories are used. This helps to ensure that your vehicle's functionality, performance, and safety are not impaired.

Maintenance and repairs

Your vehicle was designed to help keep maintenance requirements to a minimum. Some regular maintenance is required to help ensure that your vehicle runs in a safe, economical, and reliable manner. Please refer to your Warranty & Maintenance Booklet for more detailed information about vehicle maintenance.

When operating the vehicle under more extreme operating conditions, for example when outside temperatures are very low or in very dusty environments, certain maintenance should be performed between the specified intervals.

Usually maintenance and repair work requires special tools, measuring devices, and other equipment that is available to trained vehicle technicians in order to help ensure that your vehicle and all of its systems operate correctly, reliably, and safely. Performing work on the vehicle incorrectly can impair the operation and reliability of your vehicle and may void one or more of your vehicle's warranties.

Interference with electronic components, their software, the wiring, and data transfer may cause malfunctions. Because of the way electronic components are interconnected, such malfunctions can also impair systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and increased wear of vehicle components.

Some convenience functions, such as the convenience turn signal function, individual door opening function, and displays, can be reprogrammed using special workshop equipment. If functions are reprogrammed, the information and descriptions about these functions in this Owner's Manual may no longer apply to the changed functions. Audi recommends that an authorized Audi dealer or authorized Audi Service Facility perform and verify any reprogramming procedures.



WARNING

Maintenance work, repairs, or technical modifications to the vehicle (such as installing additional equipment) that is not performed and correctly can cause serious injuries and increase the risk of an accident.

Λ

WARNING

The front compartment in any vehicle is a potentially dangerous area and can cause serious personal injury.

- Always use extreme caution when performing any work in the front compartment. Always follow commonly accepted safety practices and use common sense. Never risk personal injury.
- Never perform any work in the front compartment unless you know exactly how to carry out the job and have the correct technical information and the correct tools and equipment.
- If you are uncertain about what to do, have the work performed by an authorized Audi dealer, an authorized Audi Service Facility, or another qualified workshop. Serious personal injury may result from improperly performed work.

Note

- Maintenance work, repairs, or technical modifications to the vehicle (such as installing additional equipment) that is not performed correctly can cause vehicle damage.
- The New Vehicle Limited Warranty does not cover damage or malfunctions if the recommended intended use of the vehicle and maintenance measures listed in the Audi Owner's Manual and the Warranty & Maintenance Booklet were not followed.
- If emergency repairs must be performed, take your vehicle to an authorized Audi dealer or authorized Audi Service Facility as soon as possible.
- Audi is not liable for damage to the vehicle resulting from failure to comply with these guidelines.

(

For the sake of the environment

- Regular maintenance can help protect the environment.
- Technical modifications to the vehicle may have a negative affect on energy use.



For the sake of the environment

Certain components in your vehicle such as undeployed airbag modules, pretensioners and remote control batteries may contain Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.



Tips

Because of your vehicle's aluminum body design, all service and repair procedures affecting the body should be performed by an authorized Audi dealer or authorized Audi Service Facility, who will perform the work according to Audi factory specifications. Only Audi

Genuine Parts are used when Audi experts perform repair or service procedures. Failure to use Audi Genuine Parts or Audi Genuine Accessories or performing repairs incorrectly may result in severe vehicle damage, such as corrosion.

Accessories and parts

Consult with an authorized Audi dealer or authorized Audi Service Facility before purchasing accessories or replacement parts. Audi recommends having your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and using Audi Genuine Parts and Audi Genuine Accessories.

Audi does not endorse the use of products and accessories that it has not evaluated, even if the product is approved by a certified testing agency or government agency.

Λ

WARNING

- Installing unapproved accessories or incorrect replacement parts can cause vehicle damage and can increase the risk of an accident.
- Never attach accessories, such as telephone holders or cup holders, to the airbag covers or within the airbag deployment zone, because this increases the risk of injury if the airbag deploys.
- On vehicles that have factory-installed license plate brackets on the front of the vehicle, the brackets may only be replaced with ones that are the same size and made of the same material. Do not install any license plate brackets on the front of vehicles that do not have factory-installed brackets. Otherwise, the function of the system could be impaired.

(!)

Note

A correctly-installed exterior antenna is required for operating radio equipment in the vehicle. Otherwise, the increased electromagnetic waves can cause malfunctions in the vehicle. Observe the regulations in the country where the vehicle is being operated and the

instructions from the radio equipment manufacturer.

Reporting Safety Defects Applicable to U.S.A.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying

Audi of America, Inc. 2200 Ferdinand Porsche Drive Herndon, VA 20171

If NHTSA receives similar complaints it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Audi of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1–888–327–4236 (TTY: 1–800–424–9153); go to http://www.safercar.gov;

or write to:

Administrator NHTSA 1200 New Jersey Ave., S.E. West Building Washington, DC 20590.

You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

Applicable to Canada

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada,

Defect Investigations and Recallsobook.com You should also notify Audi Canada.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at:

Tel.: 1-800-333-0510 or

Tel.: 1-819-994-3328 (Ottawa region and from other countries)

TTY for hearing impaired:

1-888-675-6863

or contact Transport Canada by mail at:

Transport Canada
Motor Vehicle Safety Investigations Laboratory
80 Noel Street
Gatineau, QC
J8Z 0A1

For additional road safety information, please visit the Road Safety website at:

English:

http://www.tc.gc.ca/eng/ motorvehiclesafety/menu.htm

French:

http://www.tc.gc.ca/fra/ securiteautomobile/menu.htm

4KE012721BH

Technical data

Identification data

Vehicle data label

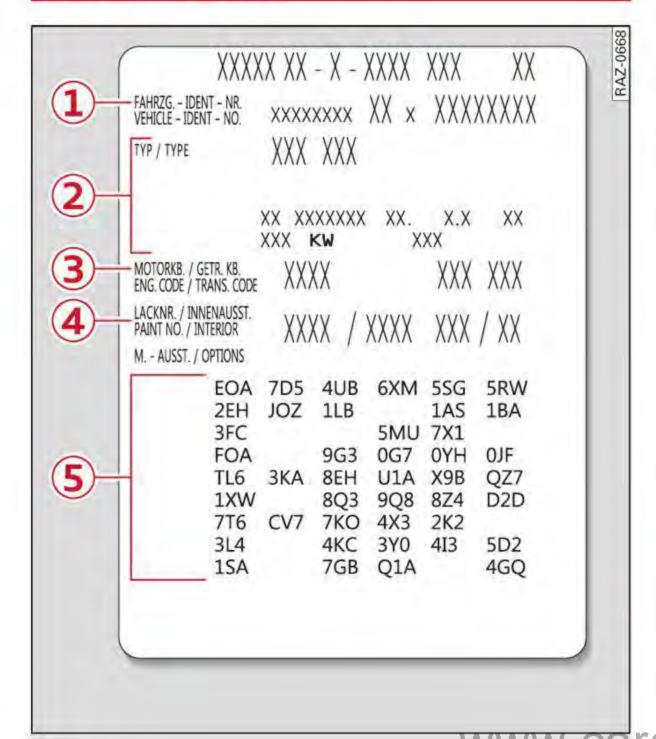


Fig. 181 Vehicle identification label

The vehicle identification label \Rightarrow *fig. 181* is located in the luggage compartment under the cargo floor cover.

The vehicle identification label information can also be found in the Warranty & Maintenance booklet.

The sticker contains the following vehicle data:

- Vehicle Identification Number (VIN)
- (2) Vehicle type, motor output, transmission
- Motor and transmission codes
- (4) Paint and interior codes
- (5) Optional equipment numbers

Vehicle identification number (VIN)

The VIN is located in the following areas:

- Applies to MMI: Select on the home screen: VE-HICLE > Settings & Service > Vehicle information.
- On the vehicle identification label
- At the front behind the windshield
- Stamped into the front compartment on the right side

Notes about technical data

The values may vary based on special equipment as well as market-specific equipment and measuring methods.

Please note that the specifications listed in the vehicle documentation always take precedence.



Tips

Any technical data that is missing was not available at the time of printing.

Vehicle data

Dimensions

	Length (in (mm))	Width (in (mm))	Width across the mirrors (in (mm))	Height at curb weight (in (mm))
e-tron	193.0 (4,901)	76.2 (1,935)	80.4 (2,043) – 86.2 (2,189)	65.1 (1,653)
e-tron S	193.0 (4,902)	77.8 (1976)	80.4 (2,043) - 86.2 (2,189)	65.5 (1,664)
e-tron Sportback	193.0 (4,901)	76.2 (1,935)	80.4 (2,043) - 86.2 (2,189)	65.0 (1,651) - 65.1 (1,653)
e-tron Sportback S	193.0 (4,902)	77.8 (1,976)	80.4 (2,043) - 86.2 (2,189)	65.0 (1,650)

Capacities

	Approximate capaci- ties
Windshield and headlight washer system*	6.3 qt (6 liters)

A/C system refrigerant oil

The exact type and amount of refrigerant oil in the A/C system is specified on the sticker on the refrigerant compressor.

	Approximate capacities	Tolerance
Refrigerant oil	220 g	+/- 10 g

Weights



Fig. 182 Safety certificate

Gross Vehicle Weight Rating (GVWR)

The maximum permitted total weight ① of the vehicle is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Gross Axle Weight Rating (GAWR)

The maximum permitted load on the front axle 2 or the rear axle 3 is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Load

The maximum permitted load is listed on the tire pressure label on the driver's door pillar.

Roof load

The maximum permitted roof load is 165 lbs (75 kg).

Trailer load

	Trailer with brakes up to 12% incline	Tongue weight on trailer ball hitch
e-tron, e-tron Sportback	4,000 lbs (1,800 kg)	400 lbs (180 kg)
e-tron S, e-tron Sportback S	3,307 lbs (1,500 kg)	331 lbs (150 kg)

Other information

Online Car Care

Applies to: vehicles with Online Car Care

If new messages from Online Car Care are available, they will be displayed in the MMI when you switch on the ignition.

▶ Applies to: MMI: To access Online Car Care messages at a later time, select on the home screen: VEHICLE > Settings & Service > Online Car Care.

Special service events, service measures, and recalls regarding your vehicle will be displayed via Online Car Care.



WARNING

- Always follow the information found in ⇒ \(\text{\Lambda}\)
 in General information on page 193.
- Recalls by the manufacturer must be performed. Failing to adhere to this requirement can void the vehicle's operating license. Failing to perform measures can result in impaired functionality, which increases the risk of an accident.



Note

- Always follow the information found in ⇒ ①
 in General information on page 193.
- Recalls by the manufacturer must be performed. If they are not, there is a risk of vehicle damage.

Brands and licenses

This manual does not contain any symbols, such as ® or ™, to identify trademarks or registered trademarks. However, the absence of these symbols does not constitute a waiver of any rights associated with these names.

Apple, iPhone, iPod touch, Apple CarPlay, Lightning, and iTunes Radio are trademarks of Apple Inc.

Other product and manufacturer names may be trademarks of their respective owners.

Declaration of compliance for telecommunications equipment and electronic systems

Your vehicle may be equipped with various radio systems, depending on vehicle equipment. The manufacturer is not liable for radio malfunctions that are caused by unauthorized changes to the equipment.

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-Gen

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RSS 102

Radiofrequency radiation exposure Information: This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm (8 inches) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Class B devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 WWW.Carobook.com
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Integrated Toll Module* - FCC (USA) and ISED (Canada)

This device complies with FCC rules part 90 and Innovation, Science, and Economic Development Canada RSS-137. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. WARNING: The transmitter has been tested and complies with FCC and ISED rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the spe-

cific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm (8 inches) from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.



Tips

Additional information or supplements about the radio systems based on the vehicle equipment and country can be found on the following website: www.audi.com/generalinfo

4KE012721BH

A	AQI
A/C cooling mode	refer to Air quality indicator 89
A/C system refrigerant oil	Aspect ratio
Accelerator pedal	Video
also refer to Accelerator pedal	ASR
Accessories	refer to Anti-Slip Regulation 109
	Audi adaptive light 50
Active combination filter	Audi connect
Adaptive cruise assist	refer to connect
Cleaning the sensors	Audi drive select
Adaptive cruise control Predictive control	Audi e-tron compact charging system 123
	Adjusting the charging power level 124
Adaptive dampers	Changing or attaching the power cable 128
Adaptive speed assist	Securing
refer to Adaptive cruise assist	Status and malfunction indicators 124
Adjusting the air distribution	Audi music interface
Adjusting the brightness	Audio files
Adjusting the sound	Audi phone box
Adjusting the temperature 87	Audi pre sense
Adjusting the vents	Messages
Adjusting the volume 29	Audi pre sense front
Adjusting the volume (announcements) 233	Audi smartphone interface 230
Adjusting the welcome sound	Legal information
Airbag system	
Air quality index 89	refer to Instrument cluster
Air quality indicator 89	AUTO
Air suspension	Automatic headlights 50
Alarm system	Climate control system
refer to Anti-theft alarm system	Auto Lock (central locking)
Alignment pin (changing the wheel) 276	Automatic climate control system
All-weather lights 50	refer to Climate control system 86
All season tires	Automatic luggage compartment lid 41, 42
All wheel drive	Automatic wipe/wash system 56
<i>refer to</i> quattro	Auxiliary climate control 90
Amazon Alexa integration	Average consumption
Media playback	Average speed
AMI	
refer to Audi music interface 222, 223	B
Android Auto	Band
refer to Audi smartphone interface 230	refer to Frequency band 214
Anti-lock braking system 109	Battery
Anti-Slip Regulation	Charge level display
Anti-theft alarm system	Charging (12 volt vehicle battery) 245
Anti-theft wheel bolts 279	High-voltage battery
Apple CarPlay	Replacing
refer to Audi smartphone interface 230	

Closing	Convenience key
Automatic luggage compartment lid 41	Convenience closing 45
Convenience closing 45	also refer to Vehicle key
Hood	Convenience opening and closing
Luggage compartment lid 41	Windows or panoramic glass roof 45
Luggage compartment lid with foot motion . 42	Cooling mode
Panoramic glass roof	Cooling system
Sunshade (roof)	Coolant
Windows	Coolant level
Closing aid (power closing doors)	Cornering light
Cockpit dimming 54	Cross traffic assist (intersection assistant) 171
Cockpit (overview) 6	Cruise control system
Collapsible spare tire	Cup holders
Collapsible tire	Current consumption
refer to Collapsible spare tire 282	Customer information
Color code	Customer measures
Comfort auxiliary climate control 91	Customer measures
Coming home/Leaving home	
refer to Entry/exit lighting 52	D
Coming to a stop	Data module
Compartments	Serial number (IMEI) 190
Compass in the mirror	Data plans
Compliance	Data Privacy
Conference call	Date K. CO.M
Configuration wizard	Setting
connect	Daytime running lights 50
Data plans	Declaration of compliance 300
Data Privacy	Demo mode
Emergency call	refer to Presentation mode 212
Infotainment	Determining correct load limit 261
Infotainment services 194	Device overview
Online roadside assistance 199	Digital compass
Vehicle control services 196	Dimensions
Connected devices	Dimming the exterior mirrors
Connections	Dimming the rearview mirror
refer to Media	Directory
Consumer information 294	Business card
Consumption	Display
Reducing	Cleaning
Consumption (energy)	Disposal
Contacts	Distance
Importing and exporting 190	Distance warning
Updating in the MMI 190	Doors
also refer to Directory	Child safety lock
	Door contact switch
	A CONTRACTOR OF THE PROPERTY O

File formats (media drives) 228	GVWR
Fog (windows)	refer to Gross Vehicle Weight
Folding the center armrest 84	Rating (GVWR)
Folding the rear seats 84	
Footwell temperature 89	H
For the sake of the environment	Hands-free
Leaks	
Fragrance	Hands Free Profile
Free search	Head-up display
Radio	Adjusting the brightness 54
Free text search	Adjusting the brightness
Media	Operating
Freeze protection	Headlight range control 50
Coolant	Headlights
Windshield washer system 245	Cleaning
Frequency band	Headlight range control
also refer to Frequency band	Washer system
Front center armrest 64	Head restraints
Front collision warning	Adjusting 65
refer to Audi pre sense front 164	Removing and installing 65
Front compartment	Heated rear window
Overview	
	Heated steering wheel
Storage compartment	Heating COM 86 HFP
Front compartment storage compartment 81	refer to Hands Free Profile
Front passenger's seat adjustment	High-voltage battery
Front	Advanced charging settings 120
Rear	Audi e-tron compact charging system 123
Front wiper blades	Charging
Changing	Charging display on the vehicle 118
Cleaning	Charging equipment
Functions on demand	Charging methods
Functions that require a license 195	Charging ports on the vehicle 113
also refer to Functions on demand 195	Charging time
	Connecting the charging cable 116
G	Messages while driving
	Not running for long periods of time 115
Garage door opener	Opening the charging port door 116
Garment hooks	Quick charging
GAWR	Setting the charging target
refer to Gross Axle Weight Rating (GAWR) . 299	Setting the timer
Gear	Transporting charging equipment 123
Glossary of tire and loading terminology 250	High-voltage system
Glove compartment	High beams
Gross Axle Weight Rating (GAWR) 299	High beam assistant
Gross Vehicle Weight Rating (GVWR) 299	Highway lights
	Hill descent assist

Software licenses	Manual operation
Version information	Charging connector
License plate bracket	Charging port door
Lifting points (vehicle jack) 280	Luggage compartment 42
Light/rain sensor	Map
Headlights 50	Changing the map scale
Intermittent mode (windshield wipers) 56	Display
Lighting	Operating
Exterior	Selecting a destination
Interior	MAP
Lights	refer to Message Access Profile 191
Lights on the charging port	Map preview
refer to Charging display	Map update
Listening to music	Online
refer to Media	USB connection
Load	Massage function 62
Local users	Front
Locking and unlocking	Mechanical key
By remote control	Media
Using the lock cylinder	Supported formats
With the convenience key	Media center
Low beam headlights 50	Memory function 69
	Menu language
LTE \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	refer to Setting the language
	Menu paths
Luggage	
Luggage compartment lid 40	Message Access Profile
Luggage compartment 81	Messages
Cargo floor	Mirror compass
Cover	Mirrors
Increasing the size	Adjusting exterior mirrors 54
Power sources	Dimming
also refer to Luggage compartment 81	Vanity mirror
Luggage compartment lid 40	MMI
Closing button	refer to Multi Media Interface 18
General information	Mobile device
Mechanically unlocking 43	refer to Telephone
Opening and closing 41	Mobile device reminder signal 186
Opening and closing with foot motion 42	Motor
Power opening and closing 41	refer to Drive system
Lumbar support 62	Motor compartment
	refer to Front compartment 238
M	Mountain passes
Maintenance	Mountain roads
Maintenance intervals	Multifunction steering wheel
	Buttons
	Operating
Manually releasing the charging port door 121	-p

Parking aid	pre sense
Adjusting the volume 174	refer to Audi pre sense 164
Automatic activation	Presentation mode 213
Cleaning the sensors and camera 271	Presets
Parking aid plus	Radio
Peripheral cameras 175	Presets list
Rear cross-traffic assist 180	refer to Presets
Rearview camera	Pressure
Trailer view	Tire pressure monitoring system 265, 266
Parking and maneuvering 173	Tires
Parking brake	Profile picture
refer to Electromechanical parking brake . 101	Protecting
Parking heater	Pyrotechnic elements
refer to Auxiliary climate control 90	Tyroteenine eterneries
Parking lights 50	
Particulate matter sensor 89	Q
Pedals	quattro
Pedestrian detection 144	Selective wheel torque control 110
Perchlorate	Quick charging
Peripheral cameras	
Phone	R
Connecting a second mobile device 183	Radio
Disconnecting a mobile device 184	Radio text
그리고 나를 하지만 어느 아니는 이 사람들이 되는 것이 없었다면 하는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없다면 하는 것이다. 그 사람들이 없는 것이다.	Distation list M
<i>refer to</i> Directory	Radio communications equipment 296
PIN	Radio equipment
4-digit myAudi PIN	Radio Standards Specification (RSS) 300
Protection	Rail carrier
Playback	
Media	Rain/light sensor
Radio	Headlights
Podcast	the second secon
refer to Online radio 218	Random
Polishing	refer to Shuffle
Pollen filter	Range
refer to Active combination filter 86, 89	Range mode
Power closing (doors)	Range monitor
Power meter	Range potential
Power sources	Range (electric)
Power windows	Reading lights
Malfunction	Rear cross-traffic assist
Power windows malfunction	Rear lid
	refer to Luggage compartment lid 41
Predictive massages 150	Rearview camera
Predictive messages	Rear window defogger
Predictive route guidance 207	

Radio	19 Steering
Sound	
System	33 also refer to Steering
Telephone	90 Steering lock
Text messages	
Time zone	
Wi-Fi hotspot	그렇게 하는 사람들이 가면 하면 하는 것이 살아 있다. 그런 그렇게 되었다면 하는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없다면 하는 것이 없다.
Setting the charging target 1	그렇게 되는 사람들이 아니는 아래에 가는 아내는 아내는 아내는 아내는 아내는 아내는 아내는 것이 없었다.
Setting the language	Steps for determining correct load limit 261
Setting the time	프로마스 이 그렇게 되는 얼마 얼마를 가지 않아야 하면 하는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없는 것이 없는 것이다.
Shift paddles	Stopping
Adjusting recuperation	
Ship carrier	
Shop	
Shortcut	Streaming
refer to Shortcuts	
Shortcuts	
Shuffle	
Side assist	[위 - 18] 18 [기타] : 18 [인 : 18] - 18 [인 : 18]
SIM card	94 Sun visors
Sliding/tilting sunroof refer to Panoramic glass roof	Suspension
	aroswapping Calls 189
refer to Presets 2	
Smartphone	Symbols
refer to Telephone	
Snow chains	그리는 그 그 가입을 가져가 하루 때문에 가려면 그렇게 되었습니다. 그는 그를 가지 않는 것이라고 있다면요.
Socket	Navigation
refer to Power sources	B. B. C. C. C
Software information	also refer to Indicator lights
Legal information	COMPACE TO THE PARTY OF THE PAR
Software version (MMI)	System settings
Version information	
Sound	
refer to Adjusting the sound 23	2.2
	Tall lights
Speed limit information	Cleaning
refer to Traffic sign recognition 14	Technical data
Speed limits	Technical modifications 294
refer to Traffic sign recognition 14	rechnical product information 300
Speedometer	retephone
Speed warning system	Accepting/ending a catt
Starting climate control after unlocking 9	Addi priorie box
Starting to drive	Charging the battery (USB)
	Charging the battery (wireless) 185
	Connecting a mobile phone 182

Vehicle	Wheel wrench
Care/cleaning	Wi-Fi
Dimensions	Hotspot settings
Identification data 298	Using a hotspot
Out of service	Wild animal recognition
Parking	Window and mirror heating 91
Raising	Windows
Securing	Child safety lock
Starting	Cleaning and removing ice 272
Transport	Convenience opening and closing 45
Unlocking and locking	Defrosting
Vehicle care	Opening and closing
Vehicle control services 196	Power windows
Vehicle data label 298	Windshield
Vehicle identification number 298	Cleaning
Vehicle jack	also refer to Windshield
Lifting points	Windshield washer system 56, 245
Tire change mode 278	Reservoir capacity 299
Vehicle key	Windshield wipers
Vehicle sound	Winter operation
Vehicle tool kit	Auxiliary climate control 90
Ventilation	Car washes
VIEW button	Cooling system
Voicemail WWW_0881	Operosting the windows
Voice recognition system	Rear window defogger
External	Removing ice from windows 272
Operating	Seat heating
operating	Snow chains
W	Steering wheel heating 90
	Tires
Wall mount clip	Vehicle battery (12 volt)
Warning lights	Windshield washer system 245
refer to Indicator lights	Winter tires
Washing matte finish paint 270	Wireless Android Auto
Wave band	refer to Audi smartphone interface 230
refer to Frequency band 214	Wireless Apple CarPlay
Weights	refer to Audi smartphone interface 230
Wheel bolts	Work
anti-theft	refer to Business address 208
Tightening specification 281	
Wheels	
Cleaning	
Glossary of tire and loading terminology 250	
Loose wheel warning 262	
Replacing	
Tire pressure monitoring system 265, 266	
Tires and vehicle load limits 259	

www.carobook.com

These instructions may not be reproduced or translated in whole or in part without written consent of AUDI AG. All rights reserved by AUDI AG.



For the sake of the environment

Printed on eco-friendly paper (bleached without chlorine, recyclable).

www.carobook.com

Owner's Manual English North America 06.2021 4KE012721BH



4KE012721BH

www.audi.com